

## **Content**

<b>1</b>	<b>General Information.....</b>	<b>3</b>
1.1	Profile.....	3
1.2	Safety Information .....	3
1.3	Safety warning and Attentions .....	3
<b>2</b>	<b>Your phone.....</b>	<b>6</b>
2.1	Functions of Keys .....	6
2.2	Technical specifications .....	8
<b>3</b>	<b>Getting started.....</b>	<b>8</b>
3.1	Installing the UIM Cards and the Battery .....	8
3.2	Installing T-Flash Card.....	11
3.3	Charging the Battery .....	12
3.4	Powering On/Off the Mobile Phone .....	14
3.5	Linking to the Network.....	14
3.6	Dialing Calls .....	15
3.7	Using the Headset .....	16

<b>4</b>	<b>Input method .....</b>	<b>16</b>
4.1	Icons for Input Methods.....	16
4.2	Numeric Input .....	16
4.3	Inserting a Symbol .....	17
<b>5</b>	<b>Using the menu.....</b>	<b>17</b>
5.1	Media Gallery .....	17
5.2	Contacts.....	18
5.3	Tools.....	20
5.4	Recent calls .....	21
5.5	Messages.....	22
5.6	Multimedia.....	26
5.7	Scheduler.....	27
5.8	Settings.....	28
5.9	Games .....	31
<b>6</b>	<b>Appendix .....</b>	<b>32</b>

# **1 General Information**

## **1.1 Profile**

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

## **1.2 Safety Information**

If your phone has lost or been stolen, notify the telecommunication office the UIM card is disabled (network support is required). This can avoid economic loss caused by unauthorized use.

Please take measures as following to avoid your phone being unauthorized use:

- Set PIN code of UIM card
- Set phone password

## **1.3 Safety warning and Attentions**

### **Safety warning**

#### **➤ ROAD SAFETY COMES FIRST**

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while driving.

In some countries, dialing or receiving calls while driving is illegal!

➤ **SWITCH OFF IN AIRCRAFT**

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky.

Please make sure that your mobile phone is powered off in flight.

➤ **SWITCH OFF BEFORE ENTERING RISKY AREAS**

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

➤ **OBSERVE ALL SPECIAL REGULATIONS**

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

➤ **INTERFERENCE**

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

➤ **QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violates the warranty rules.

➤ **ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries.

➤ **USE SENSIBLY**

Use only in a normal and proper manner.

➤ **EMERGENCY CALLS**

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

*Note: Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications such as first aid. Please consult the local network operator.*

#### Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

- Keep the mobile phone and all its fittings beyond children's reach.
- Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.
- Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile

- phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

## 2 Your phone

REQUIRED TO HAVE THE PICTURE

### 2.1 Functions of Keys

The mobile phone provides the following keys:

◆ Dial key

Press it to originate a call on UIM card by entering the called number or selecting a contact from the phonebook; or press it to receive an incoming call; or press it in standby state to show the latest call records

◆ End key

Press it to end a call being dialed or end an ongoing call; or press it to exit the menu and return to the standby state; or hold it for two or three seconds to power on or off the mobile phone.

◆ Direction key

Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate. In standby state, press a direction key to enter the specified function page.

- ◆ OK key

Press it to confirm your selection. In idle screen, pressing it will enter the main menu.

- ◆ Left and right soft key

Their functions are in correspondent with the display in the lowest of screen.

- ◆ Delete key

Press it to delete a character before cursor.

- ◆ Linefeed

This key helps to switch to another line in the edit interface.

- ◆ Input method switch key

Press it to switch between input methods in edit interface.

- ◆ Shift key

Press this key to switch between lower case and upper case.

- ◆ Alt key

Press it in the edit interface to switch between characters and symbols in the keypad.

- ◆ Space key

Press it in the edit interface to get a blank.

- ◆ Sym key

Press it in the edit interface to input a symbol.

- ◆ Up arrow key

Press it in the idle screen to access media gallery interface.

- ◆ Down arrow key

Press it in the idle screen to access Alarm interface.

◆ **Number keys, letters**

Press number keys 1 through 9 in input/edit state to input numbers and characters;

Press letter keys in the edit interface to input corresponding letters.

## 2.2 Technical specifications

Battery capacity:

Battery Voltage: 3.7V

Charging Limited Voltage: 4.2V

Standby Time (Hour): about 120 up to 200

Talking Time (Hour): about 4 up to 8.5

## 3 Getting started

### 3.1 Installing the UIM Cards and the Battery

#### REQUIRED PIC

An UIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

*After powering off your mobile phone, wait for a few seconds before removing or inserting an UIM card.*

*Exercise caution when operating an UIM card, as friction or bending will damage the UIM card.*

*Properly keep the mobile phone and its fittings such as the UIM cards beyond children's reach.*

#### Installation

- ◆ Hold the End key for a while to power off the mobile phone
- ◆ Push the back cover above the battery and remove it.
- ◆ Pull the left battery buckle outward and then lift the battery away.
- ◆ Insert the UIM card into the UIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing download, till the UIM card cannot be further pushed in.
- ◆ Aim the positive pole and negative pole of the battery at the battery connector of the mobile phone, and press the left of the battery to install the battery into the battery tank.

#### Using code

The mobile phone and the UIM cards support sorts of passwords, in order to prevent the phone and the UIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK key. If you input a wrong code, press the Right soft key to clear it and then input the correct code.

#### ◆ Phone lock code

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 0000 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the

mobile phone.

#### ◆ PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your UIM card from being used by unauthorized people. In general, the PIN is supplied with UIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The UIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the UIM card.
- Then input the new PIN and press the OK key.
- Input the new PIN again and then press the OK key.
- If the input PUK is correct, the UIM card will be unlocked and the PIN will be reset.

*Note: The UIM card will be locked if you input wrong PIN code for three times. To unlock the UIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.*

#### ◆ PUK

The PUK code (Personal Unlocking Key, 8digits) is required to change a blocked PIN. It is supplied with UIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, UIM card will be invalid. Please contact the network operator to replace the UIM card.

#### ◆ PIN2

The PIN2 code (4 to 8 digits), supplied with UIM card, is required to access some functions such as “call costs setup” and “fixed dialing setup”. Please contact the network operator to verify whether your UIM card supports these functions. If you input wrong PIN2 for three times, the PIN2 will be locked. To unlock

the PIN2, input the correct PUK2 as follows:

- Input the correct PUK2 according to the screen prompt to unlock the PIN2.
- Then input the new PIN2 and press the OK key.
- Input the new PIN2 again and then press the OK key.

#### ◆ **PUK2**

The PUK2 code (Personal Unlocking Key2, 8digits), supplied with UIM card by the vendor. If not, contact the network operator. If you input wrong PUK2 for ten times, the PIN2 will be invalid and the corresponding functions cannot be used. Please contact the network operator to replace the UIM card.

#### ◆ **Barring code**

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

### **3.2 Installing T-Flash Card**

#### REQUIRED PICTU

The T-Flash card is a pluggable mobile storage card inside the mobile phone.

To install the T-Flash card, open its latch, place its indented side downward, insert the card into the card slot, and then close the latch.

Note: The T-Flash card is a miniature object. Keep it out of the reach of children for fear that children swallow it!

### **3.3 Charging the Battery**

#### REQUIRED PICTU

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked.

Battery level indication:

- ◆ Your mobile phone can monitor and display the battery state.
- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- ◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

Using a travel adapter:

- ◆ Install the battery into the mobile phone before charging the battery.
- ◆ Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- ◆ Insert the plug of the travel charger to an appropriate power outlet.
- ◆ During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.
- ◆ It is normal of the battery to become hot during the charging period.

- ◆ The battery icon does no longer flicker when the charging process ends.

Note:

*Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.*

*Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.*

#### Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- ◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- ◆ Power off the mobile phone before removing the battery.
- ◆ The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery is in charging status.
- ◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- ◆ Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.

- ◆ The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

*Note: To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.*

*Warning: Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!*

### **3.4 Powering On/Off the Mobile Phone**

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to input the phone lock code. The original code is 0000.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening UIM card.

Access the idle screen.

To power off the mobile phone, hold the End key for a while.

### **3.5 Linking to the Network**

After the UIM card and the mobile phone are unlocked successfully, the mobile phone would search for

an available network automatically. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

### **3.6 Dialing Calls**

In the idle screen, press number keys to input the area code and the telephone number, and then press the Dial key to dial a call. To end the call, press the End key.

#### **◆ Dialing a call to a number in the phonebook**

Enter the phonebook and use the up or down direction keys to find the telephone number you want to call.

Press the Dial key. The mobile phone automatically dials the chosen telephone number.

#### **◆ Redialing the last number**

In the idle screen, press the dial key to show the dialed calls.

Press the up or down direction keys to select a number you want to dial and then press the Dial key.

#### **◆ Adapting volume**

During a conversation, you can press the Up or Down direction keys to tune the sound volume.

#### **◆ Answering incoming calls**

Press the Dial key or the Left soft key to answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the End key.

*Note: If the caller can be identified, the mobile phone will present the calling number. If the calling number*

*exists in the phonebook, the mobile phone will present both the name and the phone number of the caller. If the caller cannot be identified, the mobile phone will present the calling number only. You can answer an incoming call when using a function list or browsing the phonebook.*

### **3.7 Using the Headset**

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

## **4 Input method**

This mobile phone provides multiple input methods, including numeric input, English input in both upper and lower case. You can use these input methods when editing the phonebook, short messages or files.

### **4.1 Icons for Input Methods**

After you enter an edit window such as a window for editing the phonebook or short messages, an icon is displayed to indicate the current input method:

Numeric input: “123”

English input in upper case: “ABC”

English input in lower case: “abc”

### **4.2 Numeric Input**

You can input numbers with the numeric input method. Press a number key to input the corresponding

number.

#### **4.3 Inserting a Symbol**

Press **sym** key to enter the **Select symbol** interface, use direction keys to select a symbol you want.

### **5 Using the menu**

#### **5.1 Media Gallery**

##### **Phone**

Select to enter the root directory of the phone.

##### **Memory card**

Select to enter the root directory of the memory card if users have inserted a valid memory card.

##### **Memory status**

Show the phone and the card memory status.

##### **USB connection mode**

Connect to PC as a u-disk with USB cable if users have inserted a valid memory card.

## **5.2 Contacts**

The mobile phone can store up to 500 telephone numbers. The number of telephone numbers that an UIM card can store depends on the storage capacity of the UIM card. The telephone numbers stored in the mobile phone and in the UIM cards form a phonebook.

### **Contacts**

After selecting a telephone number in the phonebook, select **Options** to perform the following operations:

- ◆ **View:** View the content of the telephone number.
- ◆ **Edit:** Edit the telephone number.
- ◆ **Call:** Call the number you've selected.
- ◆ **Add new:** This function enables you to add contacts to the phonebook. To add a contact to the UIM card or the phone:
- ◆ **Sent message:** sent message to this number.
- ◆ **Send contact:** To send the record through message.
- ◆ **Copy to phone or Copy to UIM card:** Duplicate the telephone number from the mobile phone to the UIM card or from the UIM card to the mobile phone.
- ◆ **Move to phone or Move to UIM card:** Move the telephone number to the UIM card if it is stored in the mobile phone or to the mobile phone if it is stored in the UIM card.
- ◆ **Delete:** Delete the telephone number from the phonebook.

## **Search**

This function enables you to find contacts quickly. In the **edit** interface, input the first letter of the name. Records of contact whose name is beginning with this letter will appear on the screen. Press the direction key to view records.

## **Add New**

This function enables you to add contacts to the phonebook. Add a contact to the UIM card or the phone.

## **Groups**

You can divide contacts into several caller groups: Family, Colleague, Friends, Schoolmates and so on.

## **Speed dial**

Select and set Speed dial number through this access. You can long press corresponding number key in the idle screen to make a call.

## **Management**

- ◆ Move contacts: Move contacts from phone to UIM card or from UIM card to the phone.
- ◆ Copy contacts: Copy contacts from phone to UIM card or from UIM card to the phone.
- ◆ Delete contacts: You can choose to delete contacts from an UIM card or from the phone, or delete contacts one by one.
- ◆ Save position: you can save contacts to Phone, UIM or select when save.

- ◆ View mode: Select UIM card, phone or both of them.
- ◆ Memory status: Query the memory status.

### **5.3 Tools**

#### **BAM**

It's a folder where downloaded games and applications are stored. For specific operation, please refer to 'help' option embedded in the phone.

#### **Timer**

Set a time, then the timer will remind you as soon as when the time expired.

#### **Stopwatch**

Stopwatch is simple application for measuring time with possibility to register several results and suspend/resume measurement.

#### **Alarm**

Six alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set. When the preset alert time is up, the mobile phone gives off an alert tone. Select **Stop** to stop the ring or **Snooze** to temporarily stop the ring.

#### **Converter**

Currency, Length, Weight, Volume, Area and Temperature can be converted through this menu.

## **World Time**

To view city of each time zone, corresponding date and time will display at the bottom of the screen. Press direction key to choose to view cities.

## **Calculator**

The calculator can add, subtract, multiply and divide. To use the calculator:

- ◆ Press the up, left , down and right key to select +, -, ×, ÷, = respectively.
- ◆ Press right soft key or delete key to delete the figure.

Note: This calculator provides limited precision and is only applicable to simple arithmetic calculation.

### **5.4 Recent calls**

#### **Missed Calls**

You can view a list of the latest missed calls.

**Note:** When the mobile phone indicates that some calls are missed, you can select **Read** to enter the missed calls list. Navigate to a missed call and then press the **Dial** key to dial the number that originated that call.

#### **Received Calls**

You can view the latest received calls. Choose **received calls** and then select a received call to delete, save, dial, or edit (or send a short message to it).

## **Dialed Calls**

You can view the latest dialed calls. Choose **dialed calls** and then select a dialed call to delete, save, dial, or edit (or send a short message to it).

### **Call Time**

Choose **call time** to view the last call time, the total time of all dialed calls and the total time of all received calls, and/or to reset all the time.

- ◆ **Last call time:** View the time duration of the last call.
- ◆ **Dialed calls:** View the total time of all the dialed calls.
- ◆ **Received calls:** View the total time of all the received calls.
- ◆ **All calls:** Reset all the above time.

### **Delete record**

You can delete the latest call records. Choose **Delete record** and then select to delete all the numbers in the call history, or delete only the numbers in the missed calls list, the dialed calls list or the received calls list.

## **5.5 Messages**

Short Message Service (SMS) is a network service that requires network support. To send and/or receive short messages, you may need to apply for this service first from the network operator.

This mobile phone supports short message transmission. A short message is first sent to the short message service center in the network and then forwarded to the destination user. If the destination user does not power on its mobile phone or cannot receive short messages (for example, the memory is full), the network

will temporarily save this message for a period of time set by the user and the service provider. If the short message memory is full, a blinking SMS icon appears on the top of the screen. To normally receive short messages, you need to delete some of the existing short messages.

*Note: When a short message is sent through the network, the mobile phone may give a prompt message indicating that the short message has been sent. This indicates that the mobile phone has sent the short message to the short message service center number set in the mobile phone but does not imply that the destination user has received the short message. For further information, consult the service provider*

### **Create**

From the main menu select “**Messages**” to create text message. You can type a message, and you're also able to insert a pre-defined message. While writing a message, select “**Options**” to access all the messaging options. You can save your messages that you send often to “**Draft**”.

Select **Options** to perform the following operations:

- ◆ **Send:** To send the short message.
- ◆ **Insert contacts:** To insert a contact name from the phonebook to the short message.
- ◆ **Preset message:** Some templates are stored in the mobile phone.
- ◆ **Save to draft:** Save the message to draft.
- ◆ **Save as preset:** To save the message as preset message so that you can use it more convenient.
- ◆ **Exit editor:** To exit editor.
- ◆ **Settings:** Access this item to set send mode, priority, delivery reports status and call back number status (If you set call back number status to “on”, you need to set call back number).

## **Inbox**

If a new short message arrives, an icon  will be displayed on the screen. If the short message memory is full, you can no longer receive any short message. To receive short messages, delete some or all the existed short messages.

Choosing “inbox”, the short messages in the Inbox are listed on the screen. A short message marked with an icon  indicates that you have unread message.

Press the **OK** key to view the current message.

While browsing a short message, you may select **Options** to perform the following operations:

- ◆ **Reply**: To reply to the short message.
- ◆ **Forward**: To forward the short message to others.
- ◆ **Call**: Call the one who sends the message to you.
- ◆ **Delete**: To delete the short message.
- ◆ **Delete all**: To delete all short messages from the Inbox.
- ◆ **Copy to the phone/UIM card**: To copy the message to the phone or UIM
- ◆ **Move to the phone/UIM card**: To move the message to the phone or UIM

## **Outbox**

Messages sent failed are stored in this item.

## **Drafts**

The messages you choose to ‘save in Draft’ are list in this item.

## **Voice mail**

Voice mail: the voice mail box

Listen to voicemail: Directly to listen the voice mail.

Voice mail number: Set the voice mail number that provided by the carrier.

## **Management**

This function enables you to perform the following operations: Delete messages, copy inbox, move inbox, Select storage position and view memory status.

## **Messages settings**

This function enables you to set the default features about the SMS.

- ◆ Messages validity: set a proper time of messages validity.
- ◆ Delivery report: turn on or turn off this function.
- ◆ Priority: Normal or urgent.
- ◆ Send mode: Select a send mode as needed.

## **Templates**

Some templates are stored in the mobile phone. You can use them when you writing a message.

## **5.6 Multimedia**

### **Camera**

Roll the phone to align the camera to the picture. Then select snapshot key (OK button) to capture the object. Photos will be stored in photo gallery.

In capturing mode, select OPTIONS to show tool bar, the displayed tools are used for improving the quality of image. You are able to set the following parameters.

- ◆ Quality: High, medium and low are available.
- ◆ Size: Set image size.
- ◆ Shutter tone: turn on/off this function as per your willing.
- ◆ Self-timer: choose On or Off. When choose on, camera will capture picture without press the snapshot key (OK button) when the time you set is exhausted.
- ◆ Banding: 50 Hz and 60 Hz are available.
- ◆ Reset: to restore factory settings.
- ◆ Environment: Auto, night mode, sunny mode and cloudy mode are available.

### **Music Player**

The audio player provides three buttons: Play/Pause, Back, and Forward, corresponding to the OK key, left direction key and right direction key. Users can press up and down direction key to tune volume.

Choose **Options** to perform the following operations:

- ◆ **Play:** Play the current song that include in the default playlist or the specific playlist.
- ◆ **Playlist:** Users can create and modify the playlist. Users need to add the song to the playlist before users play the specific playlist (such as the default playlist).
- ◆ **Set as:** Set the song as ringtone, SMS tone or alarm tone.
- ◆ **Setting:** Set play mode, volume and rank way.

### **FM radio**

This phone is equipped with an FM radio. Users can press left/right direction key to search channels manually. Up/down direction key are corresponding to increase/decrease volume.

*Note: Before using this function, users need to insert headset into corresponding slot.*

Press the **Left soft** key to open the play list and then choose **Options** to perform the following operations:

- ◆ **Global search:** Search channels automatically.
- ◆ **Channel list:** Show a list of channels.
- ◆ **Save:** To save the current channel to channel list.

### **Recorder**

Users can record audio files through this item. Choose ‘new recorder’ to start recording. The recorded files will be stored in record list.

## **5.7 Scheduler**

Once you enter this menu, there is a monthly-view calendar for you to view. Users can use this jump to specific day through the path: Calendar>option>go to date.

## **5.8 Settings**

### **Display**

Access this item to set wallpaper, brightness and backlight time.

### **Call Settings**

- ◆ Answer mode: There are three modes available for you to select from, send key, any key or headset auto.
- ◆ Minute beep: It is use for remind you of time during a call.
- ◆ Auto retry: when a call is not answered by the other party, your phone will call the number again automatically if you enable this function.
- ◆ Call forward
  - this network function enables you to forward incoming calls to another number you have previously specified.
  - Busy: Forward an incoming call to the preset number only when the called party is busy.
  - No answer: Forward an incoming call to the preset number only when the called party does not answer the call within the specified time.
  - Unconditional: Forward an incoming call to the preset number only when the called party is unconditional.
  - Unreachable: Forward an incoming call to the preset number only when the called party is unreachable.
  - Cancel: Cancel all the set call forward functions. The mobile phone will contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

#### ◆ Call waiting

- Activate: After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.
- Cancel: If you choose Deactivate, the network will not alert you when others are calling you while you are already in a conversation.

#### ◆ Call restrict

Call **restrict** function enables you to **restrict** calls as needed. The preset password is 0000.

#### ◆ Voice privacy:

The advanced voice codec will be used if users turn on the voice privacy function.

*Note: If you choose on, dialing may fail. This depends on the implementation of the network operator.*

### Phone Settings

- ◆ **Language:** Select the display language for the mobile phone.
- ◆ **UIM Settings:** Select UIM Slot one or UIM Slot two as needed.
- ◆ **Time format:** 12hr or 24hr.
- ◆ **Date format:** Three types are available, select one from them.
- ◆ **Keypad lock:** Activate or deactivate this function.

### Auto power on/off

Set the time when the mobile phone will be automatically powered on or off.

Alert: Before entering an area where the use of mobile phones is forbidden, make sure that the scheduled

power-on function is deactivated to avoid accidents.

## **Security**

This function provides you with related settings about safety use. The preset password is 0000.

- ◆ Phone lock: activate or deactivate this function.
- ◆ PIN setting: activate or deactivate this function.
- ◆ Application lock: to lock some applications such as message and contact so that others can't access to these information without inputting the correct password.
- ◆ Change password: to change the password.
- ◆ Factory Reset: to restore the factory settings.
- ◆ Delete all entries: to delete all entries.

## **Profile**

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into four scenarios: **Normal, Silent, Meeting** and **Outdoor**:

When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode.

### **5.8.1.1 Activate**

Select **Activate** to activate the selected mode.

### **5.8.1.2 Edit**

After choosing one of the above four modes, select **Customize** to edit the following items:

- ◆ **Volume**: Set the volume of the conversation tone, the ring tone, the keypad tone.
- ◆ **Ring tone**: Set the ring type.
- ◆ **SMS tone**: select SMS tone.
- ◆ **Alarm tone**: Select alarm tone.
- ◆ **Call alert mode**: Select ring, vibrate, ring and vibrate, or ring after vibrate mode.
- ◆ **SMS mode**: Set SMS alert mode.
- ◆ **Missed call alert**: remind you of missed call.
- ◆ **Power on ringtone**: select a ringtone for power on ringtone.
- ◆ **Power off ringtone**: select a ringtone for power off ringtone.
- ◆ **Power on/off alert**: activate or deactivate this function.

### **Sound**

Directly enter the current profiles edit state.

## **5.9 Games**

Two games are embedded in the phone. For specific operation, please refer to ‘help’ option of each game.

## 6 Appendix

### Appendix: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
UIM card error	The UIM card is damaged.	Contact your network service provider
	The UIM card is not in position.	Check the UIM card
	The metal face of the UIM card is polluted.	Clean the UIM card with a clean cloth

Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery

Calls cannot be dialed	Call barring is activated	Cancel call barring
	The UIM card is invalid	Contact your network service provider
The mobile phone cannot connect the network	The mobile phone is not in a service area of the CDMA network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high

The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

## **SAFETY INSTRUCTIONS**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### Specific Absorption Rate (SAR) information

This wireless phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg.