

I235 User Manual

Contents

1.	Getting to know your phone	1	5.	Message	4
1.1	Your Phone	1	5.1	Write message.....	4
1.2	Status icons.....	1	5.2	Inbox.....	4
1.3	Installing SIM card and battery.....	1	5.3	Outbox.....	4
1.4	Installing Storage card	1	5.4	Drafts.....	4
1.5	Battery charging.....	2	5.5	Sentbox	4
1.6	Power on/ off.....	2	5.6	Message setting	4
1.6.1	Power on	2	5.6.1	Templates.....	4
1.6.2	Power off	2	5.6.2	Voice mail server.....	4
1.7	Using shortcut keys.....	2	5.6.3	Settings	4
2.	Using Call Function	2	4.7.4	Message capacity	5
2.1	Making a call	2	4.7.5	Broadcast message	5
2.2	Answering or rejecting a call	2	6.	Movistar	5
2.2.1	Answer a call	2	7.	Images	5
2.2.2	Reject a call.....	2	8.	Entertainment	5
2.3	Adjusting call volume	3	8.1	Camera.....	5
2.4	Ending a call	3	8.2	Video recorder	5
3.	Call logs	3	8.3	Images.....	6
3.1	Dialed calls.....	3	8.4	Audio player.....	6
3.2	Received calls.....	3	8.4.3.1	Background audio player	6
3.3	Missed calls	3	8.5	Video player.....	6
3.4	Rejected calls.....	3	8.6	Recorder.....	6
3.5	Delete all.....	3	8.7	FM Radio.....	7
3.6	Call timers	3	9.	WAP	7
3.7	Call cost (need the network support)	3	9.1	Input URL	7
4.	Phonebook	3	9.2	Bookmarks	7
4.1	View a contact.....	3	9.3	History	7
4.2	Adding a new contact.....	3	9.4	Offline pages	7










10.	Alarm	7	14.2.2 Select language	10
11.	Extras	8	14.2.3 Shortcut settings	10
	11.1 Calculator	8	14.2.4 Auto power on/off	11
	11.2 WLAN	8	14.2.5 Power management	11
	11.3 Bluetooth	8	14.2.6 Restore factory settings	11
	11.4 Calendar	8	14.3 Display settings	11
	11.5 World clock	8	14.3.1 Wallpaper settings	11
	11.6 Torch	8	14.3.2 Idle display settings	11
	11.7 File manager	8	14.3.3 Contrast	11
12.	FM Radio	8	14.3.4 Backlight	11
13.	Profiles	8	14.3.5 Keypad backlight time	11
	13.1 Normal	8	14.3.6 Animation effect	11
	13.2 Silent	8	14.4 Security settings	11
	13.3 Meeting	9	14.4.1 PIN	11
	13.4 Indoor	9	14.4.2 PIN2	12
	13.5 Outdoor	9	14.4.3 Privacy	12
	13.6 Earphone	9	14.4.4 Auto keypad lock	13
	13.7 Bluetooth	9	14.4.5 Lock screen by end- key	13
14.	Settings	9	14.4.6 Power-on password	13
	14.1 Call settings	9	14.5 Connection management	13
	14.1.1 Network selection	9	14.5.1 Network account	13
	14.1.2 Call divert	9	15. Safety Precaution	13
	14.1.3 Call barred	9	15.1 Usage environment	13
	14.1.4 Call waiting (Need network support) ...	9	15.2 Medical devices	14
	14.1.5 Hide ID (Need network support)	10	15.2.1 Pacemaker	14
	14.1.6 Select line	10	15.2.2 Hearing aids	14
	14.1.7 Flight mode	10	15.2.3 Emergency calls	14
	14.1.8 Others	10	15.3 Password access	15
	14.2 Phone settings	10	15.3.1 Phone password	15
	14.2.1 Time & date	10	15.3.2 PIN code	15

15.3.3 PIN2 code.....	15	15.7 Other safety information	18
15.3.4 PUK code	15	16. FCC Statment	18
15.3.5 PUK2 code	16	17. Specific Absorption Rate (SAR)	19
15.4 Cautions for battery charging	16		
15.5 Cautions for battery usage.....	16		
15.6 Cautions for spare parts usage	17		

1. Getting to know your phone

1.1 Your Phone

1.2 Status icons

Icon	Function description
	Represent current SIM1 network signal. The more bars, the stronger the signal
	Flight mode
	Battery status, more bars indicate more battery capacity left
	Unread SMS
	Clock has set
	Profile has set as Silent Mode
	Profile has set as Indoor Mode
	Profile has set as Outdoor Mode
	Profile has set as Meeting Mode

1.3 Installing SIM card and battery

- (1) Hold on **【End Key】** for about three seconds to switch off the phone.
- (2) Remove the battery cover.
- (3) Remove the battery.
- (4) Follow the sign for SIM1 on the phone to install SIM1. Please make sure that the golden contacts of the card face into the phone and the notched corner has the same direction with the card slot, then push the other side of the card gently until it fixes itself in the card slot.
- (5) Replace the battery with its golden contact part facing the set phone battery contact piece, and then replace the battery cover.

1.4 Installing Storage card

- (1) Hold on **【End Key】** for about three seconds to switch off the phone.
- (2) Remove the battery cover.
- (3) Remove the battery.
- (4) Follow the arrow direction on the T-Card slot cover, open card slot cover, put the T-Card into the slot vertically, and make sure that the gold contacts of the card face upwards, until the card fixes itself in the card slot.

- (5) Follow the arrow direction on the T-Card slot cover, pull card slot cover to lock the card slot.

1.5 Battery charging

Charged by the travel charger

- (1) Install the battery correctly into the phone.
- (2) Insert the lead of the travel charger to connecting slot of the phone, and then connect the charger to a standard power socket.

When charging is complete, unplug the charger from the standard power socket first, and then disconnect the phone and charger.

1.6 Power on/ off

1.6.1 Power on

Hold on **【End Key】** for three seconds to switch on the phone.

1.6.2 Power off

Hold on **【End Key】** for three seconds to switch off the phone.



Warning:

Don't switch the phone on in areas where wireless phone usage is prohibited or where it may cause interference or danger, and also make sure that you haven't activated the function "Auto power on/off".

1.7 Using shortcut keys

Pressing some keys directly from the Home Screen provides direct access to common phone functions.

Key	Operation	Function
Call key	press briefly	Enter Call History
1 Key	hold on	Enter voicemail box for SIM1

2.Using Call Function

2.1 Making a call

- (1) On the Home Screen, input the area code and phone number.
- (2) Press **【SIM1 Call Key】** to call from SIM1.

2.2 Answering or rejecting a call

2.2.1 Answer a call

When there is an incoming call, you can press **【Call Key】** to answer.

2.2.2 Reject a call

When there is an incoming call, you can press **【End Key】** to reject it.

2.3 Adjusting call volume

During a call, you can press **【Navigation Key】** to adjust the earphone volume.

2.4 Ending a call

Press **【End Key】** to end the call.

3.Call logs

Enter the main menu, and then select **[Call logs]** to enter the call list.

3.1 Dialed calls

Display recent calls dialed.

3.2 Received calls

Display recent calls received.

3.3 Missed calls

Display recent calls unpicked up.

3.4 Rejected calls

Display recent calls rejected.

3.5 Delete all

Delete all the call entries.

3.6 Call timers

Select the desired SIM Card, and then you can view all relevant information about the SIM Card.

3.7 Call cost (need the network

support)

- ❖ **Total cost:** Record total call charges for SIM1 .
- ❖ **Max cost:** You can set the desired upper limit for call costs.
- ❖ **Price per unit:** Record the cost rate for SIM1 .
- ❖ **Reset cost:** Reset the total call charges as zero.

4.Phonebook

4.1 View a contact

Enter the contacts, the phone is defaulted to show contact list with all entries. Press **【Left Key/Right Key】** to switch between different groups.

4.2 Adding a new contact

On the Contacts list, select **<Options> → New>** to create a new contact.

- ❖ **Phone:** You can input the contact name, mobile phone, home phone, etc. You can also set special image and ring for the contact entry.
- ❖ **SIM1:** The input record will be saved to SIM1, with each name one phone number.

5. Message

5.1 Write message

On the Home Screen, press **【OK Key】** and select **[Message→Write message]** to edit a new SMS directly. After writing an SMS, select **<Send >** to send the message.

5.2 Inbox

Store all received SMS.

5.3 Outbox

Store all SMS failed to be sent.

5.4 Drafts

Save edited SMS haven't sent.

5.5 Sentbox

Store all the SMS successfully sent out. If you want the sent messages be saved automatically, please select **[Message→Options]**, then select **[Settings→SMS→Save sent messages→Save]**.

5.6 Message setting

On the Home Screen, press **【OK Key】** to enter the main menu, then select **[Message→Options]** to enter the message setting menu.

5.6.1 Templates

While editing messages, you can directly cite the preset common phrases. Select **<Edit>** to set the common phrases by yourselves.

5.6.2 Voice mail server

This function works like an answering machine, which can transfer a missed call to your personal voice mail, allowing the caller to leave a voice message and notify you by an SMS. Voice Mail is a part of the bundled software provided by network operator, therefore, you need to register to active this function, and manually set the phone. Please contact with your network operator for more details.



Caution:

It's workable to transfer the voice call into the voice mail (The number the call will leave a message) by setting "Divert calls".

5.6.3 Settings

❖ SMS

- **SIM1 msg center:** While sending messages, you must set the service center number

provided by network operator. Most SIM cards defaulted contain the service center number. You can also gain this number directly from the network operator.



Caution:
If you modify or delete the service center number, an SMS might not be sent successfully.

- **Message validity period:** Allows you to set the length of time during which your SMS will be stored in the message center. The validity period depends on the network operator.
- **Status report:** Select [On], then the text message center will inform you when you successfully sent a message.
- **Save sent messages:** You can select whether to save the sent message or not.
- **Preferred storage:** You can select to save the SMS to the SIM card or the phone first.
- **SMS Backup:** You can export SMS from phone or import SMS to phone.

4.7.4 Message capacity

You can view memory capacity status for SMS via this function.

4.7.5 Broadcast message

You can receive broadcast text messages with various contents via network service, such as news, weather or traffic information. For more details, please consult your network operator.

6. Movistar


Into this menu, display SIK card information.

7. Images

This function allows you to quickly browse photos and pictures.

8. Entertainment

8.1 Camera

Enter the main menu, and select [Camera] to enter the camera preview screen, click  to take a photo.

8.2 Video recorder

Enter the main menu, and select [Multimedia → Video recorder] to enter the video preview screen,

and press **【OK Key】** to start recording the video.




8.3 Images

This function allows you to quickly browse photos and pictures.

8.4 Audio player

On Home Screen, press **【OK Key】** to enter the main menu, and select **[Multimedia→Audio player]** to enter the Audio Player screen.

The below table shows the icons on the Player screen:

Icon	Description
	Press 【OK Key】 to play or pause
	Press 【Left/Right Key】 to skip to last /next one
	Show the playing volume, press 【Up/ Down Key】 to adjust the volume





8.4.3.1 Background audio player

While playing a song, press **【End Key】** to quit the Playing screen to enter the background playing mode.

8.5 Video player

Enter the main menu, and click **[Multimedia→Video player]**.

Icon description:

Icon	Description
	Play or pause
	Skip to the last/next file
	Stop playing
	Show the playing volume, press 【Up/ Down Key】 to adjust the volume





8.6 Recorder

On Home Screen, press **【OK Key】** to enter the main menu, select **[Multimedia→Recorder]**, and choose **<Options→Start recording >** to start recording. Select **<Pause>** to have the recording pause for a while, select **<Stop>** to cease recording. After ceasing the recording, the recorded file will be automatically save in the folder **[Audio]**, select **<Options→Record file list>** to check.

8.7 FM Radio

On standby mode, plug in the earphone, press **【OK Key】** to enter the main menu, then select **[Multimedia→FM radio]**.

Icon description:

Icon	Description
	Press 【Down Key】 to activate or deactivate the radio
	Frequency scrolling bar, press 【Left/Right Key】 to adjust the frequency
	Press 【Left /Right Key】 to adjust the radio frequency.
	Display the player volume, Press 【*Key】 or 【# Key】 to adjust it

9.WAP

9.1 Input URL

Enter the wanted website, and click to connect it.

9.2 Bookmarks

Save the common visited website into the Favorites, and marked by simple names. Select one saved name, then the corresponding web will be connected.

9.3 History

Record the websites you visited before.

9.4 Offline pages

After saving a website as snapshot, you can browse the website while offline.



Caution:

1. Your network service provider may not support some functions. In order to ensure the browser work normally, please confirm first that your SIM card supports and have the Internet function activated.
2. If you browse the web page, flowrate fee will be charged.

10. Alarm

On the Home Screen, press **【OK Key】** to enter the main menu, and select **[Tools→Alarm]**, then you can set the alarm name, time, ring and mode.

11. Extras

11.1 Calculator

Directly input numbers, press **【Navigation Key】** to select your desired operation symbols (+, -, /, X). Press **【OK Key】** to get the answer.

11.2 WLAN

Use the function of WLAN

11.3 Bluetooth

- ❖ **Open/Close Bluetooth:** This function allows you to switch the Bluetooth on or off.
- ❖ **Bluetooth visibility:** Set to show or hide the Bluetooth of your phone. If you select to hide the phone, other devices cannot detect the Bluetooth device of your phone, even you activated your Bluetooth function.
- ❖ **Paired device:** You can search for the nearby Bluetooth-enabled devices
- ❖ **My Bluetooth name:** If Bluetooth function activated, while other devices search for Bluetooth signal, the corresponding name represents your phone.

11.4 Calendar

Enter the main menu, and select **【Tools → Calendar】** to enter the Calendar screen.

11.5 World clock

This function allows you to check the standard time in different areas of the world.

11.6 Torch

You can press the OK key to activate the flashlight.

11.7 File manager

This menu allows you to manage files stored in the storage card.

12. FM Radio

Method of use with directory Entertainment.

13. Profiles

13.1 Normal

- ❖ **Activate:** Activate the chosen profile.
- ❖ **Customize:** Set the options as required.
- ❖ **Rename:** Modify the name of the selected profile.

13.2 Silent

For the settings, please refer to "Normal".

13.3 Meeting

For the settings, please refer to "Normal".

13.4 Indoor

For the settings, please refer to "Normal".

13.5 Outdoor

For the settings, please refer to "Normal".

13.6 Earphone

For the settings, please refer to "Normal".

13.7 Bluetooth

For the settings, please refer to "Normal".

14. Settings

14.1 Call settings

14.1.1 Network selection

- ❖ **Auto select:** The phone can automatically search and register available networks.
- ❖ **Manual select:** Enable this function, the phone will search for the network, and list all searched networks, then you need to choose the one needed to register.

14.1.2 Call divert

Based the set diverting conditions, incoming calls will be forwarded into voice mail or other numbers.

14.1.3 Call barred

This function helps you to restrict the incoming and outgoing calls.

Select the desired call and press <OK>, then you can select [**Activated**], [**Off**] or [**Query status**]. Select [**Activated**], the phone will need network support current setting.



Caution:

1. Some network operators forbid the function. For more details, please contact your network service provider.
2. The network operator will provide you the initial network password while you apply for this service.

14.1.4 Call waiting (Need network support)

- ❖ **Activated:** If you set the function on, the network will alert you that there is an incoming call. You can keep current call and answer another one.
- ❖ **Off:** Cancel call waiting function, then the new incoming calls won't be answered while you're on the phone already.

❖ **Query status:** Select it to view current status of this function.

14.1.5 Hide ID (Need network support)

❖ **Hide ID:** While calling, the recipient won't see your phone number.

❖ **Display own ID:** While calling, your phone number will be visible for the recipient.

❖ **Display ID by network:** While calling, whether your phone number will be visible or not for the receiver depends on the network presetting.

14.1.6 Select line

You can choose Line 1 or Line 2 as you need.

14.1.7 Flight mode

❖ **Activate:** Activate flight mode, then all network service won't be available.

❖ **Select when power on:** You can select whether to activate flight mode when power on.

14.1.8 Others

❖ IP shortcut key

After activating this function, selecting <Options → Call → IP call>, then preset IP number will be automatically added before the number you want to dial and call via it.

❖ 50 secs warning

If you activate the function, an elapsed time reminder will be heard at the 50th second of every minute during your call, so that you may end the call timely to save the phone fare.

❖ Answer/Reject mode

➤ **Reply SMS after reject:** You can select whether to reply an SMS after rejecting a call.

➤ **Any-key answer:** If you set this function on, you can answer the call by pressing any-key.

❖ Auto redial

If you set this function on, the phone will redial the number after an unsuccessful call.

14.2 Phone settings

14.2.1 Time & date

❖ **Set time:** Directly input the time or press 【Up /Down Key】 to set it.

❖ **Set date:** Directly input the date or press 【Up /Down Key】 to set it.

14.2.2 Select language

You can select the language you want.

14.2.3 Shortcut settings

You can change the responsible shortcuts for

【Navigation Key】 under standby mode.

14.2.4 Auto power on/off

You can set the phone to switch on/off at a scheduled time.

14.2.5 Power management

Display the battery capacity.

14.2.6 Restore factory settings

Reset all parameter values into default status. Please enter the privacy preserving password (Initial password is 1234) to resume factory setting.

14.3 Display settings

14.3.1 Wallpaper settings

Select the default or other pictures as the wallpaper of the phone.

14.3.2 Idle display settings

You can choose that which item will be displayed on the standby screen.

14.3.3 Contrast

Press 【Left /Right Key】 to adjust the contrast.

14.3.4 Backlight

Select the desired backlight time.

14.3.5 Keypad backlight time

Select the desired keypad light time.

14.3.6 Animation effect

❖ **Power on display:** You can select the preset animation or others as the Power on animation for your phone.

❖ **Power off display:** You can select the preset animation or others as the Power off animation for your phone.

14.4 Security settings

In order to secure the information, you can set PIN code, PIN2 code, power-on password and Mobile tracker function.

14.4.1 PIN

PIN code is the personal identification number for SIM card. If never be modified, the initial password set by network operator should be 1234 or 0000. If activated the power-on PIN code, then you have to input the PIN password each time you switch the phone on. You can modify the PIN code to prevent your SIM card being used by others.



Caution:

If you input your PIN code incorrectly three times in succession, the SIM card will be locked automatically, and prompting to enter PUK code to unlock it. Therefore, please do remember the PIN code, if you modify it.

PUK code (PUK1) is made up by 8 digits, unmodifiable. When the phone is locked by PIN code, please enter correct PUK code to unlock the phone. If you incorrectly input the PUK code ten times in succession, then the SIM card cannot be used any more. Some PUK codes are provided together with the SIM card, some should be gained from the network service provider. If you don't know the PUK code while your PIN code is locked, please never input the code casually. In this case, please call the hotline of the service provider for your SIM card, after simply checking about the user identity, you can gain the PUK code for free to unlock your phone.



Caution:

Please be careful when use this function. If you forget PUK code, please consult your network operator. If you incorrectly input the PUK code ten times in succession, the SIM card will be scrap.

Select the desired SIM type and have the following options:

- ❖ **Activated:** You should input PIN code each time switching the phone on.

- ❖ **Modify:** You should activate PIN code before modifying it.

- ❖ **Off:** You should input the correct PIN code before deactivating it.

14.4.2 PIN2

PIN2 code is the personal identification code required for some certain functions (such as set fixed number, set phone fare, etc).

PIN2 code is another password provided together with SIM card by service provider. If wrongly input it for three times in succession, the phone will be locked until correct PUK2 code entered, for detailed operation, please refer to PIN code and PUK code.



Caution:

If you incorrectly input the PUK2 code ten times in succession, you will not be able to use SIM card. Please be careful when use this function.

14.4.3 Privacy

Secured by phone password, the phone will be protected from other unauthorized users. When password function has been activated for call logs or message, you have to enter correct password on corresponding main menu or sub-menu. The defaulted password is "1234".

14.4.4 Auto keypad lock

After activating this function, the phone will be locked automatically if the time you set is arrived, so as to avoid error operations.

- ❖ **Manual lock keypad:** On the Home screen, hold on **【 * Key】** for three seconds to lock the keypad manually.
- ❖ **Manual unlock keypad:** On the Home screen, hold on **【 * Key】** for three seconds to unlock the keypad manually.

14.4.5 Lock screen by end- key

Once activated this function, when the backlight is on, press **【End Key】** to turn off the backlight and auto lock the keypad.

14.4.6 Power-on password

You should set the power on password when you use this function for the first time. After activated this function, you should input password each time you switch the phone on.



Caution:

Power-on password doesn't have the limitation for wrongly inputting. Please remember carefully about the Power on PWD, otherwise, the phone won't be switched on normally once password forgotten.

14.5 Connection management

14.5.1 Network account

You can select the desired network account, and you can add the desired account by yourself as well.

15. Safety Precaution

15.1 Usage environment

Please remember to obey relevant rules and regulations whenever use your phone. This will prevent bad effect from you and the environment.

- ❖ Switch off your phone near explosive places, such as gas station, bunkers, chemical factories or blasting scene, and adhere to any safety signs and instructions there. Breaking any rules may cause explosion or injury.
- ❖ Phone using in plane will interfere with the flight operation and bring dangers. Therefore, please do switch off your phone before boarding, and make sure it is power off during the whole flight.
- ❖ Please keep the phone in its special bracket while you're driving. Please don't put it on a seat or in places where it could fall off when the car encounters collision or break. In order

to ensure safe driving and avoid road accidents, please don't use the phone when driving. If you must use it, please use the phone's hands-free asset or park at roadside before making or answering a call.

- ❖ Please put the phone away from the high temperature environment, for explosion might be caused when the battery is of excess high temperature.

15.2 Medical devices

Please switch off your phone in areas near the electronic medical equipments that obviously requires switching the phone off (Such as heart pacemakers, hearing aids, etc). Most medical devices can shield the phone's RF signal, but some can't. If you have any doubts or need to find out more, please consult your doctor or medical device manufacturer.

15.2.1 Pacemaker

Pacemaker manufacturers advise the distance between your phone and heart pacemaker should be 6 inches (15.3 cm) at least, otherwise the phone could interfere with the pacemaker.

The personnel who wears pacemaker should do the followings:

- ❖ Should always keep a distance (at least 6 inches) between the phone and pacemaker, when the phone is switched on.
- ❖ Should not have the phone in a breast pocket
- ❖ Should listen to the phone closer to the ear which is farther from the pacemaker.



Caution:

Please switch off your phone while you feel there is interference, and consult the doctor timely.

15.2.2 Hearing aids

Mobile phone might bring some interference to some hearing aids. If so, please consult the hearing aids manufacturer.

15.2.3 Emergency calls

As the phone uses a radio signal, wireless and ground communication network and personal settings functions like other phones, it is impossible to ensure your phone can be connected successfully in any situation, so please don't rely purely on your phone as the only means of notification in cases of emergency (such as medical first aid).

Make an emergency call

If your phone is switched off, please turn on your phone and check whether the network signal is strong enough.

- (1) Input the local first aid number correctly (such as 120), different areas have different first aid numbers.
- (2) Please press **the call key** to call.



Caution:

While making an emergency call, you should try best to provide all important information precisely. At this time, the phone may be the only communication tool, so don't end the call without permission.

15.3 Password access

Your phone and SIM card can be protected by a password to prevent others using them illegally.

15.3.1 Phone password

This protects your phone from unauthorized users. You can set the preset password when you use it for the first time. After using it, please modify your phone password as soon as possible and keep it secret.

15.3.2 PIN code

This is personal identification code, which is used to protect the SIM card from unauthorized users. Generally, the PIN code and SIM card will be provided together. After activating the PIN code, you need to input correct password each time you switch the phone on to ensure normal usage.



Caution:

If you input your PIN code incorrectly for three times in succession, the SIM card will be locked. You need to enter the PUK code to unlock it. (If you don't have a PUK code, please contact your network operator or SIM card retailer for this information. Please don't input any characters).

15.3.3 PIN2 code

This is the password for activating special functions of the SIM card. You need to input it while entering some functions (eg.Charge Unit, Fixed Dialling etc). Usually, the PIN2 code and the SIM card will be provided together. If you incorrectly input the PIN2 code for three times in succession, it will be locked and you will need to input PUK2 to unlock it.

15.3.4 PUK code

This is used to unlock the PIN code. Usually the

PUK code and SIM card are provided together. If you don't have it, please contact with your network operator or SIM card retailer. SIM Card won't be used any more, if you incorrectly input the PUK code ten times in succession. In that case, please apply a new SIM card from your network operator. PUK code is unmodifiable.

15.3.5 PUK2 code

This is used to unlock the PIN2 code. Usually the PUK2 code and the SIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code for ten times in succession, you will not be able to access some functions. Please apply to your operator for a new card. The PUK2 code is unmodifiable. If you lose it, please contact your service provider.

15.4 Cautions for battery charging

The phone provides power by using a lithium battery. The standby time and call time will be influenced by the system's environment and phone settings.

- ❖ Please use the approved battery and charger designated for this product. The company will take no responsibility for damage caused by unauthorized battery or charger.
- ❖ The battery icon will start scrolling when the phone is charged in power-on-state.



Caution:

1. If there is no battery left at all, then the battery icon will appear after 2-3 minutes of charging. The battery charging time depends on the status of the phone (whether switched on, making a call), usually, it will take about 2-5 hours.
2. To make the new battery achieve its best capacity, please charge and discharge the phone for twice or three times. Please charge the new battery over 10 hours for the first several times.

- ❖ Don't use wet hands to touch the battery or charger while charging in order to avoid danger.
- ❖ Try not to use the phone while charging.
- ❖ The battery icon stops scrolling while the battery is full, and then you can disconnect the phone from the charger adapter.

15.5 Cautions for battery usage

The battery usage depends on the network, phone setting and usage situation.

- ❖ Never use any damaged battery.

- ❖ The phone will consume a little power if it is near network station. Therefore, the call and standby time depends greatly on the signal strength of honeycomb network and the parameters set by network operator.
- ❖ The battery charging time lies on the remnant power, and the type of the battery and charger. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to replace with a new battery.
- ❖ Only use batteries and charges authorized for this device, otherwise, explosion might be caused. Please disconnect the charger while unused. Do not leave the battery connected to a charger over one week, for overcharging may shorten the life length.
- ❖ Do not connect the anode and cathode of a battery inversely.
- ❖ Do not leave the battery in places with over-high or over-low temperature, otherwise, the battery capacity will be reduced and battery life will be shortened. Always try to keep the battery in room temperature.
- ❖ Do not short-circuit the battery. This may damage the electronic core or internal protected circuit. If you keep the unused battery in the pocket or bags, metal objects (eg. coin, clip or pen, etc) inside might have

the anode directly contacted with the cathode of the battery and caused accidental short circuit. Therefore, please carefully and separately store the battery.

- ❖ Don't burn your phone battery or treat it as common rubbish. Please adhere to the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries in time.
- ❖ If your phone, battery or other charging device is accidentally penetrated by water, you must not put it inside any calefaction equipment (such as drier, microwave oven etc.) to dry it. The phone or other products may go wrong, and may even cause the phone, battery or other charging device to burn, expand and explode.
- ❖ Please deal with the discarded battery according to the relative introduction.

The company will take no responsibility for any direct or indirect damage caused by user error.

15.6 Cautions for spare parts usage

- ❖ Please put all spare parts (such as SIM card, storage card, battery etc) out of reach of children, in case danger occurs.

- ❖ Please do switch off the phone and unplug the phone and charger before you removing the battery from the phone.
- ❖ As the phone's spare parts are not waterproof, please keep all spare parts dry.
- ❖ You should pull out the plug of any spare part correctly when you switch off the power, don't drag the power line forcibly.

If the phone, battery, and charger don't operate normally, please contact closest qualified maintenance centres timely.

15.7 Other safety information

- ❖ If you don't use your phone, it's better to switch it off and remove the battery so as to save energy and avoid cellular radiation.
- ❖ Please don't have the volume over loud while using the phone, which might impair your hearing.
- ❖ The unprofessional shouldn't disassemble the terminal and battery of the phone.
- ❖ It is recommended that you should try not to use the holster with magnet button, for the magnet may interfere with the phone signal, and hard iron button may crush the LCD screen. Plastic phone cover will lead to poor volatilization of vapor and have the internal

components corrupted, moreover, it can have the phone shell oxidized and faded.

- ❖ If you or your family has a medical record of dizziness or epilepsy, please consult with the doctor first, if you want to play phone games or use the flashlight (the flash doesn't available in all phone models).
- ❖ Please don't put the flashlight too close to the eyes of human beings or animals, as this could do harm to the eyes.
- ❖ Should avoid the phone falling off from high places.

16. FCC Statment

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the

user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

— Reorient or relocate the receiving antenna.

— Increase the separation between the equipment and receiver.

— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

17. Specific Absorption Rate (SAR)

Information

SAR tests are conducted using standard operating positions accepted by the FCC with the Phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is

determined at the highest certified power level, the actual SAR level of the phone While operating can be well below the maximum value, in general, the closer you are to a Wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each the FCC that it does not exceed the exposure limit established by the FCC, Tests for each required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 1.0 cm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

The maximum SAR of GSM was 0.553W/Kg for Head and 0.755W/Kg for Body,WLAN was 0.388W/Kg for Head and 0.515W/Kg for Body;

The maximum summation of SAR was 0.941W/Kg for Head and 1.270W/Kg for Body;