

# VeryKool i300 Mobile Phone User Manual

Improvements and changes to this guide due to typographical errors, inaccuracies of current information, or improvements to the programs and/or equipment, may be made by Verykool USA, Inc. at any time without notice.

## Table Of Content











<b>SAFETY INFORMATION</b> .....	<b>1</b>
<b>PRIOR TO USE</b> .....	<b>2</b>
Chart of mobile phone .....	3
<i>Phone Layout</i> .....	3
<i>Positions of Phone Keys</i> .....	3
<i>Functions of Keys</i> .....	3
LCD .....	4
<i>LCD description</i> .....	4
<i>Icon Description</i> .....	5
<b>BASIC FUNCTIONS</b> .....	<b>6</b>
Switching Your Phone On/Off .....	6
Inserting the battery, SIM card and memory card.....	6
Charging the Battery.....	7
<b>QUICK USER MANUAL</b> .....	<b>9</b>
Call function.....	9
<i>Making calls</i> .....	9
<i>Answering Calls</i> .....	9
<i>Connection of options</i> .....	10
<i>Call history</i> .....	10
<i>Volume adjustment</i> .....	10
Phone Book.....	10
<i>Store phone numbers and names</i> .....	10
<i>Using the Phonebook</i> .....	10
<i>Option of Phone Book List</i> .....	10
Text Input Mode .....	11
<i>The Icons of Input Methods</i> .....	11
<i>How to Switch Between the Input Methods</i> .....	11
<i>Numeric, Multitap ABC and Multitap abc Input Methods</i> .....	12

<i>How to Input Special Symbols</i> .....	12
<b>MENU FUNCTIONS</b> .....	<b>13</b>
Messages .....	13
SMS .....	13
MMS .....	14
Chat .....	15
Voice Mail Server .....	15
Broadcast Message.....	15
Phone Book.....	15
Call center .....	17
Settings .....	20
<i>User Profiles</i> .....	20
<i>Phone Setup</i> .....	21
<i>Display Characteristic</i> .....	22
<i>Network Setup</i> .....	22
<i>Security Setup</i> .....	23
<i>Restore Factory Settings</i> .....	24
Multimedia .....	24
<i>Audio Player</i> .....	24
<i>Sound Recorder</i> .....	24
<i>FM Radio</i> .....	24
<i>Melody Compose</i> .....	25
Fun & Games .....	26
Organizer.....	26
Services .....	27
File Manager .....	28
<b>TROUBLE SHOOTING</b> .....	<b>29</b>
<b>SECURITY SETUP</b> .....	<b>30</b>
Use of Passwords.....	30
<i>Phone Code</i> .....	30
<i>PIN (4 to 8 digits)</i> .....	30
<i>PUK (8 digits)</i> .....	30

<i>PIN2 (4 to 8 digits)</i> .....	30
<i>PUK2 (8 digits)</i> .....	31
<i>Barring Code</i> .....	31
Health and safety information .....	31
<i>Charing and Discharging</i> .....	31
<i>Tips for Battery</i> .....	32
<i>Vehicle Use</i> .....	32
<i>Usage &amp; Maintenance</i> .....	33
Radio Frequency (RF) Exposure and SAR .....	33
Term definition .....	35

## Safety Information

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

	Do not use wireless phones while driving.
	Switch off wireless devices in an aircraft. Using them on aircrafts is illegal for the signal may cause interference during flights.
	Do not use mobile phones in explosive environments. Follow any regulations and rules strictly.
	Do not use mobile phones at or near Gas stations and chemicals
	Follow any regulations or rules in hospitals and health care facilities. Switch phone off near medical equipments.
	All wireless devices may get interference that could affect the performance.
	Only qualified service personnel can reflash or repair this device.
	Use only approved accessories and batteries.
	Use only in the normal position. Do not expose your phone to extreme high temperatures above +60°C (+140°F) . Do not use static material to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press the Pick Up key. Give your location. Do not end the call until told to do so.

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

## Prior to use

Thank you for selecting the VeryKool i300 GSM/GPRS Digital Mobile Phone. You can fully understand how to use your phone by carefully reading this manual where you can find its state of the art functions and user-friendly operations.

Verykool i300 is a bar phone of high terminal orientation with various useful features such as 1.44" CSTN screen display and FM radio.

This phone provides various practical functions including Predictive text English\French\Spanish input, folder type Phone Book, individualized 64 chord ring tones for incoming calls, clock/alarm clock, MP3 player, external memory card (T-flash card), recorder, calculator, which provide convenience for your work and recreational activities, in addition to the basic calling function.

Furthermore, VeryKool i300 adopts a customized design of the man-machine interface, which can satisfy your different requirements through its perfect set of functionalities. VeryKool i300 mobile phone complies with the technical specifications of GSM/GPRS.

**Chart of mobile phone  
Phone Layout**



**Positions of Phone Keys**

- |                           |   |
|---------------------------|---|
| 1. Earpiece               | 8. Side Keys  |
| 2. Screen                 | 9. T-Flash card slot  |
| 3. Selection key          | 10. Charger and accessories connector   |
| 4. Soft keys              | 11. Cord hole   |
| 5. Pick up key            | You can not drill any metal string through the cord hole for avoiding safety problem. |
| 6. Hang up and on/off key | This cord is intended for hand-held use only.   |
| 7. Number keys            | 12. Battery Cover   |

**Functions of Keys**

Key	Name	Description
-----	------	-------------

	<b>Pick Up Key</b>	Making or answering a call. In the standby mode, press this key to access the Call Logs.
	<b>Hang Up Key</b>	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to return the standby mode and cancel current operations. Press this key to stop the alarm ringing once the alarm rings.
	<b>Soft Keys</b>	Use the left and right soft keys to execute to functions indicated at the left/right of the prompt bar on the screen.
	<b>Selection Keys</b>	Scrolling options in the function list or the phone book. In the edit mode, direction keys are used for moving the cursor. In the standby mode, press direction keys to activate a specified function.
	<b>Numeric Keys</b>	Used to enter numbers, letters and some special characters. In the standby mode, press and hold # key to activate Silent mode and the "0" key to activate FM. In the edit mode, you can press # key to switch the input method.

**LCD**

**LCD description**





















Your mobile phone has a single screen display, which consists of three main areas:

The First line displays status icons, which indicate the signal strength, the remaining power of the battery, etc.

The Middle lines display text and graphics, including numbers, text, animated icons and the information you enter.

The Last line displays the currently available operations assigned to the left or right soft key.

#### Icon Description

	Network Signal
	Connecting GPRS and using GPRS
	Connecting GPRS but no data alternating
	Divert all Voice Calls
	Auto Keypad Lock
	Alarm Clock is activated
	Battery Status
	Missed Calls
	New Message or Message Memory Full
	MMS is busy
	New MMS
	Mute Startup during call
	Roaming Startup
	Stopwatch Startup
	WAP Message
<b>Sound Status</b>	
	Ringing
	Vibrating
	Vibrating then Ringing
	Vibrating and Ringing
	Silent

## Basic Functions

### Switching Your Phone On/Off

- Press and hold Power Key for a few seconds to switch your phone on.
- **If the phone asks for a phone lock code:**  
Enter the phone lock code, and press OK.
- **If the phone asks for a PIN code:**  
Enter the PIN code, and press OK. The PIN code is usually provided with the SIM card. Please consult with your network provider for more information.
- **Access the standby mode.**  
Press and hold Power Key for a few seconds to switch your phone off.

### Inserting the battery, SIM card and memory card

#### Note of using SIM Card

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network information, the phonebook data, SMS (short messages) and other data are stored in your SIM card.

**Note:** This phone model only supports the SIM cards of 1.8V and 3V.

- Some network operators don't offer PIN2 and PUK2, so functions using those passwords will be unavailable.
- The SIM card and its contacts can be damaged and lost by scratches or bending easily, so be careful while handling, inserting or removing the card.
- Keep all SIM cards out of children's reach.

**Note:** Always make sure the phone is switched off before you insert or remove the SIM card, otherwise it may damage the SIM card.

#### Mounting the SIM Card

1. Remove the battery cover by sliding it, as the following picture shows:



2. Insert the SIM card, with the notch at the lower right and the gold contacts face down, into the card slot.



3. Replace the battery and close the cover tightly.



**Note:**

- If the SIM Card is installed improperly or damaged, the prompt words “Insert SIM” will display on the screen after you switch on your phone. Remove the SIM Card and check the way that performs as pictures show, and then mount it again.
- If “Insert SIM” still appears on the screen after you have inserted the SIM correctly, there may be something wrong with your SIM card. Please ask the network operator to repair it.
- If the screen displays that the SIM card is locked permanently, please consult with your network provider.

**Mounting the T-Flash Card**

Please follow steps described as below:

1. Open the rubber cap from the memory card slot, and then insert the T-Flash memory card into the slot until snaps into the place completely.
2. To remove the card, press the card gently then the card will pop up automatically.

**Charging the Battery**

**Note:** Please always keep your phone connector and charger dry.

1. Connect the travel adapter to the phone.
2. Plug the travel adapter into a proper AC wall outlet.
3. When your phone indicates that the battery is fully charged, please pull the travel adapter out from the I/O socket of the phone.

**Tip:** 1. If the battery is totally empty or low, it may take a few minutes before the charging indicator appears on the screen.

2. You can turn on/off, and use the phone while charging.

**Warning:** Make sure that the standard voltage/power of the place where you charge the battery matches with the rated voltage/power of our travel adapter.

# Quick User Manual

## Call function

You can dial and receive calls when signals of network providers are shown on the display screen.

### Making calls

#### Making a call

1. Enter the phone number (with the area code)
2. Press the Pick Up Key to make a call.
3. Press the Hang Up Key to end a call.

#### Making International Calls

1. Press the \* Key twice for the international prefix symbol +.
2. Enter the country code, area code and phone number.
3. Press the Pick Up Key to make a call.

#### Making Extension Calls

1. Enter the host number, and press the \* Key three or four times for the extension prefix symbol **P** or **W**.
2. Enter the extension number, and press the Pick Up Key to make a call.

#### Clear Wrong Enters

Press the right soft key to delete the last character on the screen. Hold the right soft key will clear all you entered.

#### Making a call from the Phone Book

1. Press the right soft key to access the Phone Book.
2. Scroll the Up/Down key to select the number you want, and press the Pick Up Key to call the number.

#### Last Number Redial

1. In the standby mode, press the Pick Up Key to access the Call Logs.
2. Press the Up/Down key to reach the desired number or name and press the Pick Up Key.

### Answering Calls

1. To answer an incoming call, press the Pick Up Key.
2. To end or reject an incoming/ongoing call, press the Hang Up Key.

**Tip:** If the caller can be identified, the screen will display the caller's name. If the caller can't be identified, the screen will only display the caller's number.

### Connection of options

Your phone provides a number of functions that you can use during a call.

#### Call Waiting

#### Hold/Switch

#### Call Hold

#### Other options In-call

During a call, you can access Phone Book, SMS, Sound Recorder and other functions. (Please refer to Menu Guidance for details.)

#### Call history

Press Send to enter call history menu when standby, you can check latest dialed, received and missed calls;

You can check specific messages by Call History in the function menu.

#### Volume adjustment

During a call, you can press the Up/Down Selection Key to adjust the earpiece volume.

#### Phone Book

Phone number and corresponding name stored in phone or SIM Card can be stored and searched by using Phone Book.

#### Store phone numbers and names

Enter phone number directly when on standby, press the LSK (Left Soft key) to select the current number to Save, then choose to store number in either the phone or SIM Card, **Tip:** Name and other relative message. It will confirm what has been entered.

Refer to text entered for entry manner relative message such as names.

#### Using the Phonebook

Enter the right soft key in the Phone Book List when on standby, then press display screen to choose Quick Search and enter Phone Book List. You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display. You can Please use the Up/Down key to browse all entries, and you also can enter all letters or the initial letters of the name in the **Name** box to select the number you want.

#### Option of Phone Book List

Press the left soft key to access Option, and then you can perform following operations for each entry: Call, Send SMS, Edit, Delete and so on.

- **Call:** To make a call with the number.
- **Send SMS:** Send messages to the selected number.
- **Send MMS:** Send MMS to the selected number.
- **View:** Check the record for the selected number.
- **Edit:** Edit the selected entry.
- **Delete:** Delete the entry from the Phone Book.
- **Copy:** All entries can be copied alternately from the SIM card to the phone or from the phone to the SIM card. i.e. SIM to Phone Copy or Phone to SIM Copy.
- **Move:** All entries can be moved alternately from the SIM card to the phone or from the phone to the SIM card.
- **Duplicate:** Entries saved in the SIM card can be copied to the SIM card, and entries saved in the phone can be copied to the phone. i.e. Local Copy.
- **Send vCard:** Send your phone number by SMS or send to file.

### **Text Input Mode**

This phone provides several input methods, which can be used in editing the Phone Book, short messages, memos, greetings, alarms and other text applications.

#### **The Icons of Input Methods**

After entering different kinds of edit windows (including edit phonebook, short messages. etc.), the icons of input are as follows:

“**123**”: The Entry method of Numeric appears as: “123”

“**ABC**”: The entry method of Multitap ABC appears as: “ABC”

“**abc**”: The entry method of Multitap abc appears as: “abc”

“**eZi ABC**”: The entry method of eZiText®Smart ABC appears as: “eZi ABC”

“**eZi abc**”: The entry method of eZiText® Smart abc appears as: “eZi abc”

“**eZi ES**”: The entry method of eZiText®Smart ES appears as: “eZi ES”

“**eZi es**”: The entry method of eZiText®Smart es appears as: “eZi es”

“**eZi FR**”: The entry method of eZiText®Smart FR appears as: “eZi FR”

“**eZi fr**”: The entry method of eZiText®Smart fr appears as: “eZi fr”

#### **How to Switch Between the Input Methods**

Press the # key to switch the input methods.

e.g.: If the current input is Smart ABC the screen will show “eZi ABC”. Press the # key, to go to Smart abc, and the screen will show “eZi abc”.

### **Numeric, Multitap ABC and Multitap abc Input Methods**

#### **Numeric**

When the icon of the input method is “123”, press the number keys to enter the numbers directly.

Multitap ABC and Multitap abc

When the icon is “ABC” or “abc”, press the number keys (2 to 9) repeatedly until desired letters appear in the text area. Press the number key once for the first letter. Press twice for the second letter. So, press number keys to reach the desired letter in the same way.

Press 0 to enter a blank space.

**Note:** while using the Numeric entry, please switch to the method of Multitap ABC and Multitap abc first if a blank space is required, and then press 0 to enter a blank space.

#### **How to Input Special Symbols**

If you want to input special symbols, such as “. ! ? = < >”, Etc., please following steps as below:

Press the left soft key to access **Menu** for the **Insert Symbols** in the **Entry method** or press the \* Key to display the symbols. Press the Up/Down, or Left/Right Key to move the cursor in the symbol table, and select one symbol. Press the right soft key to cancel the symbols selection.



## Menu Functions


All function options about the mobile phone are listed as below with brief descriptions.

### Messages

#### SMS

Short Message Service (SMS) is a kind of network service. Your home network may not support the service. Please consult your home network operator for more information. Enter the **Menu**, and select **Message**.

#### Inbox/ Outbox/ Drafts

The icon  means an unread message or the message box is full. You won't receive new messages once the message box is full. Please delete unnecessary messages.

1. Select the unread message, and press the left soft key to read.
2. Select **Option**, and then you can do: reply, delete, edit and so on.

#### Write Message

1. Please press the # to switch input methods while editing a message. You can enter letters and numbers, and insert pictures and rings. (Support EMS service)
2. Edit your message, and press the \* to insert special symbols.
3. Select **Option**, and then you can do: Done, Use Templates, Insert Object and so on.
4. When you select **Done**, you can choose the way to send or save as desired.

#### Templates

Your mobile phone saves many messages in common use. You can edit or erase them.

#### SMS Settings

You can set the default information about SMS properties.

#### Schedule SMS

Press the left soft key to access the Add or Option, and then you can set the date, time, message and Phone number. Press Done and Save the message will sent out the message to the number as your desire.

**Note:** The time format of this function is 24 hours.

### MMS

Please consult your network operator to obtain the MMS services.


#### Write Message

While writing messages, you can select To, Cc, Bcc, Subject or Edit content.

- **To:** the phone number or E-mail address are both OK.
- **Cc:** send the MMS to others at the same time. Phone numbers or E-mail addresses are both OK
- **Bcc:** send the MMS to others secretly at the same time. Phone numbers or E-mail addresses are both OK.
- **Subject:** edit the Subject of the MMS.
- **Edit content:** enter the text or add image, audio or attachment.

#### Inbox/ Outbox/ Drafts

The phone saves the received MMS into the inbox.

All received Messages display in the inbox, and the icon  means the MMS is unread. Use the Down/Up key to scroll the cursor to check the list, and the sender's name and number will display. If the MMS has been read, the icon will change to the read icon. Please press the left soft key to access **Option**, and then you can do: view, reply, delete and so on.

#### Templates

Your mobile phone saves many MMS in common use. What you can do for those MMS are View, Properties, and Write Message.

#### MMS Settings

Please follow steps described as below:

1. **Compose:** You can configure Creation Mode, Image Resizing, and Auto Signature.
2. **Send:** You can configure Validity period, Delivery Report, Read Report, Priority, Slide Timing, and Delivery Time.
3. **Retrieve:** You can configure Home Network, Roaming, Read Report, and Delivery Report.
4. **Filter:** You can configure Anonymous, Max Size, and Advertisement.
5. **Server Profile:** You can select one profile from 5 Profiles to activate or edit.
6. **Memory Status:** You can check the Usage, Total Memory and Free Memory.

## Chat

Use this function to chat with the sender by sending messages.

- **Chat room info:** select one chat room to set My Nickname and Remote Number.
- **Start new:** enter words and start to chat with the preset number.

## Voice Mail Server

Scroll the Up/Down key to select **Voice Mail Server** in the **Messages** menu, and select **OK** to access **Voice Mail Server**.

- **Edit:** Input or modify the number of voice mailbox.
- **Connect to Voice:** You can hear messages in the voice mailbox.

**Note:** This service is supplied by the network, such as the message machine service. It enables the caller to leave messages when you can't or unwill answer the coming call. Your number for the voice mailbox is saved in this phone. In standby mode, hold the number key 1 to dial the number of the voice mailbox after the number is configured. Please consult your network operator for more details.

## Broadcast Message

This network service enables you to receive all kinds of text messages, such as weather reports or transportation information. Currently there are a limited number of providers servicing these applications. Please check with your network provider for more information.

- **Receive Mode:** Turn on or off the Cell Broadcast.
- **Read Message:** Scroll the Up/Down Key to select the message.
- **Languages:** Select the desired language to display the broadcast message.  
**Note:** Your network operator decides whether the language is supported or not.
- **Channel Setting:** You can choose Select, Add, Edit or Delete to receive the Broadcast information.

## Phone Book

You can save phone numbers in your mobile phone. You can access the Phone Book to search all records saved in this mobile phone and your SIM card.

### ***Saving a contact using the Phone Book***

Press the left soft key to enter the main menu when on idle mode, and then select the Contact Icon to enter the Phone Book List.

You can add a new contact entry to the Phone Book, both for the SIM card and your phone. Steps described as below:

1. From the Phone Book menu, press the left soft key to select **Add New Entry > To SIM/To Phone**.
2. If the **To SIM** is selected, press the left key to select OK to start to edit the contact's name and phone number.
3. If the **To Phone** is selected, you can add the contact's name, phone number, home number, company name, email, office number and so on.

**Tip:** This mobile phone offers you several input methods, such as Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi ABC), Smart abc (eZi abc), and so on.

### **Option of Phone Book List**

#### ▪ **Quick Search**

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display in the middle of the screen. Please use the Up/Down key to select the number as desired, and then press the Pick Up Key to make a call.

#### ▪ **Search**

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display. You can Please use the Up/Down key to browse all entries, and you also can enter all letters or the initial letters of the name in the **Name** box to select the number you want.

#### ▪ **Add New**

You can add a new contact entry to the Phone Book, both for the SIM card and your phone. Steps described as below:

1. From the Phone Book menu, press the left soft key to select **Add New Entry > To SIM/To Phone**.
2. If the **To SIM** is selected, press the left key to select OK to start to edit the contact's name and phone number.
3. If the **To Phone** is selected, you can add the contact's name, phone number, home number, company name, email, office number and so on.

**Tip:** This mobile phone offers you several input methods, such as Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi ABC), Smart abc (eZi abc), and so on.

- **Copy All**

This function enable you copy all entries both from the SIM card and the phone.

**Note:** If the capacity of this phone book is different from the SIM card's, the copy content takes the smaller one as standard.

- **Delete**

You can select delete entries from the SIM card, the Phone or one by one.

- **Caller Group**

You can set group name, associated sound, associated picture and members for different caller group.

- **Extra Number**

You can set Owner Number and SOS Number.

- Owner Number: You can enter a group of a number and a name and can also edit or erase it.
- SOS Number: You can enter five groups of SOS numbers.

- **Settings**

- Memory Status: display the occupied storage and the total storage.
- Preferred Storage: select the SIM or Phone as the preferred storage for the new number.
- Fields: select the desired option when you add a new number.
- Name List Filter: You can select SIM only, Phone only or Both.

- **Caller Picture / Ring Tone**

Each of picture /ring tone can be selected to the new entry /the selected entry /the caller group.

### **Call center**

#### **Call History**

In the standby mode, press the left soft key to access **Menu > Call center >**

#### **Call history.**

- **Missed Calls:**With this function, you can check recent missed calls.
- **Dialed Calls:**With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Dial, Send SMS, or Edit.

- **Received Calls:**With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Dial, Send SMS, or Edit.
- **Delete Call Log:**You can remove all records of missed, dialed or received calls with this function.
- **Call Time:** You can check the time of last call, total sent, total received and reset all time.
- **Call Cost:** You can check the cost of last call, total cost, reset all of them, max cost, and Price Per Unit.  
**Note:** This function is related with the SIM card. Some SIM cards don't support the function. PIN2 is provided from the network operator. Please consult your network operator to obtain the number.
- **SMS Counter:** With this function, you can check the number of sent and received messages.

**Note:** This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

- **GPRS Counter:** You can check or reset the Last Sent, Last Received, All Sent, All Received and Reset Counter.

#### **General call settings**

- **Caller ID:** You can select Set By Network, Hide ID or Send ID. The default status is the Set by Network.  
**Note:** This function is related with your network. Select Hide ID may cause failure to dial. Please test the calling function is ok before you enable Hide ID.
- **Call Waiting:**
  - **Activate:** The mobile phone will connect to the network when Call Wait is enabled. After a while, the network will respond by sending messages to ensure your operation. If Call Wait is enabled, the network will alert you. At the same time, another incoming call number will display on the screen when the first call is ongoing and a new call is coming thru.
  - **Deactivate:** If you cancel Call Waiting, the network won't alert you when the first call is ongoing and a new call is coming thru.
  - **Query Status:** With this function, you can inquire about the current status from the network.

- **Call Divert:** This function allows your phone to divert incoming calls to another phone:
  - **Divert All Voice Calls:** When this function is enabled, all incoming calls will be diverted to another phone. Set it On or Off, the phone will connect to the network. After a while, the network will respond and tell you the result of an operation.
  - **Divert If Unreachable:** When this function is enabled, the incoming call will be diverted to another phone number if the phone is unreachable.
  - **Divert If No Answer:** When this function is enabled, the incoming call will be diverted to another phone number if there is no answer in some time.
  - **Divert If Busy:** When this function is enabled, the incoming call will be diverted to another phone number if the phone number you dialed is busing.
  - **Divert All Data Calls:** You can divert all data calls with the need of your network operator's support.
 

**Note:** Five operations described as above:

    - Activate: Activate it after inputting the diverted number.
    - Deactivate: Cancel the function.
    - Query Status: Used to inquire about the current status for the diverting function from the network. The phone will connect to the network. After a while, the network will respond telling you the result.
  - **Cancel All Divert:** Use to cancel all diverting functions.
- **Call Barring:** This function makes use of Call Barring to limit some selected calls. When you configure this function, you should consult with your network provider for the password. If the password is incorrect, the phone will prompt the fault message. After the desired number is selected, please continue to select On or Off. After a while, the network will respond and tell you the result.
- **Auto Redial:** You can set the Auto Redial function On or Off. When set to ON, the phone will automatically redial the recent outgoing number after a while if you fail to connect to the number. The times for auto redial are up to

10 times. You can't make any other calls when the Auto Redial is ongoing. Press Cancel to end Auto Redial.

- **Speed Dial:** Set the status on, and then you can set 8 groups for the speed dial. (Corresponding number keys are 2 to 9). In the standby mode, press and hold the number key to dial the corresponding number.
- **More:**
  - 1> **Call Time Display:** You can set Call Time Display On or Off. The call time will display when set it on, .The call time won't display when set it off.
  - 2> **Call Time Reminder:** In order to save some calling cost, this function prompts you to end the call in time. You can select Off, Single, or Periodic. There is no prompt when Off is selected. You should enter a specific time between 1 and 3000 seconds when Single is selected. The phone will ring once when the time is up. You should enter a specific time between 30 and 60 seconds when Periodic is selected. The phone will ring once automatically at the specific time before the integral minute is up.
  - 3> **Auto quick end:** You can set ON/ OFF, and set a time (0~9999) as your desire.
  - 4> **Line Switching:** Switch to Line 1 or Line 2, the default is Line 1.
 

**Note:** If Line 2 is selected, making calls from Line 2 depends on the network operator.
  - 5> **Close user group:** Press the left soft key to access Group List, and then select Add to input the group's name. Press the left soft key to select Done, and then add the index. Press the left key to finish. Select Option to Edit, Add, Activate, Deactivate or Delete the existent group.
 

**Note:** This service needs the network support.

### **Settings**

In the standby mode, press the left soft key to access **Menu > Settings**.

#### **User Profiles**

##### **General/ Meeting/ Outdoor/ Indoor/ Headset**

1. **Activate**
2. **Customize**

- **Tone Setup:** Includes Incoming Call, Cover Open, Cover Close, Message Tone, and Keypad Tone.
- **Volume:** Includes the volume setting of Ring Tone and Key Tone. The volume degree is from 1 to 7.
- **Alert Type:**
  - Ring: Just ringing, no vibration.
  - Vibration Only: Just Vibrating, no ringing.
  - Vibra and Ring: Vibrating and ringing.
  - Vibra Then Ring: Ringing after vibration.
  - Silent : No ring & no vibration
- **Ring Type:**
  - Single: Rings once when a call is coming.
  - Repeat: Rings continuously when a call is coming.
  - Ascending: Rings continuously and the volume increases gradually.  
**Tip:** Human singing tone cannot be played in Ascending Ring.
- **Extra Tone:**
  - Warning: If necessary, you will be warned by the prompt tone.
  - Error: You will be warned by a tone if you make a mistake.
  - Camp On: A prompt tone will be heard after searching the network successfully.
  - Connect: A prompt tone will be heard after getting through to the dialed number.
- **Answer Mode:**
  - Any Key: Press any key to answer a call (Except of Hang Up Key and Right Soft Key)

**Tips:**

1. Insert the earphone and the phone will access the Headset mode automatically. This mode has no Activate option.
2. Press and hold the # key to enable or cancel the silent mode.

**Phone Setup**

**Time and Date:**

- **Set Home City:** Select the desired home city.
- **Set Time/Date:** Enter the current time and date.

- **Set Format:** Select a time and a date format.
- **Schedule Power On/Off:** You can set the time for auto power on /off. Do turn the status on before using that function\.
- **Note:** Please disable the Schedule Power On function before you board an airplane.
- **Language:** Select the desired language for the display text.
- **Preferred Input Methods:** Select the desired input method for the default input method.
- **Greeting Text:** Set ON, input words as your greeting text once you switch the phone on.
- **Shortcuts:** You can set shortcuts for those functions you use often.
- **Dedicated key:** You can configure short cut functions for the Up, Down, Left and Right key respectively. In the standby mode, press any one of them to access the appointed function.
- **Auto update of date and time:** It can be set to ON or OFF.
- **Flight Mode:** You can set the normal mode, flight mode and Query When Power On.
- **Display Characteristic:**  
With this function you can configure the basic status of display characteristics including wallpaper, screen saver, power on display, power off display and so on.
- **Network Setup**  
Please contact the network operator for the following network service.
  1. **Network Selection**  
New Search or Select Network can help search the network where you are in. You can select the selection mode: Automatic or Manual. When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.
  2. **Preferred Networks**  
Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Option** to perform the following operations:
    - **Add From List:** Display all PLMN list.
    - **Create New:** Create a new network and set the network priority.

- **Change Priority:** Reset the selected Network Priority.
- **Delete:** Delete the current preferred network.

### 3. GPRS Connection

You can set it When Needed or Always to GPRS connection.

#### Security Setup

##### ▪ SIM Lock:

It is asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, it needs to input the PIN every time you power on. Three times wrong PIN input, it's asked to input PUK. PUK is used to release and modify the locked PIN. If PUK isn't provided or missed, please consult your network operator.

##### ▪ Phone Lock:

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password. 4-8 numbers can be used for the phone password.

##### ▪ Fixed Dial:

If this function is enabled, only phone numbers in the Fixed Dial List can be dialed. PIN2 is required for this function. Network support is also required.

**Note:** If you enter PIN2 after the phone is switched on, PIN2 is not required before the phone is switched off. Therefore, please switch the phone off and switch it on again after configuration, if you do not want others to change the status of the Fixed Dial.

##### ▪ Barred Dial:

If this function is activated, the phone numbers in the barred dial list cannot be dialed. PIN2 is required for the function. Network support is also required.

##### ▪ Change Password:

You can change PIN, PIN2, and phone lock password.

- 1> PIN
  - The original PIN is required before change the PIN.
  - Enter the new PIN. 4-8 numbers can be used for PIN.
  - Enter New PIN to ensure the New PIN.
- 2> PIN2
  - The original PIN2 is required before change PIN2.
  - Enter the new PIN2. 8 figures can be used for PIN2.
  - Enter the New PIN2 again to ensure the new PIN2.
- 3> Phone Lock Password

- The current phone password is required before change the phone password.
- Enter the new phone password.
- Enter the new phone password again to ensure the new phone password.

#### Restore Factory Settings

Access **Settings** to select **Restore Factory Settings**, and press OK. All settings can be restored to factory settings with this function.

#### Multimedia

##### Audio Player

The Play, Stop, Back, Forward functions correspond to the Up, Down, Left and Right Key respectively. Select **List** to access the **Play List**, and then select **Option** to perform the following functions: Play, view Details, Add to Rings, Settings and so on.

**Note:** You should set Player Settings > List Auto Gen OFF at first if you want to add music from other folder.





##### Sound Recorder

The mobile phone supports two recording formats: WAV and AMR. You can record conversations, which may be saved to the **Ring Tone** folder under **File Manager**. If there is a record, press the left soft key you can do: Record, Play, Append (only for AMR), Rename, Delete, Delete All, Settings and Forward.

**Note:** If a call is incoming while recording, the record will abort and the data will be saved into the record folder automatically. AMR adopts dynamic compression and provides a longer recording time than WAV's while utilizing the same storage space.

##### FM Radio

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector. Select **FM Radio** in the **Multimedia** to access the radio controls.

1. Press the Down key to change the icon  or  alternately.
2. When the screen display the icon , you can press the Left/Right key to search and set the previous or next active FM station.
3. When screen display the icon , you can press Left/Right key to step down/up to the next frequency setting.

4. Press the Down key to turn on or off the radio.
5. Press the side Keys to adjust radio volume
6. Press **Option** to access the following options:
  - **Channel List:** you can save 9 FM channels. Save a channel: select edit to enter the channel name and frequency, press done to save. Delete a channel: select edit, press right soft key to clear name and frequency, then press “done”.
  - **Manual Input:** you can set the channel and receive the channel directly.
  - **Preset Auto Search:** the phone can search the useful channel automatically and reset the channel list.
  - **Settings:** Includes the “Background Play Mode”, “Skin” and “Loud Speaker” setting and so on. If you set the “Background Play Mode” on, you can listen to the FM broadcast when you use other function of the phone. If you set the “Loud Speaker” on, it will become an amplifier. You can listen to the FM broadcast without fitting the earphone over your ears.

### Melody Compose

The mobile phone enables you to compose your favorite music as the tune of the incoming call, alarm or memo.

**Note:** The phone can save multiple tones edited according to the volume of tones.

When the Tune Editing List is blank, you can edit your favorite tunes by pressing “Add”. After you have finished editing, press **Option** to select a music instrument or playing speed to play the editing tunes. You also can save the editing tunes.

Select the edited music, and press **Option** to perform the following operations: Play, edit, add rename and so on.

**Note:** A maximum of 150 notes can be edited with a piece of self-edit tune.

In the window of Tone Editing, press **Option** to perform the following operations: Play, adjust play speed and so on.

The rules by which the tone is composed as follows:

- 0: Insert one pause;
- 1: Insert Do;

- 2: Insert Re;
- 3: Insert Mi;
- 4: Insert Fa;
- 5: Insert So;
- 6: Insert La;
- 7: Insert Si;
- 8: Insert a vibration note;
- 9: Insert a backlight;
- \*: Modify the playing rhythm of the current tone;
- #: Modify the current note with halftone;
- ↑: Modify the tone of current note (high, middle, low);
- ↓: Modify the tone of current note (high, middle, low)

### Fun & Games

There are several interesting games in the phone. Please refer to instructions from the game menu for more details.

**Tip:** The game menu includes Start Game, Best Grades and Game Help.

### Organizer

#### Calendar

You can Jump to a specific date.

#### To Do List

You can View, Add, Edit Task, Delete, Delete All and Send vCalendar as desired. Start up the **Memo** and press OK. Press **Option> Add** or **Add** to access to add a new memo.

#### Alarm

The mobile phone provides several alarms and you can set them at your preference. If you have set an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select “Edit” to set the alarm.

**Tip:** You can set FM Radio as your alarm Audio options.

#### Calculator

The calculator can add, subtract, multiply and divide. To use the calculator:

1. Press the # key to enter the decimal point
2. Press the up, down, left and right key and OK key to select +, -, \*, /, = respectively.
3. Press **Clear** to delete the figure.

### Stopwatch

The stopwatch has two modes - Split Timing and Lap Timing, and you can view the records of both the modes.

### Units Converter

You can make the units conversion for weight and length. Enter the number into the column, and then press "OK" to get the result.

### Currency Converter

You can make currency conversions. Press **OK** after enter the exchange rate, and then enter the number of the currency, and press **OK** to get the result.

### World Clock

Scroll to browse every city's time zones in the world map. The related date and time will display at the bottom of the screen.

### Health

Provides the reference of body mass index (height, weight and sex), and the reference of menstrual period.

### Services

#### STK Service

In addition to the functions available in the phone, your SIM card may provide additional services, which is supported by your SIM card. Please consult your network operator for more information.

#### WAP

WAP enable you tour around the Internet world easily and pleasantly. Please follow the steps described as below:

1. **HomePage:** The default Internet Web Address.
2. **BookMarks:** Save the Web address you often use.
3. **Recent Pages:** Records after you browse the Website.
4. **Offline Pages:** to view the offline pages.
5. **Input address:** Press the left soft key to access Enter Address, and then input the web address to go to the Internet.
6. **Service inbox:** to view your push message.
7. **Settings:** You can configure: Edit Profile, Browse Options, Service Message Settings, Clear Cache, Clear Cookies and Trusted Certificates options and so on.

#### Data Account

Press the left soft key to perform following steps:

1. **GSM Data:** Edit the GSM account.
2. **GPRS:** Edit the GPRS account.

### File Manager

#### Memory Card

There are all files saved in your phone. You can Open, Create Folder, or Format.

#### 1> Open

Use the function to access the root directory of Micro SD Card(T-Flash Card). It will list the default folders in the system, the folder created by the user and user files. (There are only system default folders at the first time of power on or on condition that the user never changed the root directory).

- If the specified one is 'folder', press **Option** to perform the following operations:
    - **Open:** You can open the specified folder.
    - **New Folder:** You can create a new folder in the specified folder.
    - **Rename:** You can rename the specified folder.
    - **Delete:** You can delete the specified folder.
    - **Sort by:** You can sort all files in the USB disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.
  - Press **Option** if the specified item is a file. For different kinds, you can perform the following operations: View(Play), Forward, Details, Rename and so on.
- 2> **New Folder:** Use the function to create a new folder at a specified place.
- 3> **Format:** Use the function to format all data in the USB disk. The system will recreate a new folder. The formatted data cannot be recovered, so please use this function carefully.
- 4> **Remove:** to remove the memory card.



## Trouble Shooting

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the authorized service center or the store from where you purchased the phone.

Problems	Solutions
Can not answer or make a call	<p>Make sure that the phone has been switched on.            Make sure that the battery is charged.            Make sure that the signal intensity is high enough.            Make sure the own number function in the call setting is system preset or number sending.            Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function.            Check whether you have set up call diverts. Check whether you have inserted the proper SIM card correctly.</p>
Low voice	Check if the volume has been set too low.
No ring	<p>Check whether you have set up the "Vibrating Only" option.            Check whether the ring volume is not too low            Move away from a noisy place to check if you can hear the phone ringing.            Check whether you have set up call diverts.</p>
LCD unclear	Check whether the contrast has been set too low.
T-Flash card detect slowly	<p>Format your T-Flash card with your phone.  <b>Note:</b> To protect your files from getting lost, please backup the important information into the safe place before you formatting card.</p>

## Security Setup

### Use of Passwords

Your mobile phone and SIM card have various passwords. Those passwords avoid unauthorized use of your phone and SIM card.

#### Phone Code

The Phone code can be used to avoid unauthorized use of your phone. The factory setting for the phone code is 1234. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

#### PIN (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card from unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the password is asked every time the phone is turned on.

Three times wrong PIN input, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

1. Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press **OK**.
2. If you are prompted to enter the new PIN again, enter it and press **OK**.
3. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset.

#### PUK (8 digits)

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. Please contact your network operator for the code.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

#### PIN2 (4 to 8 digits)

The PIN2 code, supplied with some SIM card, is used for some functions, such as Call Cost, Fixed Dial and so on. Please consult your network operator to confirm whether your SIM card supports those services or not.

Three times wrong PIN2 code input, the SIM card will be locked and you will need to use the PUK2 to unlock it.

1. Enter the correct PUK2 to unlock PIN2, and then enter the new PIN2 and press **OK**.

2. If you are prompted to enter the new PIN2 again, enter it and press **OK**.

### **PUK2 (8 digits)**

The PUK2 code, supplied with some SIM card, is required to change a blocked PIN2 code. It may be supplied with the SIM card. If not, contact your network operator.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

### **Barring Code**

To activate call barring, you need a Barring Code. You obtain the password from your service provider.

## **Health and safety information**

### **Charing and Discharging**

- The charger is designed to be used in temperatures between 0°C to 40°C.
- Do not charge the phone in wet and damp conditions.
- Use only batteries approved by the phone manufacturer and recharge your battery only with the charges approved by the manufacturer.
- We strive to produce products in compliance with global environmental standards
- The charger meets the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.
- Your phone is powered by a rechargeable battery. Full performance of the battery is achieved only after two or three complete charge and discharge cycles.
- When the battery level is low, "Low Battery" will be displayed on the LCD screen. If you have selected Alert Tone (Warning Tone of any profile in Profiles), the phone will sound the alert tone.
- When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging may shorten its life.
- Temperature extremes will affect the ability of your battery to charge.

### **Tips for Battery**

- Placing the battery in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.
- Do not let metal contacts on the battery touch other metal contacts. It could short-circuit and damage the battery. Use the battery only for its intended purpose.
- Do not disassemble or modify the battery by yourself.
- Do not clean the battery with water or any organic solvent.
- Always keep the battery dry.
- The battery can be charged and discharged many times but it will wear out as last. When the talk and standby time is obviously shorter than normal, please change the original battery approved by manufacturer.
- Do not short-circuit the battery.
- Turn off mobile phone before removing the battery.
- Do not dispose of batteries in fire.
- If you smell anything strange from the battery or find that the battery is overheated, you should stop using it immediately and contact the authorized After Service Center in your region.
- If you don't use the battery for a long time, please fully charge the battery before you store it.



Batteries should never be placed in municipal waste. Batteries must be recycled or disposed of properly. Please follow local regulations for disposal of batteries.

### **Vehicle Use**

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use handsfree solutions intended for use with your phone.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna supports the installation.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

**Note:** Use of cellular phones on board an aircraft may cause interference to the aircraft's navigational system. FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft.

## Usage & Maintenance

To maintain your product at an optimal functioning level, take a moment to review the following usage & maintenance tips, which will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of children's reach.
- Your products are not water-resistant. Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode the connectors.
- Always treat your products with care and keep it in a clean and dust-free place.
- Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10°C and 55°C.
- Do not expose your product to open flames or lit tobacco products.
- Do not attempt to disassemble or modify your product. Only authorized personnel should perform service.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it.
- Keep anything magnetic, such as credit cards, far away from your product.
- If you find that the battery has any crack, deformation or anything else, you should stop using the battery immediately.
- If the electrolyte leak out and contact your skin or clothes, you should immediately use soap and clean water to clean it. In case the electrolyte spatters into your eyes, you must use the clean water to wash your eyes thoroughly and go to the hospital immediately.
- If your phone or any accessory doesn't function normally, please send them to the nearest authorized service facility. The qualified personnel there will assist you, and if necessary, arrange for service.

## Radio Frequency (RF) Exposure and SAR

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types i300 (FCC ID: WA6I300) has also been tested against this SAR

limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.542 W/kg and when properly worn on the body is 0.876 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

### **Emergency Calls**

This phone, like any wireless phones, operates using radio signals, wireless and landline networks which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies)

To make an emergency call:

- 1> Switch your phone on.  
Some networks may require that a valid SIM card is properly inserted in the phone
- 2> Dial the official emergency number. Emergency numbers vary by location.

While making an emergency call, please remember to give all information as particularly as possible. Never hand off the call please until you are given permission to do so.

### **Term definition**

To help you understand the terms used in this manual we provide the definition of the terms below.

#### **ALS (change lines service)**

ALS provides the function to connect with two lines in the same SIM Card. Dial and receive call in one of the lines as required when using this service.

#### **Call Limitation**

Limit the outgoing and incoming calls.

#### **Call forwarding**

Forward an incoming call to another mobile phone or telephone.

#### **Call Keeping**

Keep another call when receiving and making a Call; switch them if necessary.

#### **Call Waiting**

Notify user another call is coming while another call is in progress.

#### **Line identification service (show incoming call)**

The user can view the phone number of incoming call and hide or display user's phone number on other party's phone. GSM (Global System for Mobile Communication) International Standard of Cellular mobile communication can ensure compatibility between different network providers.

### **Multi-parties calls**

Establish conference calls that allow up to 5-party- participants simultaneously.

### **Roaming**

Use mobile phone outside of local service area.

### **SIM Card (Subscriber Identity Module Card)**

SIM Card contains CMOS chip, which contains information of (network or memorizer information, and users' individual data). SIM Card can be inserted into small slot back of mobile phone after removing the battery.

### **SMS (Short Message Service)**

Network service function that enables sending messages to other mobile phones or receive messages without making a phone call with the other party.

### **Soft key**

Functions of Left Soft Key (LSK) and Right Soft Key (RSK) in mobile phone:

To change the current menu.

To select/confirm the menu

### **Voice Mail Server**

Computer response service: it will automatically give response (your own voice can be used), send greetings and record information when you cannot answer a call.

### **Other**

**GPRS** :General packet radio service

**SMS-CB**: Short message service- Cell Broadcast

**WAP**: Wireless application protocol

**FDN**: Fixed dialing number International Mobile Equipment

**IMEI**: Identification code, which consists of 15 digits, one mobile phone has only one corresponding IMEI number.