

I605/I604

User's Manual

Improvements and changes to this guide due to typographical errors, inaccuracies of current information, or improvements to the programs and/or equipment, may be made by Verykool USA, Inc. at any time without notice.

SAFETY PRECAUTIONS

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.











	Do not use wireless phones while driving.
	Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.
	Do not use mobile phones near fire. Follow every rules and regulations. .
	Do not use mobile phones at refueling point. Don't use near fuel or chemicals.
	Follow every rules and regulations in hospital and health care facilities. Switch off your phone near medical equipments.
	All wireless devices may cause interference.
	Only qualified service personnel can install or repair this device.
	Use only approved accessories and batteries.
	Use the device only in normal position. Do not expose your phone to extreme high temperatures above +60°C (+140°F). Do not use anything static to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.

Table of Content

GENERAL INFORMATION	1
Antenna.....	1
Network Service.....	1
Accessories.....	1
KNOW YOUR MOBILE PHONE	2
Positions of Phone Keys.....	2
Functions of Keys.....	3
Display Screen.....	4
Status Icons.....	5
Back Light.....	5
GETTING STARTED	6
First Call.....	6
Inserting the SIM Card.....	6
Inserting the T-Flash Memory Card.....	7
Charging the Battery.....	8
Switching Your Phone On/Off.....	9
Using the Personal Handsfree Handset.....	9
CALLING.....	10
Making Calls.....	10
Answering Calls.....	11
Options in Call.....	11
GUIDE TO MENU OPERATIONS	12
Phone Book.....	12
Messages.....	12
Call Logs.....	14
Multimedia.....	15
File Manager.....	18
Settings.....	18
Organizer.....	23

Internet	24
IMPORTANT INFORMATION.....	26
Use of Passwords	26
Battery Information.....	27
Usage & Maintenance.....	29
Emergency Calls	30
APPENDIX	31
Appendix A: Guidance On Entry Methods.....	31
Appendix B: Troubleshooting	32

GENERAL INFORMATION

Antenna

Use of other antenna devices could damage your mobile phone and reduce performance. Your phone has a built-in antenna. Don't touch the antenna area unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Network Service

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what changes will apply. Some network may have limitations that affect how you can use network services.

Your service provider may have requested that certain features may be disabled or not activated in your device. If so, they will not appear in the device menu. Your device may also has been specially configured, this configuration may include changes. Contact your service provider for more information. For availability and information using SIM card services, contact your service provider.

Accessories

Li-Ion battery is the manufacturer-approved rechargeable battery available for your phone. May be some batteries perform best after several full charge/discharge cycles.

Use batteries, chargers and accessories approved by the phone manufacturer with this particular model. The use of any other type will invalidate any approval or warranty applying to the phone, and may be dangerous.

Please consult with your dealer for availability of approved accessories.





 

KNOW YOUR MOBILE PHONE

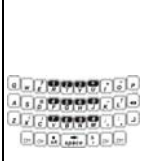



Positions of Phone Keys

1. Earpiece	10. Navigation [arrows] key
2. Display	11. Keypad
3. Left Soft key	12. Charger and USB data port
4. Music shortcut key	13. Earphone Jack
5. Dial key	14. Speaker
6. Right Soft Key	15. Battery Cover
7. Camera shortcut key	16. Camera
8. End and Power key	17. Microphone
9. OK key	18. Flashlight

Functions of Keys

Key	Name	Description
	Dial key	Making or answering a call. In the standby mode, press this key to access the Call Logs.
	End and Power key	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to return the standby mode and cancel current operations. Press this key to stop the alarm ringing once the alarm rings.
	Camera shortcut key	In the standby mode, press it to access Camera.
	Music shortcut key	In the standby mode, press it to access Audio Player.
	Left/Right Soft Keys	Use the left and right soft keys to execute to functions indicated at the left/right of the prompt bar on the screen.
	Navigation Key/ OK Key	Scrolling options in the function list or the phone book. In the edit mode, it is used for moving the cursor. In the standby mode, press it to activate a specified function.

	<p>Numeric Keys</p>	<p>Used to enter numbers, letters and some special characters. In the standby mode, long press the # key to activate Silent mode; long press the  Key to activate/ deactivate Torch Light; Long press the key 0 to activate the FM function.</p>
--	-------------------------	---

Display Screen











Your mobile phone has a single LCD display, which consists of three main areas:

The First line displays status icons, which indicate the signal strength, the remaining power of the battery, etc.






The Middle lines display text and graphics, including numbers, text, animated icons and the information you enter.

The Last line displays the currently available operations assigned to the left or right soft key.

Status Icons

	Network Signal
	Connecting GPRS and using GPRS
	Divert all Voice Calls
	Auto Keypad Lock
	Alarm Clock is activated
	Battery Status
	Missed Calls
	New SMS/MMS or Message Memory Full
	WAP Message
	Bluetooth

Sound Status

	Ring only
	Vibrate only
	Vibrate and Ring
	Vibrate then Ring
	Silent

Note: The picture is for reference only; the product is subject to the real one.

Back Light

You can set the Back Light for the display and keypad through options in the menu. The backlight will be off automatically without any key operation.

GETTING STARTED

First Call

- Switch off your phone, remove the battery, insert SIM card. Enter the area code and phone number and press Dial Key.
Tip: Before you start insert a valid SIM card in your phone and charge the battery.
- SIM Card: Please refer to “Mounting the SIM Card” for more information on installation.
- Charging the battery: Please refer to “Charging the Battery” for more details.

Inserting the SIM Card

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network information, the phonebook data, SMS (short messages) and other data are stored in your SIM card.

Note: This particular phone model only supports the SIM cards of 1.8V and 3V.

- Some network operators don't offer PIN2 and PUK2, so functions using those passwords will be unavailable.
- The SIM card and its contacts can be easily damaged by scratches or bending, so be careful while handling, inserting or removing the card.
- Keep all SIM cards out of children's reach.

Note: Always make sure that the phone is switched off before you insert or remove the SIM card, otherwise SIM card may be damaged.

Procedure

1. Remove the battery cover by sliding down.
2. Insert the SIM card, with the notch at the bottom right and the gold contacts face down, into the card slot.



3. Replace the battery and close the cover tightly.

Note:

- If the SIM Card is not installed properly or gets damaged, "Insert SIM" will display on the screen after you switch on your phone. Remove the SIM Card and mount it again as shown in the picture
- If you have inserted the SIM correctly but still "Insert SIM" appears on the screen, please check there is no stain on the surface of the SIM card. If there are stains on it, please clean them with rubber carefully and then try again.
- If the screen displays that the SIM card is locked permanently, please consult with your network operator.

Inserting the T-Flash Memory Card

Please follow the steps as described below:

Open the metal cap from the Hinge Type Connector. Lay the T-Flash card with gold contacts facing down on the Connector, and then close it. Align the card to the arrow sign as showing the picture:



Charging the Battery

Note: Always keep your phone connector and charger dry.

1. Connect the connector of the travel adapter to the phone.



2. Plug the travel adapter into a proper AC wall outlet.
3. When your phone indicates that the battery is fully charged, please pull the travel adapter out from the I/O socket of the phone.



Tip: 1. If the battery is totally empty or not enough, it may take a few minutes before the charging indicator appears on the screen.

2. You can turn on/off, and use the phone while charging.

Warning: Make sure that the standard voltage/power of the place where you charge the battery matches with the rated voltage/power of our travel adapter.

Switching Your Phone On/Off

- Press and hold Power Key for a few seconds to switch on your phone.
- **If the phone asks for a phone lock code:**
Enter the phone lock code, and press OK.
- **If the phone asks for a PIN code:**
Enter the PIN code, and press OK. The PIN code is usually supplied with the SIM card. Please consult your network operator for more information.
- **Access the standby mode.**
Press and hold Power Key for a few seconds to switch your phone off.

Using the Personal Handsfree Handset

Connect the handsfree handset to your mobile phone, you can still answer calls and use the microphone without holding the phone.

CALLING

Making Calls

1. Enter the phone number (with the area code)
2. Press Dial Key to make a call through the respective SIM.
3. Press End Key to end a call.

Making International Calls

1. Press the * key twice for the international prefix symbol +.
2. Enter the country code, area code and phone number.
3. Press Pick up Key to make a call.

Clear Wrong Enters

Press right soft key to delete the last character on the screen. Hold right soft key will clear all you entered.

Making a call from the Phone Book

1. Press right soft key to access the **Phone Book List**. Scroll to search the desired number. (Enter the first letter or more of the name and press the selection key Up/Down to reach the desired name.)
2. Press Dial Key to call the number.

Recent Number Redial

1. In the standby mode, press Call Key to access the **Call Logs**.
2. Press the Up/Down key to reach the desired number or name and press Dial Key.

Speed Dialing

You can save 8 Speed Dial Numbers you often dial to positions titled with number keys from "2 ~ 9" respectively. Select "**Phonebook > Options > Phonebook settings > Speed Dial > Set Number**", and then set "Status" on. In the standby mode, press and hold the number key to dial the corresponding number.

Adjusting the Sound Volume

During a call, you can press the Up/Down Key to adjust the earpiece volume.

Answering Calls

1. To answer an incoming call, press Call Key or left soft key.
2. To end or reject an incoming/ongoing call, press End Key.

Options in Call

Your phone provides a number of functions that you can use during a call.

During a call, you can access Hold/End single call, New Call, Phone Book, Message, Sound Recorder and other functions.

GUIDE TO MENU OPERATIONS

All functions about the mobile phone is listed as below with brief descriptions.

Phone Book

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records will display in the middle of the screen. You can locate your records by up/ down Navigation key and pressing OK key, and then you can view, send SMS, call and so on.

Messages

Write Message


SMS

A SMS is a text message that can only contain letters, numbers and symbols. You can create a SMS using this sub-menu.

Multimedia message

A Multimedia message or MMS can contain letters, an image, audio or video file. Go to main menu > messages and then select Write message to create a multimedia message.

Inbox

The icon  means an unread message or the message box is full. You would not receive new messages once the message box is full. Please delete unnecessary messages.

1. Select the unread message, and press the left soft key to read.
2. Select **Options**, and then you can reply, delete, forward and so on.

Drafts

In **Drafts**, please select **Options**, and then you can send, edit or select other operations.

Outbox

The screen will display the message list once you select the **Outbox**.

1. Select "OK" to read the current messages.
2. Select **Options**, and then you can send, edit or select other operations.

Broadcast Message

This network service enables you to receive all kind of text messages, such as weather reports or transportation information. There are several networks who afford this service in this world. Please consult your network operator for more reference.

- **Receive Mode:** Turn on or off the Cell Broadcast.
- **Read Message:** Scroll the Up/Down Key to select the message.
- **Languages:** Select the desired language to display the broadcast message.
Note: Your network operator decides whether the language is supported or not.
- **Channel Settings:** You can choose Select, Add, Edit or Delete to receive the Broadcast information.

Templates

Your mobile phone has many commonly used terms pre-saved. You can edit, remove or write messages using these pre-saved templates.

Message Settings

You can set the default information about SMS properties.

Schedule Messages

Press the left soft key to access the Add or Options > Add, and then you can set the date, time, message, enter number, and select SIM card. Press Done and Save, the message will be sent out to the number of your choice.

Note: The time format of this function is 24 hours.

Call Logs

In the standby mode, press left soft key to access **Menu > Call Logs**.

Missed Calls

With this function, you can check recent calls.

Scroll the Up/Down key to select a missed call.

Press OK key to access **Missed Call Information**, and you can Delete, Save to Phone book, call, Edit and so on.

Dialed Calls

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Call, Edit and so on.

Received Calls

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Call, Edit and so on.

Call Log Backup

You can backup all your important Call logs in the memory card by accessing Call log Backup sub-menu.

Delete Call Logs

You can delete all records of missed calls, dialed calls or received calls with this function or Delete all folders drastically.

Call Timers

- Last Call: The last call time can be checked.
- Dialed Calls: The total time for all dialed calls can be checked.
- Received Calls: The total time for all received calls can be checked.
- Reset All: Reset the counters.

Text msg. Counter

- Sent: You can check and clear the number of sent messages.
- Received: You can check and clear the number of received messages.

Note: This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

GPRS Counter

You can check or reset the Last Sent, Last Received, All Sent, All Received and Reset Counter.

Multimedia

Camera

CMOS camera is built in to your mobile phone. .

Select **Camera** in **Multimedia** menu to activate the camera, press the OK key/the number key 0 to take a photo. Press the left soft key to access the following options:

Photos: With this function, you can view, browse style, forward, rename, delete and do some other operations with these pictures.

Camera Settings: You can configure the basic settings of camera.

Image Settings: You can set the size and quality of these images.

Tip: You can use the Left/Right selection key repeatedly to select the desired option.

White Balance: Adjust the color balance of the image. You can make your photo appear warmer or cooler.

Scene Mode: You can set Auto or Night.

Storage: To set the default storage path.

Restore Default: Camera Parameters will be restored to factory parameters with this function.

Photos

The Image Viewer provides you with a quick view of the picture functions. Please refer to the **Photos** operations of the Camera for more details.

Video Recorder

You can record videos of special moments with this function. Press OK key to start/pause record.

Press the left soft key to access **Options**:

CamCorder Settings: You can configure the basic settings of camera.

Video Settings: You can set the quality of these images.

Effect Settings: Adjust the color balance of the video. You can make your video appear warmer or cooler.

Storage: You can store the Video in phone or T-Flash card.

Restore Default: Video Recorder Parameters will be restored to factory parameters with this function.

Tip: You can use the Left/Right or Up/Down selection key to select the desired setting option accordingly. Please refer the section "Camera" for more details.

Video Player

You can perform the following operations:

- **Play**: You can play the specified video.
- **Send**: You can forward the video via Bluetooth.
- **Rename**: You can rename the specified video.
- **Delete**: You can delete the specified video.
- **Delete All Files**: You can delete all videos.
- **Sort by**: You can sort all video files and display them in a new order; you can choose to Sort By Name, By Type, By Time, By Size and None.
- **Storage**: To set the default storage path.

Audio Player

The Play/pause, Stop/Back, Backward, Forward functions correspond to the OK key, right soft key, Left and Right Key respectively. Press the Up/Down key to adjust audio volume. Select **List** to access the **Play List**, and then select **Options** to perform the following functions: play, details, add to ringtones, refresh list, settings.

Note: The Audio Player of the phone will automatically play music files from the **My Music** folder. You may need to refresh it manually from the settings in case you have earlier opted for manual refresh settings.

Warning: Make sure the volume is set for optimized hearing when using the audio player.

Sound Recorder

The mobile phone supports WAV, AMR recording formats. You can record conversations, which may be saved to the **Audio** folder under **File Manager**. If there is a recording, press left soft key you can do: Play, Append (only for AMR), Rename, Delete, Delete All files, Use As and so on.

Note: If there is an incoming call while recording, the record will abort and the data will be paused. AMR adopts dynamic compression and provides a longer recording time than WAV's while utilizing the same storage space.

FM Radio

You can use your phone to listen to FM radio stations once the original Handset is plugged into the connector.

- Press the OK key to Power on/ off the FM radio.
- Press the # key to record the FM radio.
- Press the Left/Right key to step down/up to the next frequency.
- Press the up /down key to adjust radio volume.
- Press Options to access the following options: channel list, manual input and so on.

Schedule FM

With this function, your phone can record the FM program as the schedules once the original Handset is plugged into the connector. You can set On/Off, the date and time, repeat style, channel settings and record settings.

File Manager

You can use the function to manage all types of files saved in the phone or the Memory card.

Games

There are several interesting games in the phone. Please refer to instructions from the game menu for more details.

Tip: The game menu includes Start Game, Game Level, Best Grades and Game Help.

File Manager

You can use the function to manage all types of files saved in the phone or the Memory card.

Settings

In the standby mode, press left soft key to access **Menu > Settings**.

Multi SIM Settings

Select Multi SIM open, Only Master SIM open, or Only Slave SIM open mode as desired.

User profiles

The phone provides seven pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are General, Silent, Meeting, Outdoor, Flight Mode and My Style. The phone will automatically enter the headset profile if you connect the headset to your phone.

General

Activate

Customize

You can customize the Alert Type, Ring Type, Master/Slave SIM Incoming Call, Ringtone Volume, Master/Slave SIM Message, Message Volume, Keypad, Keypad Volume, Power on/off and System Alert.

Reset

If you select reset and press "Yes", all settings will be restored to factory settings.

Silent

You can set On or Off.

Meeting

Please refer to "General" for more details.

Outdoor

Please refer to "General" for more details.

My style

Please refer to "General" for more details.

Flight Mode

You can set On or Off.

Phone Settings**Time and Date**

- **Set Home City:** Select the desired home city.
- **Set Time / Date:** Enter the current time and date.
- **Set Format:** Select a time and a date format.

Auto Power On / Off

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

Note: Please disable the Auto Power On function before you board an airplane.

Language

Select the desired language for the display text. In i600 you can select 3 language options English, French, Spanish.

Pref. Input Methods

Select the desired input method for the default input method.

Display Settings

With this function you can configure the basic status of display characteristics including Wallpaper, Screen saver, Power On Display,

Power Off Display, Show date and time, Show Operator name, Show owner number, and Clock type.

Dedicated key

You can configure short cut functions for the Up, Down, Left and Right key respectively. In the standby mode, press any one of them to access the appointed function.

Auto update time

It can be set to On or Off.

Dazzle Ringtone

Abb Har Bar Naya Gana Bajega! You like lot of songs and also like to set those songs to be your ring tones?? For this you had to change the ring tone every time with a new song.

Not anymore. i605 gives you the feature of Dazzle/Shuffle Ringtones. Where you can set up to 10 songs in one time as your ring tone.

Now whenever a new call will come every time a new song will play as your ring tone.

Keypad light Setting

You can configure the Keypad light's State, Start time and End time.

UART Settings

When using this phone for GPRS, select different UART port to decide whether Master /Slave SIM to be used.

Misc. Settings

LCD backlight: You can set the LCD backlight.

Master/Slave SIM Call settings

- **Call Waiting:** Activate, the network will notify you of a new incoming call while you have a call in progress (Net work Service).
- **Call Divert:** This network service allows you to divert your incoming calls to another number. For details, contact your service provider.
- **Call Barring:** Activate, this network service allows you to restrict incoming calls from your phone. For details, contact your service provider.
- **Line Switching:** you can switch between Line1 and Line2.

Advanced settings

- **Blacklist:** When this Black list is enabled, you won't receive the calls from the numbers entered in the Blacklist.
- **Auto redial:** On, the phone will automatically redial the last dialled number after a while if you fail to connect to the number. Press Abort to end Auto Redial.
- **Call Time Reminder:** This function prompts you to end the call in time to save the call cost. You can select Off, Single, or Periodic.
- **Auto quick end:** You can set ON/ OFF, and set a time (1~9999s) as your desire.
- **Answer mode:** If **Any key** is selected, you can press any key to answer a call.

Network Settings

Please contact the network operator for the following network service.

1. Network Selection

You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

2. Preferences

Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Options** to perform the following operations:

- **Add From List:** Display all PLMN list.
- **New:** Create a new network and set the network priority.
- **Change Priority:** Reset the selected Network Priority.
- **Delete:** Delete the current preferred network.

Security Settings

- **Master/Slave SIM Security:** You will be asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, you will need to input the PIN every time you switch on the power. If you enter incorrect PIN three times, you will be asked to enter PUK. PUK is used to release and modify the locked PIN. If PUK is not provided or missed, please consult your network operator.
- **Phone security:** You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be asked to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is 1122.
- **Auto keypad lock:** You can lock/unlock the phone keyboard and set the Key Lock Time to Off, 5 sec, 10 sec, 30 sec, 1 min, and 5 min.
- **Mobile Tracker:** Now do not panic, even if your handset is misplaced. The Mobile Tracker feature in M-6800 allows you to keep a track of your handset if it is lost. Just activate Mobile Tracker application and assign the numbers, so that if you lose your handset, you can receive a warning SMS on those pre-defined numbers. The default password is 1122.

Restore Factory Settings

Access **Settings** to select **Restore Factory Settings**, and press OK. All settings can be restored to factory settings with this function. The default password is **1122**.

Bluetooth

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

Shortcuts

You can set shortcuts for those functions you often use.

Organizer

Calendar

You can view and edit the memo of a specified date with this function.

1. **View:** You can view or edit the daily arrangement of the day.
2. **View All:** You can view or edit all the daily arrangement of the day.
3. **Add Event:** You can select task types: Reminder, Meeting, and Course.
4. **Delete Event:** You can select delete entries form All, Overdue, Spec Period.
5. **Jump to Date:** Skip to the specified date to view or edit the daily arrangements of the day.
6. **Go To Weekly/Monthly View:** Go to the specified date to check which week/Month it is.

Tasks

You can View, Add, Edit, Delete, Delete Overdue, Delete All, Send Vcalendar and Save As File as desired. Start up the **Tasks** and press OK. Press **Add** to access to add a new memo.

Alarm

The mobile phone provides 5 alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select "Edit" to set the current alarm.

World Clock

Scroll to browse every city's time zone in the world map. The related date and time will display at the bottom of the screen.

Calculator

The calculator can add, subtract, multiply and divide.

Unit Converter

You can make the units conversion for weight and length. Enter the number into the column, and then press "OK" to get the result.

Currency Converter

You can make currency conversions. Press OK after enter the exchange rate, and then enter the number of the currency, and press OK to get the result.

Stopwatch

The stopwatch has two modes - Split Timing and Lap Timing, and you can view the records of both the modes.

Flash Light

You can turn On/ Off the Torch light function by long press of "Space" Key on ideal screen mode.

Internet**Internet**

WAP enable you tour around the Internet world easily and pleasantly. Please follow the steps described as below:

1. **Homepage:** The default Internet Web Address.
2. **Bookmarks:** Save the Web address you often use.
3. **Input Address:** Press the left soft key to access Enter Address, and then input the web address to go to the Internet.
4. **Recent Pages:** Records after you browse the Website.

5. **Settings:** You can configure Profiles, Browser Options, Service Message Settings, Clear Cache, Clear Cookies and Trusted Certificates.

Data Account

Press the left soft key to perform the following steps:

1. **GSM Data:** Edit the GSM account.
2. **GPRS:** Edit the GPRS account.

STK Service

This service is offered as the SIM card service provided by the network operator.

IMPORTANT INFORMATION

Use of Passwords

Your mobile phone and SIM card have various passwords. Those passwords prevent unauthorized use of your phone and SIM card. You can change PIN, PIN2 and phone password in the "Settings > Security Settings".

Phone Code

The Phone code can be used to avoid unauthorized use of your phone. The factory setting for the phone code is 1122. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

PIN (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card from unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, you will be asked for the password every time the phone gets turned on.

If you enter incorrect PIN three times, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

1. Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press **OK**.
2. If you are prompted to enter the new PIN again, enter it and press **OK**.
3. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset.

PUK (8 digits)

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. Please contact your network operator for the code.

Note: If you enter wrong PUK ten times, the SIM card gets invalid. In that case, you have to consult with your network operator for a new SIM card.

PIN2 (4 to 8 digits)

The PIN2 code, supplied with some SIM card, is used for some functions, such as Call Cost, Fixed Dial and so on. Please consult your network operator to confirm whether your SIM card supports those services or not.

If you enter wrong PIN2 code for three times, the SIM card gets locked and you will need PUK2 to unlock it.

1. Enter the correct PUK2 to unlock PIN2, and then enter the new PIN2 and press **OK**.
2. If you are prompted to enter the new PIN2 again, enter it and press **OK**.

PUK2 (8 digits)

The PUK2 code, supplied with some SIM card, is required to change a blocked PIN2 code. It may be supplied with the SIM card. If not, contact your network operator.

Note: If you enter wrong PUK2 ten times, the SIM card will get invalid. In that case, you have to consult your network operator for a new SIM card.

Barring Code

To activate call barring, you need a Barring Code. You can obtain the password from your service provider.

Battery Information

Charging and Discharging

- The charger is designed to be used in temperatures between 0°C to 40°C.
- Do not charge the phone in wet and damp conditions.
- We strive to produce products in compliance with global environmental standards

- The charger meets the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.
- Your phone is powered by a rechargeable battery. Full performance of the battery is achieved only after two or three complete charge and discharge cycles.
- When the battery level is low, "Low Battery" will be displayed on the LCD screen. If you have selected Alert Tone (Warning Tone of any profile in Profiles), the phone will sound the alert tone.
- When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging may shorten its life.
- Temperature extremes will affect the ability of your battery to charge.

Tips for Battery

- Placing the battery in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.
- Do not let the metal contacts on the battery touch another metal contact. It could short-circuit and damage the battery. Use the battery only for its intended purpose.
- Do not disassemble or modify the battery.
- Do not clean the battery with water or any other organic solvent.
- Always keep the battery dry.
- The battery can be charged and discharged many times but it will wear out as last. When the talk and standby time is obviously shorter than normal, please change the original battery approved by manufacturer.
- Do not short-circuit the battery.
- Turn off mobile phone before removing the battery.
- Do not dispose of batteries in fire.
- If you smell anything strange from the battery or find that the battery is overheated, stop using it immediately and contact the authorized **Service Center** in your region.

- If you are not using the battery for a long time, please fully charge the battery before you store it.



Batteries should never be placed in municipal waste. Batteries must be recycled or disposed off properly. Please follow the regulations for disposal of batteries.

Usage & Maintenance

To keep your product working well, take a moment to review the following usage & maintenance tips, which will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of children's reach.
- Your products are not water-resistant. Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode the connectors.
- Always treat your products with care and keep it in a clean and dust-free place.
- Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10°C and 55°C.
- Do not expose your product to open flames or lit tobacco products.
- Do not attempt to disassemble or modify your product.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not use strong chemicals, cleaning solvents, or strong detergents to clean it.
- Do not keep any magnetic objects, like credit cards, near your product.
- If you find any crack on the battery, deformation or anything else, stop using the battery immediately.
- If the electrolyte leaks out and contact your skin or clothes, you should immediately use soap and clean water to clean it. In case the

electrolyte spatters into your eyes, use clean water to wash your eyes thoroughly and go to the hospital immediately.

- If your phone or any accessory doesn't function normally, please send them to the nearest authorized service facility. The qualified personnel will assist you, and if necessary, arrange for service.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies)

To make an emergency call:

1> Switch on your phone.

Some networks may require that a valid SIM card is properly inserted in the phone

2> Dial the official emergency number. Emergency numbers vary by location.

While making an emergency call, please remember to give as detail information as possible. Never disconnect the call until you are given permission to do so.

APPENDIX

Appendix A: Guidance On Entry Methods

This phone provides several input methods which can be used in editing the Phone Book, Short Messages, Memos, Greetings, Alarms and other text applications.

The Icons of Input Methods

After entering different kinds of edit windows (including edit phonebook, short messages. etc.), the icons of input are as follows:

“**123**”: The Entry method of Numeric appears as: “123”

“**ABC**”: The entry method of Multitap ABC appears as: “ABC”

“**abc**”: The entry method of Multiitap abc appears as: “abc”

“**Abc**”: The entry method of Multiitap Abc appears as: “Abc”

“**ES**”: The entry method of Multitap ES appears as: “ES”

“**Es**”: The entry method of Multitap ES appears as: “Es”

“**es**”: The entry method of Multitap es appears as: “es”

“**FR**”: The entry method of Multitap FR appears as: “FR”

“**Fr**”: The entry method of Multitap FR appears as: “Fr”

“**fr**”: The entry method of Multitap fr appears as: “fr”

How to Switch Between the Input Methods

Please press the left soft key to access **Options > Input method**, to switch the input methods.

E.g.: If the current input is abc the screen will show “abc”. Press the left soft key to access **Options > Input method > 123**, and the screen will show “123”.

Press the “**Abc**” key to switch the uppercase and lowercase.

How to Input Special Symbols

If you want to input special symbols, such as “ @ = < >”, Etc., please press the “Sym” key at the left bottom of your keypad.

Appendix B: Troubleshooting

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the authorized service center or the store from where you purchased the phone.

Problems	Solutions
Can not answer or make a call	Make sure that the phone has been switched on. Make sure that the battery is charged. Make sure that the signal intensity is high enough. Make sure the own number function in the call setting is system preset or number sending. Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function. Check whether you have set up call diverts. Check whether you have inserted the proper SIM card correctly.
Low voice	Check if the volume has been set too low.
No ring	Check whether you have set up the " Silent " option. Check whether the ring volume is not too low. Move away from a noisy place to check if you can hear the phone ringing. Check whether you have set up call diverts.
T-Flash card slow detect	Format your T-Flash card with your phone. Note: To protect your files from getting lost, please perform backup of important information before formatting your card.

FCC Warning

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Product, model number: I605, I604 (FCC ID: WA6I605) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the head is 0.355W/kg and when properly worn on the body is 0.944 W/kg. The device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user body and the back of the handset. The use of belt clips, holders and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.