

Since this device is always used with outboard system, it is not sold to general end users separately.

Therefore there is no user manual of this device by alone.

This document is an excerpt from a user manual of outboard system.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC/IC

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la Partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

1. Smart Keyless functions

The Smart Keyless functions (Keyless entry system) enables the following operations while the Hand Unit is being carried.

- When the operator pushes the Start Button, the system is activated and the engine start propriety (permission / prohibition) is determined.
- The engine start is permitted if the operator is only within operational range while the Hand Unit is being carried.
- The operational range for the engine start permission is up to 80 cm (2.6 feet) from the center of the Start Button in the control panel.

1) Engine start permission

(1) In the case of permission

The buzzer sounds 3 times, and LED on the control panel turn on.

(2) In the case of permission

The buzzer sounds 4 times, and LED on the control panel turn off after flashing.

2) The System stop

The System will run out when pushing the Start Button in the engine stop state.

The buzzer sounds 1 time, and LED on the control panel turned off.

(3) Emergency engine stop

The engine is stopped by pushing the Start Button (1 second or more) at the engine operating state.

The buzzer continues to sounding, and LED on the control panel turned off.

The buzzer is stopped by pushing the Start Button again.

2. Remote system off function

- 1) In the engine stop state, the Remote function can be turned off the system by pushing the button on the Hand Unit. Then, (when the button on the Hand Unit is pushed), the buzzer sounds 1 time, and LED on the control panel turned off.

The operating range is up to 80 cm (2.6 feet) from the center of the Start Button in the control panel.

- 2) With the system off state, the engine can not be started.

3. Child Lock mode of the Hand Unit

- 1) When you continue pushing the button on the Hand Unit (1 second or more), it will be the Child Lock mode.

When it comes to tte Child Lock mode, LED of the Hand Unit is turned on 0.5 seconds.

In the Child Lock mode, the function of the 1 and 2 above can not operate.

- 2) To cancel the Child Lock mode, you must push the button of the Hand Unit (1 second or more) again.

When the Child Lock mode is released, LED of the Hand Unit is turned on 0.1 seconds.