

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

U.S.A

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CANADA

*This device complies with RSS-210 of Industry CANADA. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

1.Advanced Keyless Functions

1) Operating Range

Transmitter must be carried by the driver.

(1) Locking, unlocking the door

The operational range for locking/ unlocking the doors is up to 80cm(2.6ft) from the center of the front door handles.

(2) Starting the engine

The operational range for starting the engine includes nearly the entire cabin area.

2) Locking, Unlocking the Doors with Lock Switch and Unlock sensor.

Both doors can be locked/unlocked by pressing Lock Switch on the door handles / grasping the door handle while the transmitter is being carried.

(1) To lock

To lock the doors, press the Lock Switch. A beep sound will be heard once and the hazard warning lights will flash once.

(2) To unlock

To unlock the driver's door, grasping the door handle. A beep sound will be heard twice and the hazard warning lights will flash twice.

3) Starting the engine

Transmitter must be carried by the driver.

(1) Step on the brake pedal

(2) When the KEY indicator(green) illuminates, slowly press in the start button.

4) Turning off the engine

(1) The shift lever set to P or N position.

(2) Push the start button to turn off the engine.

2.Keyless entry Functions

The operation indicator light flashes when the buttons are pressed.

Keyless entry operation is designed to operate up to about 2.5m (8ft) from the Center of the vehicle.

1) Lock

To lock the doors, press the lock button on the transmitter. A beep sound will be heard once and the hazard warning lights will flash once.

2) Unlock

To unlock the doors, press the unlock button on the transmitter. A beep sound will be heard twice and the hazard warning lights will flash twice.