

## FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## U.S.A

\*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## CANADA

\*This device complies with RSS-210 of Industry CANADA. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## **1.Advanced Keyless Functions**

### 1) Operating Range

Transmitter must be carried by the driver.

#### (1) Locking, unlocking the door

The operational range for locking/ unlocking the doors is up to 80cm(2.6ft) from the center of the front door handles.

#### (2) Starting the engine

The operational range for starting the engine includes nearly the entire cabin area.

### 2) Locking, Unlocking the Doors with Request Switch

Both doors can be locked/unlocked by pressing the request switch on the doors while the transmitter is being carried.

#### (1) To lock

To lock the doors, press the request switch. A beep sound will be heard once and the hazard warning lights will flash once.

#### (2) To unlock

To unlock the driver's door, press the request switch. A beep sound will be heard twice and the hazard warning lights will flash twice.

### 3) Starting the engine

Transmitter must be carried by the driver.

#### (1) Slowly press in the start knob.

(2) When the KEY indicator(green) illuminates, turn the start knob to START position to start the engine.

### 4) Turning off the engine

Turn the start knob to the ACC position to turn off the engine.

## **2.Keyless entry Functions**

The operation indicator light flashes when the buttons are pressed.

Keyless entry operation is designed to operate up to about 2.5m (8ft) from the Center of the vehicle.

### 1) Lock

To lock the doors, press the lock button on the transmitter. A beep sound will be heard once and the hazard warning lights will flash once.

### 2) Unlock

To unlock the doors, press the unlock button on the transmitter. A beep sound will be heard twice and the hazard warning lights will flash twice.