



GET THE FREE MVMT STRIDE APP,  
AVAILABLE ON APPLE APP STORE  
AND GOOGLE PLAY STORE.



MVMT and the MVMT logo are trademarks of iWave Sicura Media, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by us under license. App Store is a registered trademark of Apple Inc. All other trademarks and trade names are those of their respective owners. ©2015

New York NY 10018  
Support@iwaveaudio.com  
www.iwaveaudio.com

Made in China exclusively for  
iWave Sicura Media, Inc.

**This product is not a toy.**

#### ⚠ Warning:

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

#### Fire and Electric Shock Hazard

- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Do not expose your speaker to extremely high or low temperatures it can cause malfunction.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.
- To reduce the risk of electric shock, do not remove cover (or back). Refer servicing to qualified service personnel.

#### Fall Hazard

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off of the edge.

#### ⚠ CAUTION:

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the units internal components .
- Do not attempt to repair, modify, or disassemble your speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage your speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your speaker prior to boarding an aircraft. Do not use the speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

#### FCC Disclaimer:

This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference, and
- 2- This device must accept any interference received, including Interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or on experienced radio/TV technician for help or assistance.

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RS5 standard(s). Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotopically radiated power (e.i.r.p.) is not more than that necessary for successful communication.



User Manual for SP2843



# STRIDER

## Bluetooth® Portable Speaker

### WITH BUILT-IN PEDOMETER





#### PACKAGE INCLUDES:

- 1 X BLUETOOTH SPEAKER
- 1 X USB TO MICRO USB CABLE

**IMPORTANT: PLEASE READ BEFORE USING THIS PRODUCT**

## FEATURES

1. Multi-Function Button
2. Volume Up & Next Track
3. Volume Down & Last Track
4. Sport Mode Button
5. SOS Alarm Button
6. Micro USB Input Port
7. Auxiliary Output Port

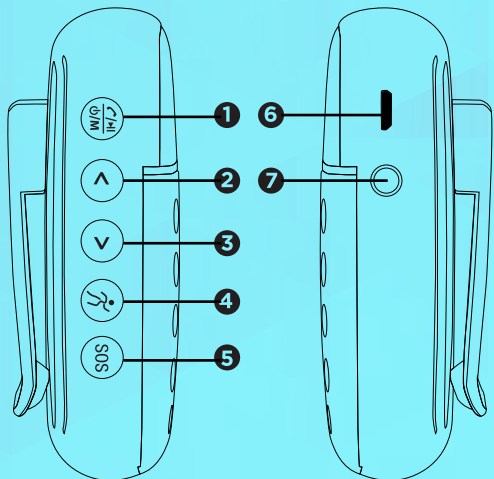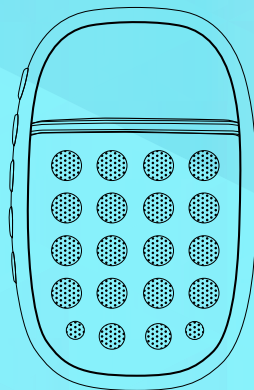

## CHARGING THE BLUETOOTH DEVICE

1. Connect the speaker's Micro USB socket (6) with the Power Source's USB port through USB cable.
2. The display will show a progress bar while the battery is charging. When the device has reached a full charge the device will show a full progress bar.
3. Disconnect the USB cable when it is fully charged. A full charge will take approximately 4-6 hours.

\*Please charge the speaker before first use.

## PAIRING / RECONNECTING THE DEVICE

1. Press and hold the Multi-Function button to turn on the device (1); the device's display will indicate bluetooth pairing mode.
2. Turn on the Bluetooth function of your device.
3. Search for "STRIDER" and select it to pair (for first time pairing or pairing a new mobile device).
4. The Speaker will reconnect automatically if your mobile phone has been paired previously. With some devices you will be prompted for a password, input "0000". (Depending on the device's type and configuration, reconnecting manually may be required.)
5. If pairing is successful, your speaker will make a tone to confirm.
6. When finished press and hold the Multi-Function (1) button to power off.

(Note: If you cannot search for the speaker, this means the last device is reconnecting automatically. Restart the speaker and hold the Multi-Function button until the Bluetooth mark brinks on the screen. This will indicate the device has entered Bluetooth searching mode.)

## SPEAKER CONTROLS AND FUNCTIONS

- When playing music, press the Multi-Function button (1) to pause and again to resume playing music.
- Short press the Volume Up button (2) to increases the volume.
- Short press the Volume Down button (3) to decreases the volume.
- Long press the Volume Up button (2) to play next track.
- Long press the Volume Down button (3) to play previous track.

## SPORT MODE FUNCTION



To sync and track activity data from the speaker to your smartphones, download the "STRIDER" app from App Store® / Google play store.

1. With the device powered on, long press the Sport Mode button (4).
2. The speaker will switch to "Sport" mode, which will record data for your workout that you can then later track on the "STRIDER" App.
3. You can also check your progress at any time by short pressing the Sport Mode (4) button. The speaker will announce your progress.
4. To exit "Sport" mode, long press the Sport Mode (4) button again.

## HANDS FREE FUNCTIONS

- Press the Multi-Function button (1) to pick up a call, any music playing will automatically be paused.
- Long press the Multi-Function button (1) to reject a call.
- Press Multi-Function button (1) again to hang up the call when finished. The paused music will resume playing automatically.

(Note: Speak within a foot of the device to get the best speaker-phone performance when necessary.)

## SOS ALARM FUNCTION

- In the case of an emergency or accident and you are in need of assistance or to alert other, you can sound an alarm.
- To activate the SOS alarm function long press the SOS (5) Button. This will begin to sound the alarm.
- To end the SOS alarm function short press the SOS (5) button.

## TECHNICAL SPECIFICATIONS:

- Model No.: SP2843 STRIDER
- DC Power Input : DC 5V 1 A
- Bluetooth: A2DP, AVRCP, HSP Function
- Output power: RMS 1 x 1.5
- Frequency: 20Hz-20KHz
- Working distance: 30ft (Distance may vary)
- Rechargeable Battery: 500 mAh, 4-6 hrs playback
- Power Supply: Lithium battery/ USB charge

## TROUBLE SHOOTING

### No power

- Recharge your speaker using the micro USB cable. If the problem persists try using another micro USB cable

### No Response From the Unit

- Ensure your bluetooth device has an A2DP profile
- Check if both devices are paired and connected to each other.
- Restart the device and try to reconnect.

### Bluetooth device will not reconnect with the Speaker

- From your Devices bluetooth menu select the "STRIDER" speaker and choose "Forget". Now repeat the steps to pair to the speaker.

### I can't find the devices name on the bluetooth menu of my phone

- Ensure the Bluetooth is activated on your device.
- Ensure you have paired the unit with your Bluetooth device.

### Limitation of Liability

In no event, under any cause of action of theory of liability, shall Sicura Media Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the MVMT products, even if the MVMT product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that MVMT has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained inside or outside of the MVMT products. This includes without limitation, laptops,

Cellular phones, or other hand-held devices, or any loss of data contained in the foreign device. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract, tort (including negligence) or otherwise), the entire aggregate liability of MVMT and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the MVMT product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under the applicable law.