



Model No.: DOSS FreeTalk
User Manual 01

Introduction

Thanks for purchasing the DOSS FreeTalk, the Bluetooth Speakerphone. We advise you to read, and follow and keep the following instructions to be able to correctly set up the speakerphone and enjoy all of its features to the fullest.


Packing content

- 1 x DOSS Bluetooth Speakerphone
- 1 x Micro USB-C Charging Cable
- 1 x Travel Bag
- 1 x User Manual

Specifications

Input: DC 5V ===2A | 9V === 2A
 Battery: Li-ion 3.7V 1500mAh
 Charging time: 3 hours
 TalkTime: 8 hours
 Unit dimension: 5.8 x 5.6 x 1.3 inches
 Bluetooth version: V5.0
 Operating distance: ≤10M, 33ft
 Warranty: One-year limited

Illustration

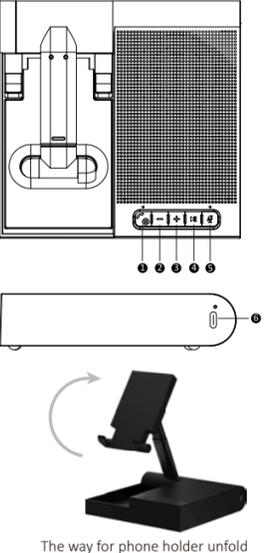

The way for phone holder unfold

Buttons and controls

NO.	Buttons	You want to	How to
1		Turn on/off	Press and hold for 3 seconds
2		Reject a call	Press and hold for 2 seconds
		Answer/ end a call	Press
3		Volume down	Press
		Go to previous track	Press and hold
4		Volume up	Press
		Skip to next trap	Press and hold
5		Play/Pause	Press
		Disconnect	Press and hold for 3 seconds
		Reconnect	Press twice
6		Mic on/off	Press
7		Charge the speakerphone	Insert the charging cable

Indicators


Indicator view	Indicator state	System state
	Flashing blue	Bluetooth pairing
	Solid blue off	Bluetooth mode/USB-C mode Power off
	Solid red off	Mic off Mic on
	Solid red off	Charging Fully charged

Preparation

Use the supplied USB-C cable to charge your speakerphone directly from the cell phone adapter (please make sure its output is 5V === 2A). Make sure that the speakerphone is fully charged before using it for the first time. The charging indicator will remain RED when charging and be OFF once fully charged.

Note:

- If the speaker beeps every few seconds, please recharge it for 3 hours.
- The speaker has a built-in battery saver mode where it will automatically power off if not connect with your device for 10 minutes.

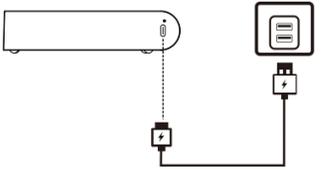

Operations

Pair your speakerphone with your smart device or computer via Bluetooth

Power on your speakerphone, and then turn on Bluetooth on your device to choose DOSS FreeTalk in the list. If the pairing succeeds, the Bluetooth indicator light will go solid blue with a clear prompt tone.

Note:


- The speaker will auto turn off after 10 minutes without any device connection.
- If your smart device cannot discover the DOSS FreeTalk, please long press the play/pause button and try to pair again.

Having problems connecting?

1. Make sure that your device and computer are within 1 meter from the speakerphone.
2. Clear the Bluetooth pairing list on your device.
3. Restart your speakerphone.
4. Try the pairing steps above again.
5. Problem still not solved? Contact DOSS customer service at support@dossav.com for assistance.

Pair your computer with the speakerphone via using a USB-C cable

Turning on the speakerphone, and then please connect the computer and speakerphone via using a USB-C cable.

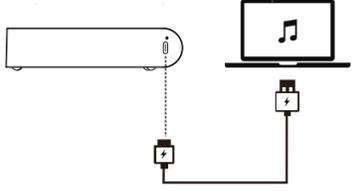

Wireless charging of mobile phone by speakerphone

When the speakerphone is using the charger to take charge, your mobile phone will be wireless charged by placing it on the phone holder.



Note:

- If your speakerphone is not charging, the mobile phone can't be wireless charged when placing it on the phone holder.

Troubleshooting

Symptom	Solutions
No power (battery)/ Low battery prompt tone	<ul style="list-style-type: none"> • The battery may be in protection mode or drained. Plug in and charge the speaker for 3 hours.
The battery does not charge	<ul style="list-style-type: none"> • Turn off and charge speakerphone for 3 hours by using original USB cable and 5V 2A charger. • Try to use a different USB cable and DC plug.
The poor sound quality/buzzing sound when using	<ul style="list-style-type: none"> • Make sure to use the microphone within 1 meter. • Make sure the distance of speakerphone and device within 1 meter. • Check the Network or Call status of your device. • Charge your speakerphone until fully charged.
Speakerphone can't pair/disconnect	<ul style="list-style-type: none"> • On your mobile device, turn the Bluetooth feature off and on. Remove your speaker from the Bluetooth list on your device. Pair your device again. • Pair with another Bluetooth device. • Clear your phone pairing list and restart speakerphone. Pair your device again. • Charge your speakerphone until fully charged. • Make sure the distance of speakerphone and device within 1 meter.
No sound/Low volume	<ul style="list-style-type: none"> • Volume up your speakerphone and device. • Make sure the distance of speakerphone and device within 1 meter. • Try connecting to a different device. • Charge your speakerphone until fully charged.
No sound/Low volume when in USB-C mode	<ul style="list-style-type: none"> • Check the sockets of the speakerphone and computer to ensure the USB cable is plugged in well. • Make sure the audio settings of the computer is DOSS FreeTalk. • Charge your speakerphone until fully charged.

Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the speaker.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the speaker.
- Do NOT use the speaker near a microwave oven or wireless LAN products.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information
 The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DOSS

For updates, promotions, and experience sharing, join our customer community

@dossav
 @dossfans
 @dossdirect
 www.dossaudio.com
 support@dossav.com
 1-833-275-3677 Mon-Fri 9AM-5PM PST (USA)