 


DOSS



DOSS TV Soundbar



Model No.: DOSS TV Soundbar
User Manual

Introduction

Thanks for purchasing the DOSS TV Soundbar. We advise you to read, follow and keep the following instructions to be able to correctly set up the speaker and enjoy all of its features to the fullest.

Packing Content

 
- 1 x DOSS TV Soundbar
- 1 x Power Adapter
- 1 x Optical Cable
- 1 x 3.5mm to RCA Cable
- 1 x Remote Control
- 2 x AAA Batteries
- 1 x User Manual

Ps. Please check the packing contents above. If they are incomplete, feel free to contact DOSS customer service at support@dossav.com for assistance.


Specifications

Input: 18V ---2A
Power Supply: 100-240V ~ 50/60 Hz 1.5A
Dimensions: 35.43 x 4.62 x 2.69 inches
Bluetooth Version: Bluetooth 5.0
Operating Distance: ≤10M, 33ft
Warranty: One-year limited


Product Overview



NO.	Button	Function	What to do
1	⏻	Turn on/off	Press and hold
		Play/pause	Press
2	⏪	Switch audio play mode	Press
		Disconnect the Bluetooth	Press and hold
3	-	Decrease the volume	Press
		Skip to the previous track	Press and hold
4	+	Increase the volume	Press
		Skip to the next track	Press and hold

 

Remote Control

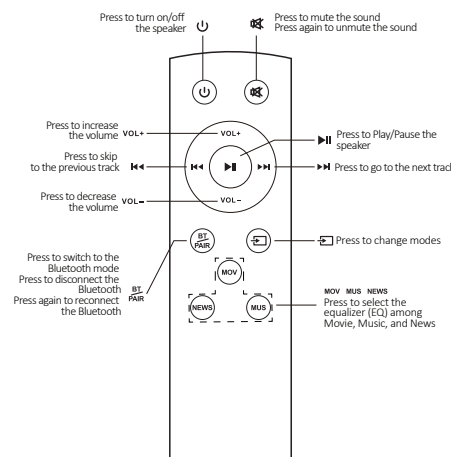 

LED Display Indicators

Status	LED Display	Status
Bluetooth pairing mode	bt	Flashing
Bluetooth mode		Steady
HDMI mode	ARC	Steady
OPT mode	OPT	Steady
Coaxial mode	COA	Steady
Aux In/RCA mode	AUH	Steady
USB driver mode	USB	Steady
Volume up/down	UOI	Steady

 
Common Usage

Connect the DOSS TV Soundbar to Mains Supply
Connect the power cord to the DC IN port on the back of the speaker. Plug the power cord into an AC (mains) outlet, ensure that the power supply voltage is within the range of 100V~240V.

Notes:
• When you plug the speaker into an AC (mains) outlet, the speaker automatically powers on.


Connect to Your TV

Optical
1. Connect the DOSS TV Soundbar to the supplied power adapter.
2. Remove the caps and insert one end of the optical cable into the Optical OUT port on your TV.
3. Insert the other end into the OPT port on the speaker.
4. Press on the remote control or on the speaker to switch to the Optical mode, and the LED display will show the "Opt".

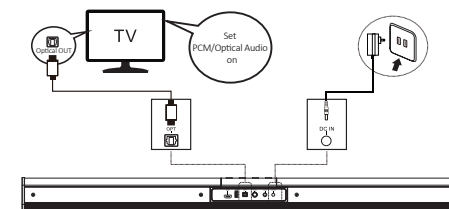


Notes:
• Make sure to remove the protective covers on the ends of the cable.
• Ensure your TV is set to "External Speaker" and TV audio format is set to "PCM" or "Optical Audio".

 Aux In/RCA
1. Connect the DOSS TV Soundbar to the supplied power adapter.
2. Connect the speaker with your TV via 3.5mm to RCA cable.
3. Press on the remote control or on the speaker to switch to the Aux In/RCA mode, and the LED display will show the "AUH".

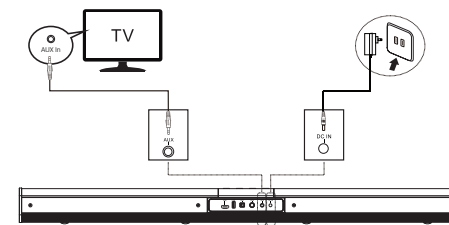

HDMI/ARC

 
1. Connect the DOSS TV Soundbar to the supplied power adapter.
2. Insert one end of the HDMI cable (not provided) into the HDMI/ARC port on your TV.
3. Insert the other end into the ARC port on the speaker.
4. Press on the remote control or on the speaker to switch to the HDMI/ARC mode, and the LED display will show the "Arc".

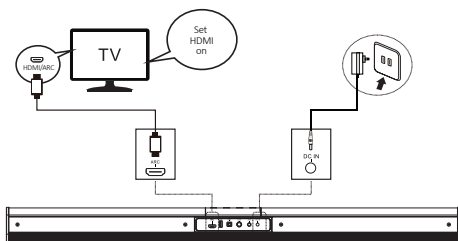

Notes:
• Make sure to remove the protective covers on the ends of the cable.
• Ensure your TV audio format is set to "HDMI" or "ARC".


Coaxial

 1. Connect the DOSS TV Soundbar to the supplied power adapter.
2. Insert one end of the Coaxial cable (not provided) into the S/PDIF or COAXIAL port on your TV.
3. Insert the other end into the COX port on the speaker.
4. Press on the remote control or on the speaker to switch to the Coaxial mode, and the LED display will show the "COA".

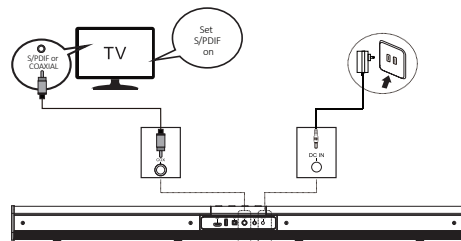

Connect to Your Device

 
1. Connect the DOSS TV Soundbar to the supplied power adapter.
2. Navigate to the Bluetooth list on your device and search for the speaker.
3. Select "DOSS TV Soundbar" to pair with, and the LED display will show the "bt".



Notes:
• When connecting to the devices, the process is slightly different depending on what model of device you have.

Connect to Your USB Driver

 1. Connect the DOSS TV Soundbar to the supplied power adapter.
2. Connect your USB driver to the USB jack on the speaker.
3. The speaker will switch to the USB mode and play music files from the USB driver.



Notes:
• The capacity of USB driver should be less than 64GB.
• Support MP3/WAV/WMA/FLAC files.

Troubleshooting

Symptom	Solutions
Can't Turn On	<ul style="list-style-type: none">• Check whether the supplied power adapter is inserted firmly in place or not.• Check whether the socket can be energized normally.• If possible, use another power adapter to check whether the supplied power adapter is broken.
No Sound/ Distorted	<ul style="list-style-type: none">• Make sure the audio cable is correctly connected, and use one audio cable only.• Insert the audio cable into an Audio Output or Audio IN port on your TV, not audio input or Audio IN.• Insert the HDMI cable into a port on your TV labeled HDMI ARC (Audio Return Channel) or HDMI IN, not a standard HDMI port.• Turn up the volume from both the speaker and device.• Press the Mute button to switch on the sound.• Press the Play/Pause button.• Set the audio output mode on your TV (if applicable) accordingly with the mode setting on the DOSS TV Soundbar.
The Buttons Not Work	<ul style="list-style-type: none">• Unplug the power adapter and plug it again.
The Remote Control Not Work	<p>Please go over the following:</p> <ul style="list-style-type: none">• Install 3V button battery into the remote.• Replace the current batteries with new ones.• Make sure the remote control is pointed to the DOSS TV Soundbar during use.• Make sure the remote control is within 5 meters and no obstacles blocking the remote sensor.• Turn off the DOSS TV Soundbar and disconnect the power, and then reconnect and turn it on, try again.

Warning

Do NOT dropping, hitting, shaking.
Do NOT use this device in extreme temperatures.
Do NOT disassemble.
Do NOT use any corrosive cleaner to clean.
Do NOT expose this device to rain, liquids, or moisture.
Do NOT use this device near a microwave oven or wireless LAN products.
Please use original or certified power adapter and cables.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DOSS

For updates, promotions, and experience sharing,
join our customer community

@dossav
 @dossfans

@dossdirect

www.dossaudio.com

support@dossav.com

1-833-275-3677 Mon-Fri 9AM-5PM PST (USA)