


DOSS

Portable Outdoor Speaker



1. Packaging content

- 1 x Extreme Boom Pro
- 1 x USB-C charging cable
- 1 x Strap
- 1 x Manual (English)

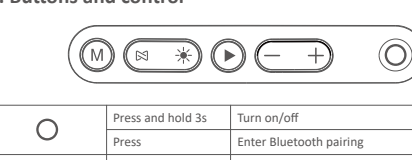
2. Specifications

Output power: 40W*2+10W*2
DC power input: 5V 225 3A
USB output: 5V 225 2A
Battery: 10400mAh
Charge time: 4.5h
Playtime: 20h (at 50% volume- Hotel California)
Bluetooth range: up to 300m (volume- Hotel California)
Net weight: 7.20kg/15.74kg
Unit dimension: 14.2x23.7x13.7 inches
TI card audio format: MP3/WAV/FLAC/APE (maximize Kapazität: 256G)

3. Important notes before using

- To prolong the lifetime of the battery, fully charge the speaker before the first time using it.
- The battery will auto-charge when the 25% LED indicator blinks.
- The speaker will auto-power off after 15 minutes without audio input.
- To cancel the auto-power off feature, press ◀ M for 3s simultaneously.
- The USB out is only for charging your device.
- Restore the factory setting by pressing and holding ▶ for 3s simultaneously.
- Press any button to check the battery level while not charging.
- When the buttons can't be controlled, try to reset the speaker with a paper clip (the reset button on the back of the speaker).
- If you need any assistance while using this speaker, please feel free to contact our customer service or support@doss.com.

4. Buttons and control



	Press and hold 3s	Turn on/off
	Press	Enter Bluetooth pairing
	Press and hold 3s	Next track
	Press	Volume up
	Press and hold 3s	Previous track
	Press and hold 3s	Disconnect Bluetooth
	Press	Bluetooth with LED indicator
	Press and hold 3s	Flash light color
	Press and hold 3s	Change light colors effects
	Press and hold 3s	Enter-Exit PartySync pairing
	Press and hold 3s	Flash light OFF
	Press and hold 3s	Change play modes
	Press and hold 3s	Connect to other devices (Only Works while Bluetooth disconnected)
	Press and hold 3s	Restore factory setting
	Press and hold 3s	Cancel/restore the auto power off feature (Only works at Bluetooth mode)

5. LED indicators

M	Flashing blue	Bluetooth pairing
	Solid blue	Bluetooth signal
	Flashing red	Auto mode
	Red lights on	Carry bag is on
M	Flashing white	Enter PartySync pairing
	White	PartySync pairing success
	4 white LEDs	PartySync level: 75%
	2 white LEDs	PartySync level: 50%
M	1 white LED	PartySync level: 25%
	0 white LED	PartySync level: 0%

For updates, promotions, and experience sharing, join our customer community.

www.dossaudio.com
@dossusv / @dossfans / @dossdirect

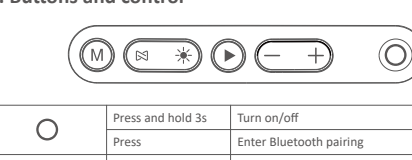
1-833-275-8377 (Mon-Fri 9AM-5PM PST + USA)
Customer Service Email: support@doss.com CA: support_ca@doss.com
UK: support_uk@doss.com DE: support_de@doss.com
FR: support_fr@doss.com ES: support_es@doss.com
IT: support_it@doss.com JP: support_jp@doss.com

UK REP: **EVATOST CONSULTING LTD**
Suite 11, First Floor, My Road Business Centre, Telford, Shropshire, TF12 6NF, United Kingdom
01832 Ffordkurt Main, Gwynedd
contact@evatost.com

EC REP: **vMaster Consulting GmbH**
Waldbrunnstr. 15, 44173 Dortmund, Germany
contact@v-master.com

Wonders Technology Co., Ltd

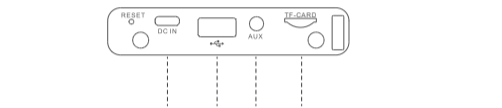
EN

- ### 1. Packing content
- 1 x Extreme Boom Pro
 - 1 x USB-C charging cable
 - 1 x Strap
 - 1 x Manual (English)
- ### 2. Specifications
- Output power: 40W*2+10W*2
DC power input: 5V 225 3A
USB output: 5V 225 2A
Battery: 10400mAh
Charge time: 4.5h
Playtime: 20h (at 50% volume- Hotel California)
Bluetooth range: up to 300m (volume- Hotel California)
Net weight: 7.20kg/15.74kg
Unit dimension: 14.2x23.7x13.7 inches
TI card audio format: MP3/WAV/FLAC/APE (maximize Kapazität: 256G)
- ### 3. Important notes before using
- To prolong the lifetime of the battery, fully charge the speaker before the first time using it.
 - The battery will auto-power off after 15 minutes without audio input.
 - To cancel the auto-power off feature, press ◀ M for 3s simultaneously.
 - The USB out is only for charging your device.
 - Restore the factory setting by pressing and holding ▶ for 3s simultaneously.
 - Press any button to check the battery level while not charging.
 - When the buttons can't be controlled, try to reset the speaker with a paper clip (the reset button on the back of the speaker).
 - If you need any assistance while using this speaker, please feel free to contact our customer service or support@doss.com.
- ### 4. Buttons and control
- 
- | | | |
|--|-------------------|--|
| | Press and hold 3s | Turn on/off |
| | Press | Enter Bluetooth pairing |
| | Press and hold 3s | Next track |
| | Press | Volume up |
| | Press and hold 3s | Previous track |
| | Press and hold 3s | Disconnect Bluetooth |
| | Press | Bluetooth with LED indicator |
| | Press and hold 3s | Flash light color |
| | Press and hold 3s | Change light colors effects |
| | Press and hold 3s | Enter-Exit PartySync pairing |
| | Press and hold 3s | Flash light OFF |
| | Press and hold 3s | Change play modes |
| | Press and hold 3s | Connect to other devices (Only Works while Bluetooth disconnected) |
| | Press and hold 3s | Restore factory setting |
| | Press and hold 3s | Cancel/restore the auto power off feature (Only works at Bluetooth mode) |


- ### 7. Bluetooth mode
- 1.Enable the Bluetooth feature on your device.
 - 2.Press the "Home" button on the Bluetooth device and connect it.
 - 3.Once paired, you can see the status "connected" on your device.
 - Press ◀ to enter Bluetooth pairing if your device can't find Extreme Boom Pro 10 seconds.
 - The speaker can pair with 2 devices via Bluetooth simultaneously, but it can only play music on one device at a time. To play from the other connected device, pause the currently playing one first.
- ### 8. TWS (True Wireless Stereo) mode
- 1.Press the Ⓑ on both Extreme Boom Pro to enter into TWS pairing.
 - 2.Once paired, the LED of the primary speaker turns solid white, while the second speaker turns to flash white.
 - 3.Hold "Home" button on your Bluetooth device and connect it.
 - If 2 main devices are connected, and you want to play via TWS mode, press Ⓑ to enter into TWS pairing, meanwhile, the currently playing device will be disconnected.
 - In TWS mode, if you want to play via PartySync mode, press Ⓑ to enter TWS mode first.
- ### 9. PartySync mode
- 1.Turn on one speaker and get it paired with your device. Then press and hold 3s to not be installed and used in accordance with the instructions, the primary speaker and the LED comes solid white.
 - 2.On the other speaker(s) and long press 3s to enter the PartySync mode. The speaker(s) will be the secondary speaker(s) and the LED comes off.
 - If 2 main devices are connected, and you want to play via PartySync mode, press and hold 3s to enter PartySync pairing, meanwhile, the currently playing device will be disconnected.
 - If you want to play via TWS, press and hold 3s to exit PartySync mode first.
 - The Ⓑ → an auxiliary speaker can't be controlled under PartySync mode.

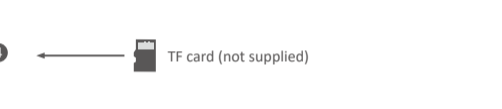
- ### 10. Use your speaker with Echo Dot
- You can connect the Dot with the speaker via Bluetooth.
- Please follow the steps to set up via Bluetooth:
- 1.Download the Alexa app and follow the instructions to set up the procedure to get the Dot connected to your home Wi-Fi network.
 - 2.Switch the Extreme Boom Pro to Bluetooth mode, you can press the power button to enter Bluetooth pairing.
 - 3.Go into the App, tap Home, then tap Get Setup.
 - 4 Tap the Echo Dot in your list of Alexa devices, then tap Bluetooth.
 - 5.The Extreme Boom Pro should appear in the list of Bluetooth devices, if not, please make the power button and the LED light on.
 - 6.Once listed, tap on the speaker to complete the pairing process.
 - 7.Remove the device, return to Bluetooth "tap the main speaker icon" to tap "Device TWS".
- Note:
When a command will not be able to turn on/off the speaker if you connect to a Bluetooth.


- ### 11. Safety instructions
- Always dropping or hitting the speaker.
- Avoid exposing to extreme temperatures.
- Avoid using the speaker near a microwave.
- Never disassemble or repair the device.
- Never get any concrete equipment (oil or gas).
- Never leave the speaker in a car parked in the sun.
- Never attempt to charge the speaker while it is on.
- ### FCC Statement
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device has an SFRP (Specific Absorption Rate) not exceeding 0.09 W/kg.
- ### ISED Statement
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSSI(s). Operation is subject to the following conditions:
- 1.This device may not cause interference.
 - 2.This device must accept any interference, including interference that may cause undesired operation of the device.
- This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.
- The applicant se conforme aux exigences des normes techniques canadiennes applicables aux appareils radio exempts de licence. L'appareil est autorisé aux conditions suivantes:
- 1.Cet appareil ne doit pas produire d'interférence nuisable.
 - 2.Cet appareil doit accepter toute interférence radioélectrique nuisable, y compris toute interférence provenant d'appareils radio exempts de licence.
- Le fabricant de l'appareil doit accepter toute responsabilité radioélectrique nuisable, même si elle résulte de l'utilisation d'un composant licence-exempt.
- CANICES/NIJ/MMB-3(B)
Coppareda è da usare per rispondere ai avvisi di interferenza di esposizione su RF. Le diffonditore deve essere installato e utilizzato in conformità delle seguenti condizioni:
- 1.Questo apparecchio deve essere installato e utilizzato a una distanza minima di 20 cm con il ricevitore e il vostro corpo.

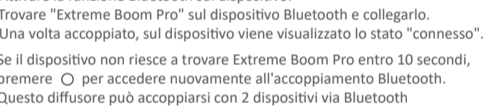
- ### 6. Verbindungen
- 
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Connexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

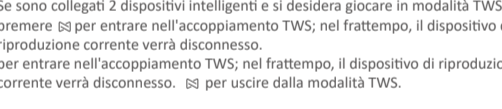
- ### 6. Conexiones
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

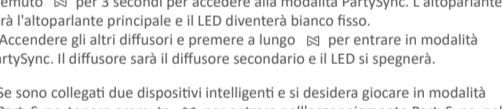
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

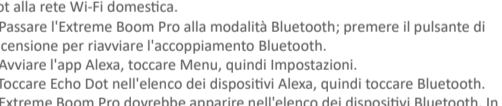
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

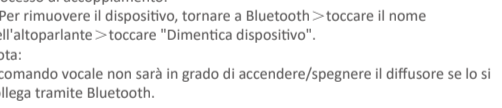
- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

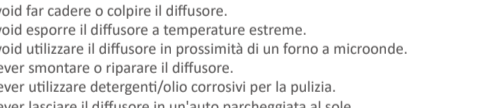
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

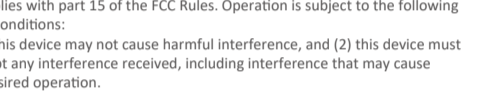
DE

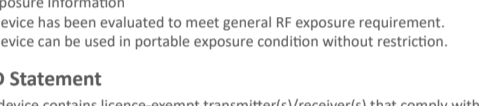
- ### 1. Inhalt der Packung
- 1 x Extreme Boom Pro
 - 1 x USB-C charging cable
 - 1 x Strap
 - 1 x Manual (English)
- ### 2. Spezifikationen
- Output power: 40W*2+10W*2
DC power input: 5V 225 3A
USB output: 5V 225 2A
Battery: 10400mAh
Charge time: 4.5h
Playtime: 20h (at 50% volume- Hotel California)
Bluetooth range: up to 300m (volume- Hotel California)
Net weight: 7.20kg/15.74kg
Unit dimension: 14.2x23.7x13.7 inches
TI card audio format: MP3/WAV/FLAC/APE (maximize Kapazität: 256G)
- ### 3. Wichtige Hinweise vor der Verwendung
- Um die Lebensdauer der Batterie zu verlängern, laden Sie den Lautsprecher vor dem ersten Gebrauch vollständig auf.
 - Der Lautsprecher wird automatisch ausgeschaltet, wenn Sie 15 Minuten ohne Audioeingabe sind.
 - Das USB-Ausgangsgerät ist nur zum Aufladen Ihrer Geräte vorgesehen.
 - Stellen Sie die Fabriks-Einstellung wieder her, indem Sie die Taste „Home“ für 3 Sekunden lang gedrückt halten.
 - Wenn die Tasten nicht zu steuern sind, versuchen Sie die Taste „Home“ mit einem Büroklammerende zu steuern.
 - Wenn Sie eine Verbindung zu einem zweiten Bluetooth-Gerät herstellen möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.

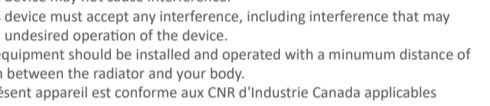
- ### 4. Knöpfe und Steuerung
- 
- | | | |
|--|-----------------------|--|
| | Drücken und halten 3s | Ein-/Aus |
| | Drücken | Bluetooth-Kopplung einleiten |
| | Drücken und halten 3s | Next track |
| | Drücken | Volume up |
| | Drücken und halten 3s | Previous track |
| | Drücken und halten 3s | Disconnect Bluetooth |
| | Drücken | Bluetooth mit LED-Indikator |
| | Drücken und halten 3s | Flash light color |
| | Drücken und halten 3s | Change light colors effects |
| | Drücken und halten 3s | Enter-Exit PartySync pairing |
| | Drücken und halten 3s | Flash light OFF |
| | Drücken und halten 3s | Change play modes |
| | Drücken und halten 3s | Connect to other devices (Only Works while Bluetooth disconnected) |
| | Drücken und halten 3s | Restore factory setting |
| | Drücken und halten 3s | Cancel/restore the auto power off feature (Only works at Bluetooth mode) |

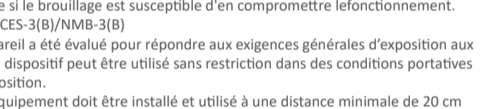
- ### 10. Verwenden Sie Ihren Lautsprecher mit dem Echo Dot
- Sie können den Echo Dot mit dem Lautsprecher über Bluetooth verbinden. Bitte folgen Sie der Schrittliste zur Einrichtung über Bluetooth.
1. Laden Sie das Echo Dot vollständig auf und verbinden Sie es mit Ihrem Wi-Fi-Netzwerk zu verbinden.
2. Schalten Sie den Extreme Boom Pro in den Bluetooth-Modus, drücken Sie die Einschalttaste, um die Bluetooth-Kopplung einleiten zu starten.
3. Starten Sie die Alexa-App, tippen Sie auf Menü und drücken auf Einstellungen.
4. Tippen Sie auf den Echo Dot in der Liste der Alexa-Geräte und drücken auf Bluetooth.
5. Der Extreme Boom Pro sollte in der Liste der Bluetooth-Geräte erscheinen, ist dies nicht der Fall, drücken Sie bitte die Einschalttaste und versuchen Sie es noch einmal.
6. Sobald er in der Liste erscheint, tippen Sie die in den Lautsprecher, um den Kopplungsprozess zu starten.
7. Wenn Sie das Gerät zu entfernen, halten Sie es Bluetooth zurück - tippen Sie auf den Namen des Lautspeakers und tippen Sie auf "Gerät löschen".
- Note:
Wenn ein Befehl nicht ausgeführt werden kann, versuchen Sie den Lautsprecher zu resetten.

- ### 5. Indicazione i LED
- | LED | Bluetooth-Modus | |
|-----|-----------------|---------------------------|
| M | Flashing blue | Bluetooth pairing |
| M | Flashing blue | Bluetooth signal |
| M | Flashing red | Auto mode |
| M | Red lights on | Carry bag is on |
| M | Flashing white | Enter PartySync pairing |
| M | White | PartySync pairing success |
| M | 4 white LEDs | PartySync level: 75% |
| M | 2 white LEDs | PartySync level: 50% |
| M | 1 white LED | PartySync level: 25% |
| M | 0 white LED | PartySync level: 0% |


- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

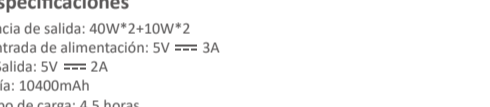
- ### 6. Connexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexiones
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

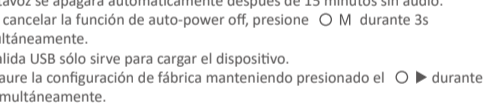
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

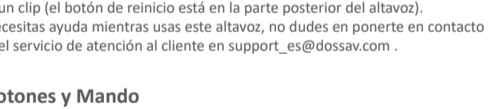
- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

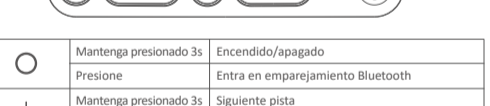
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

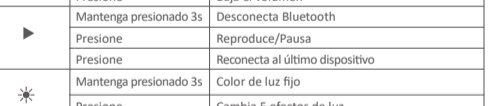
- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

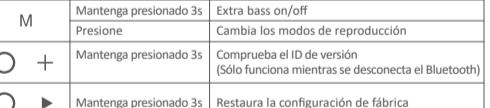
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)


- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

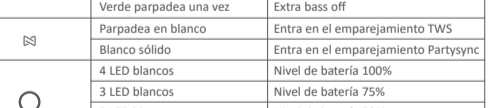
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

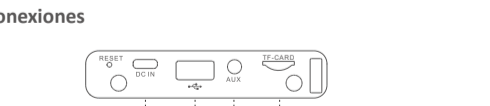
- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)


- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

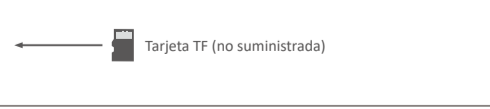
- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Verbindungen
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

- ### 6. Conexions
- 
- 5V 225 3A
- Max output 5V 225 2A
- TI Card (not supplied)

DE

- ### 1. Inhalt der Packung
- 1 x Extreme Boom Pro
 - 1 x USB-C charging cable
 - 1 x Strap
 - 1 x Manual (English)
- ### 2. Spezifikationen
- Output power: 40W*2+10W*2
DC power input: 5V 225 3A
USB output: 5V 225 2A
Battery: 10400mAh
Charge time: 4.5h
Playtime: 20h (at 50% volume- Hotel California)
Bluetooth range: up to 300m (volume- Hotel California)
Net weight: 7.20kg/15.74kg
Unit dimension: 14.2x23.7x13.7 inches
TI card audio format: MP3/WAV/FLAC/APE (maximize Kapazität: 256G)
- ### 3. Wichtige Hinweise vor der Verwendung
- Um die Lebensdauer der Batterie zu verlängern, laden Sie den Lautsprecher vor dem ersten Gebrauch vollständig auf.
 - Der Lautsprecher wird automatisch ausgeschaltet, wenn Sie 15 Minuten ohne Audioeingabe sind.
 - Das USB-Ausgangsgerät ist nur zum Aufladen Ihrer Geräte vorgesehen.
 - Stellen Sie die Fabriks-Einstellung wieder her, indem Sie die Taste „Home“ für 3 Sekunden lang gedrückt halten.
 - Wenn die Tasten nicht zu steuern sind, versuchen Sie die Taste „Home“ mit einem Büroklammerende zu steuern.
 - Wenn Sie eine Verbindung zu einem zweiten Bluetooth-Gerät herstellen möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.
 - Wenn Sie PartySync-Modus verwenden möchten, drücken Sie die Taste „M“ für 3 Sekunden lang gedrückt halten.

- ### 4. Knöpfe und Steuerung
- 