# **IQ RECEIVER**

# **IQ-2008L**

### **INSTRUCTIONAL MANUAL**



LEE TECHNOLOGY KOREA CO., LTD.

## **INSTRUCTION for IQ Pager**

<u>X When the pager is removed from the charger base, it will be vibrating and flashing for 5 or 10 seconds.</u>

## **Programming the Alert Mode**

A) Capcode 1 (Group Message)

Message	Alert Description	Alert Time & Remark
9292	Vibrating Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9393	Out of Range "OFF"	
9494	Out of Range "ON" (Melody & Voice)	The pager will melody, when it is out of range.
9595	Beeping, Flashing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9696	Vibrating and Flashing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9797	Flashing Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9898	Beeping, Vibrating, Flashing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
99	Sleep Mode	
8281	Beeping once and Vibrating	Alert Time : 5 Sec (when the pager is removed from the charger base)
8282	Beeping once and Vibrating	Alert Time : 10 Sec (when the pager is removed from the charger base)
8381	No operating	Speaker Volume Range Setting
8382	No operating	Speaker Volume Range Setting
8383	No operating	Speaker Volume Range Setting
8882	Beeping once and Vibrating	Beeping & Flashing for 3 min (when it receives the Group Call)
8883	Beeping once and Vibrating	The last message will be activated (when it receives the Group Call)
9090	Beeping once and Vibrating	Alert Time : 8 sec
9091	Beeping once and Vibrating	Alert Time : 15 sec
9092	Beeping once and Vibrating	Alert Time : 30 sec
9093	Beeping once and Vibrating	Alert Time : 60 sec

9094	Beeping once and Vibrating	Alert Time : 120 sec
9095	Beeping once and Vibrating	Alert Time : 180 sec
9099	Beeping once and Vibrating	Alerting continuously

#### B) Capcode 2 (Individual Message)

Message	Alert Description	Alert Time & Remark
No Message	The last message will be activated	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue

### C) Capcode 4 (Group Call)

Message	Alert Description	Alert Time & Remark
No Message	Melody and all LED will be activated (8882)  The last message will be activated (8883)	8882 (10 min) 8883 (8, 15, 30, 60, 120, 180 sec, Continue)
9*7*8(Base Id)	This function changes the Base Id, when the pager is in the charger base	Ex) Base Id: 070, 9*7*8 <u>070</u>

- \* When the "Out of Range" is activated, display will show "---" with a melody.
- \* When the pager receives the individual message (CAP2), the pager number flashes.
- When the pager receives the group message (CAP4), display will show the pager number continuously.
- \* When the pager is in the charger base, display will show the pager number continuously.
- \* When the batter needs to be charged, display will show "LO".

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER SAUTHORITY TO OPERATE THE EQUIPMENT.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.