

Car mp3 FM transmitter

Operation Principle

- **LED indicator**
- **32.768KHz and 7.6 MHz crystal**
- **PCB antenna**
- **3.3V LDO regulator**
- **USB Male Connector**

It powered by the 12v-24v car cigarette lighter. the motherboard is supplied 5V power by the power IC, and the CPU powered by the internal 3.3V ldo32.768KHz crystal, the U-disk finally powered by the USB which supply 5V power , It will read the data inside and transmit the signal by the FM transmitter board. Then the car radio will receive the signal and output the sound by the car stereo.