

## Remote Control KEY FINDER Operation

1. Attach the color-coded Key Ring Receivers to key rings or other appropriate devices to be located.
2. Press and hold the corresponding color-coded button to Key Ring Receiver on the Transmitter Tower for 3 seconds.
3. If the Key Ring Receiver is in range (15m), it emits an audible beep.
4. If no beep is heard, change your location and press and hold the button again for 3 seconds. Transmitter is removable from base and can be carried with you to find devices with Key Ring Receiver attached.
5. Use the battery:
 

TRANSMITTER TOWER:	2*AAA (Not included)
KEY RING RECEIVERS:	1*CR2032 (Included)

## Remote Control KEY FINDER Operation

1. Attach the color-coded Key Ring Receivers to key rings or other appropriate devices to be located.
2. Press and hold the corresponding color-coded button to Key Ring Receiver on the Transmitter Tower for 3 seconds.
3. If the Key Ring Receiver is in range (15m), it emits an audible beep.
4. If no beep is heard, change your location and press and hold the button again for 3 seconds. Transmitter is removable from base and can be carried with you to find devices with Key Ring Receiver attached.
5. Use the battery:
 

TRANSMITTER TOWER:	2*AAA (Not included)
KEY RING RECEIVERS:	1*CR2032 (Included)

## Remote Control KEY FINDER Operation

1. Attach the color-coded Key Ring Receivers to key rings or other appropriate devices to be located.
2. Press and hold the corresponding color-coded button to Key Ring Receiver on the Transmitter Tower for 3 seconds.
3. If the Key Ring Receiver is in range (15m), it emits an audible beep.
4. If no beep is heard, change your location and press and hold the button again for 3 seconds. Transmitter is removable from base and can be carried with you to find devices with Key Ring Receiver attached.
5. Use the battery:
 

TRANSMITTER TOWER:	2*AAA (Not included)
KEY RING RECEIVERS:	1*CR2032 (Included)

## Remote Control KEY FINDER Operation

1. Attach the color-coded Key Ring Receivers to key rings or other appropriate devices to be located.
2. Press and hold the corresponding color-coded button to Key Ring Receiver on the Transmitter Tower for 3 seconds.
3. If the Key Ring Receiver is in range (15m), it emits an audible beep.
4. If no beep is heard, change your location and press and hold the button again for 3 seconds. Transmitter is removable from base and can be carried with you to find devices with Key Ring Receiver attached.
5. Use the battery:
 

TRANSMITTER TOWER:	2*AAA (Not included)
KEY RING RECEIVERS:	1*CR2032 (Included)

## Remote Control KEY FINDER Operation

1. Attach the color-coded Key Ring Receivers to key rings or other appropriate devices to be located.
2. Press and hold the corresponding color-coded button to Key Ring Receiver on the Transmitter Tower for 3 seconds.
3. If the Key Ring Receiver is in range (15m), it emits an audible beep.
4. If no beep is heard, change your location and press and hold the button again for 3 seconds. Transmitter is removable from base and can be carried with you to find devices with Key Ring Receiver attached.
5. Use the battery:
 

TRANSMITTER TOWER:	2*AAA (Not included)
KEY RING RECEIVERS:	1*CR2032 (Included)

## Remote Control KEY FINDER Operation

1. Attach the color-coded Key Ring Receivers to key rings or other appropriate devices to be located.
2. Press and hold the corresponding color-coded button to Key Ring Receiver on the Transmitter Tower for 3 seconds.
3. If the Key Ring Receiver is in range (15m), it emits an audible beep.
4. If no beep is heard, change your location and press and hold the button again for 3 seconds. Transmitter is removable from base and can be carried with you to find devices with Key Ring Receiver attached.
5. Use the battery:
 

TRANSMITTER TOWER:	2*AAA (Not included)
KEY RING RECEIVERS:	1*CR2032 (Included)

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.