



INSTRUCTION MANUAL

5287333



 
Thank you for purchasing a Taylor digital weather station. This weather instrument is an example of superior design and craftsmanship. Please read instructions thoroughly to ensure that you have the full benefit of all the unit's features. Keep these instructions handy for future reference.

BATTERY INSTALLATION AND INITIAL SET UP

The Digital Mood Light Weather Station base unit operates on (2) 1.5v AAA batteries (not included). The battery compartment is located on the back of the Weather Station base unit. Insert 2 AAA batteries into the battery compartment according to the "+" and "-" polarity symbols. Replace the battery compartment cover.

When the batteries are installed, the icons on the LCD display will briefly light up for 3 seconds, beep and detect indoor temperature and humidity.

Insert the adapter DC plug into the power socket on the back of the charging plate. Plug the AC adapter into an electrical wall socket. The charging plate will briefly light up.

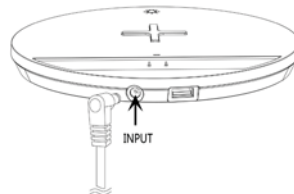


NOTE: Please recycle or dispose of batteries per local regulations. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nicad, ni-mh, etc.) batteries.

WARNING: Batteries may pose a choking hazard. As with all small items, do not let children handle batteries. If swallowed, seek medical attention immediately.


PRECAUTION: Do not dispose of batteries in fire. Batteries may explode or leak. Remove the batteries if the scale will not be used for a long period of time.

 
DESCRIPTION OF PARTS

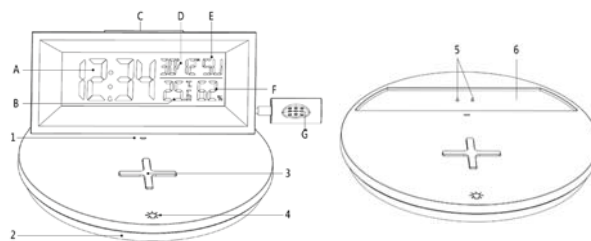

- | | |
|---|-------------------------------------|
| A: Time | G: INDOOR sensor |
| B: Indoor temperature (°F or °C) | H: MODE button |
| C: Backlight /snooze button | I: UP button |
| D: Month and date | J: DOWN button |
| E: Day of week | K: Alarm ON/OFF switch |
| F: Indoor humidity | L: Battery compartment cover |

  - 1: Wireless charging status indicator
- 2: Mood light emitting area
- 3: Anti-skid pad of mobile device wireless charger
- 4: Mood light button
- 5: Weather Station DC power supply terminals
- 6: DC terminal power supply to base unit
- 7: Adapter DC input socket
- 8: USB charging socket (5V1.0A)

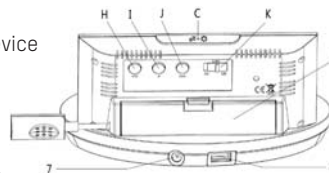

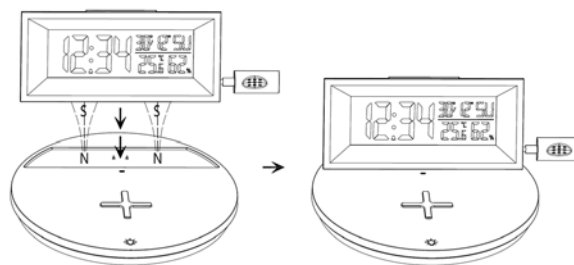

Place the base station onto the designated position on the charging plate. The Weather Station will be powered from the DC terminal of the charging plate.

WARNING: Do not allow metal and other conductive objects to contact two power supply terminals (5) at the same time. There is a magnetic field in the DC terminal supply area (6) of the charging plate. Do not put the magnetic stripe of a card (credit card, telephone card, bank card, boarding card, etc.) on it.

CLOCK SETTING

Press and hold the **MODE** button for 2 seconds and the 12/24Hr starts to flash. Press the **UP** or **DOWN** buttons to select the desired time format.

NOTE: When choosing 12hr format, if "PM" is displayed before the hour, this indicates the hour is post meridiem.

- Press **MODE** to confirm your setting and the hour display starts to flash. Press the **UP** or **DOWN** buttons to select the correct hour.
- Press **MODE** to confirm your setting and the minutes display starts to flash. Press the **UP** or **DOWN** buttons to select the correct minute.

- Press **MODE** to confirm your setting and the date format display starts to flash. Press the **UP** or **DOWN** buttons to select Date/Month or Month/Date.
- Press **MODE** to confirm your setting and the year display starts to flash. Press the **UP** or **DOWN** buttons to select the correct year.
- Press **MODE** to confirm your setting and the month display starts to flash. Press the **UP** or **DOWN** buttons to select the correct month.
- Press **MODE** to confirm your setting and the date display starts to flash. Press the **UP** or **DOWN** buttons to select the correct date.
- Press **MODE** to confirm your setting and the languages selection for the weekday display starts to flash. Press the **UP** or **DOWN** buttons to select the desired language. Press **MODE** to confirm and end setting procedures.

LANGUAGE	GERMAN	ENGLISH	ITALIAN	FRENCH	NETHERLANDS	ESPAÑA	DENMARK
DAY	GE	EN	IT	FR	NE	ES	DA
SUNDAY	SO	SU	DO	DI	ZO	DO	SO
MONDAY	MO	MO	LU	LU	MA	LU	MA
TUESDAY	DI	TU	MA	MA	DI	MA	TI
WEDNESDAY	MI	WE	ME	ME	WO	MI	ON
THURSDAY	DO	TH	GI	JE	DO	JU	TO
FRIDAY	FR	FR	VE	VE	VR	VI	FR
SATURDAY	SA	SA	SA	SA	ZA	SA	LO

NOTE: Press and hold the **UP** or **DOWN** button to quickly scroll through selection options. After 20 seconds without pressing any button, the clock switches automatically from set mode to normal mode.

SETTING DAILY ALARMS

Move the **ALARM** switch to the **ON** position and the LCD displays the  icon. Move the **ALARM** switch to the **OFF** position and the  disappears.

While in set mode, press **MODE** once and the time will switch to the alarm time display for 5 seconds. Within these 5 seconds, press and hold **MODE** for 2 seconds until the hour of the alarm time starts to flash. Press **UP** or **DOWN** to set the desired hour.

Press **MODE** to confirm your setting and the minutes of the alarm time display starts to flash. Press **UP** or **DOWN** to set the desired minute. Press **MODE** to confirm and end setting procedures.

NOTE: After 20 seconds without pressing any buttons, the clock automatically switches from alarm setting mode to normal clock mode.

The alarm will sound for 2 minutes if it is not deactivated by pressing any buttons. In this event, the alarm will be repeated automatically after 24 hours.

While the alarm is ringing, press any button except **SNOOZE** to stop the alarm. It is not necessary to reactivate the alarm. It automatically sets to the preset alarm time.

While the alarm is ringing press **SNOOZE** to go into snooze mode. The alarm will sound again in 8 minutes.

°F / °C TEMPERATURE DISPLAYS

The temperature is displayed either in °F / °C, the weather station defaults to Celsius. Press the **UP** button to switch between Celsius and Fahrenheit.

BACKLIGHT MODE SETTINGS

When the charging plate is powered by the adapter and the base unit is correctly positioned into the DC terminal power supply, the backlight will always be on.

Press the **BACKLIGHT** button to adjust the 3 backlight modes:

- **C1:** Gradient of different colors at opposite ends of the base unit
- **C2:** Same color gradient across the base unit
- **C3:** Dark mode for sleeping

When the base unit is removed from the charging plate and is only powered by battery, press **BACKLIGHT** once and the backlight will be powered on for 8 seconds.

MOOD LIGHT MODE

Press and hold the **MOOD LIGHT** button on the charging plate for 2 seconds to turn on the mood light and enter mode A.

- While in mode A, press the **MOOD LIGHT** button again to enter mode B.
- While in mode B, press the **MOOD LIGHT** button again to enter mode C.
- While in mode C, press the **MOOD LIGHT** button again to shut OFF the mood light mode.

NOTE: In mode B, press and hold the **MOOD LIGHT** button for 1 second to lock in the current color and stop the gradual change. Press and hold the **MOOD LIGHT** button for 1 second again to restore the gradual change. In mode C, press and hold the **MOOD LIGHT** button for 1 second to switch to another color fade.

WIRELESS CHARGING

Place a mobile device (must support Qi standard) on the anti-skid pad in the middle of the charging plate.

The wireless charging status indicator will be red when charging normally and green when fully charged. Please note only some Samsung mobile devices currently support this feature. The indicator light flashes red when metal or similar items are detected.

NOTE: A mobile device can be also be charged using a USB cord (not included). The USB socket is located on the back of the charging plate. Two mobile devices may be charged simultaneously: one device on the charging plate and one device using the USB cord.

SPECIFICATIONS

- Indoor temperature measurement ranges: 14°F to 122°F (-10°C to 50°C)
- Indoor humidity measurement ranges: 20-95%
- High definition, 1.5" large LCD display
- Perpetual Calendar Up to Year 2099
- Time format in optional 12/24 HR
- Day of week in 7 languages
- Mood light features 3 modes and OFF
- LCD backlight features 3 modes
- Daily alarm clock and snooze function
- Temperature unit in optional °C / °F
- Smart home wireless charger charges any equipment in accordance with Qi wireless charging standard
- Wireless charging output: MAX.10W
- USB socket can charge for mobile device (5V1.0A)
- Power Supply:
 - Base unit: 2 x LR03 AAA size 1.5V
 - Charging plate: DC 9V 2000mA Adapter

PRECAUTIONS

1. The weather forecaster is intended for indoor use only. It is not sealed against moisture and could be damaged if used outdoors. Do not immerse it in water or allow snow to accumulate on it. Do not use this product near water sources and do not place this product in a damp place.
2. Do not leave it outdoors. Otherwise, permanent damage to the unit's internal circuits may occur.
3. Do not immerse in water. If you spill liquid on the base station or charging plate, dry immediately with a soft, lint-free cloth.
4. Do not clean the units with abrasive or corrosive materials. This may scratch plastic parts and corrode electronic circuits.
5. Do not subject unit to excessive force, shock, dust, temperature or humidity. This may result in malfunction, shorter electronic life span, damaged batteries or distorted parts.
6. Do not tamper with the units' internal components. Doing so will invalidate the warranty on this product and may cause damage. The units contain no user serviceable parts.
7. Do not mix old and new batteries. Do not mix alkaline, standard (carbonzinc) or rechargeable (ni-cad, ni-mh, etc.) batteries. Do not dispose of batteries in fire. Batteries may explode or leak. Remove the batteries/ charger if the units will not be used for a long period of time.
8. Never dispose of empty batteries and rechargeable batteries in household waste. As a consumer, you are legally required to take them to your retail store or to an appropriate collection site depending on national or local regulations in order to protect the environment. The symbols for the heavy metals contained are: Cd=cadmium, Hg = mercury; Pb=lead. This instrument is labelled in accordance with the EU Waste Electrical and Electronic Equipment. Directive (WEEE).

PRECAUTIONS (CONT.)

9. Please do not dispose of this instrument in household waste. The user is obligated to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment, in order to ensure environmentally-compatible disposal.
10. This product is for measuring weather temperatures only. DO NOT PLACE UNITS INTO OVENS, GRILLS, FREEZERS or MICROWAVE OVENS.
11. Keep out of direct sunlight and away from sources of heat.
12. Due to improper use of product damage, odor, smoke and other phenomena, please immediately terminate use and send to professional maintenance personnel.
13. Do not place the product in a strong electromagnetic wave, strong static electricity and easy condensation.
14. Do not place the magnetic stripe card (credit card, telephone card, bank card, boarding card, etc.) near the product, otherwise, it will be damaged by the magnetic field.
15. If you use a wireless charger in an area with weak network signals, your mobile device may not be able to receive the network.
16. Do not place metal, magnet, magnetic stripe card and other foreign matters between the mobile device and the wireless charger, otherwise, the mobile device will not charge normally or be damaged due to overheating.
17. If the mobile device has a thick protective case, the wireless charging may not work properly. If the cover is thick, remove it, and then put the mobile device on the wireless charger for charging
18. Always read the instruction manual before operating this product.

Party issuing Supplier's Declaration of Conformity & Responsible party - U.S. Contact information: Taylor 2311 W. 22nd Street, Suite 200 Oak Brook, IL 60523	Equipment: Product Name: Digital Mood Light Weather Station Model No.: 5287333 Trade Name: Taylor
We declare under our sole responsibility that the above referenced product has been tested according to FCC requirements and this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: WEC-EM9926

The distance between user and products should be no less than 20cm

LIMITED WARRANTY

This product is warranted against defects in materials or workmanship (excluding batteries and adapters) for one (1) year from date of original purchase for the original purchaser. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair. Should this product require service (or replacement at our option) while under warranty, do not return to retailer. Please pack the item carefully and return it prepaid, along with store receipt showing date of purchase and a note explaining reason for return to:

**TAYLOR | 2220 Entrada Del Sol, Suite A
Las Cruces, New Mexico | 88001 USA**

Email: taylorusa@lifetimebrands.com | www.taylorusa.com

There are no expressed warranties except as listed above. This warranty gives you specific legal rights, and you may have other rights which vary from state to state. For additional product information, or warranty information outside the USA, please contact us through www.taylorusa.com.

©2021 Taylor division of Lifetime Brands Inc. All rights reserved.

**Made to our exact specifications in China.
Not legal for trade.**



5287333 5.21 WC