

EXQ installed with PH reader configuration

Outside escutcheon

Inside escutcheon (antenna location)



WDC installed with PH reader configuration

Outside escutcheon

Inside escutcheon (antenna location)



WDC/WXC reader configurations

PKP



MS



DV



PSEBH



SE



PH

