

Plug the EUT into the PC. No other installation is required.

No batteries required. Draws minimal power from the PC when in use. RX minimal power from the AC Power. Frequencies are selected by ID Pairing button on the RX. Frequencies range: 2400 to 2483.5MHz are available.