




AGES 5 AND UP



WARNING:
CHOKING HAZARD - Small parts
Not for children under 3 years

CE0678
"This product is in compliance with
the essential requirements and other
relevant provisions of Directive
1999/5/EC"

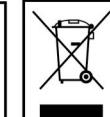


Licesce by:
U-Boat
Worx

UNDERWATER BOAT

We call the 'underwater boat'. The concept combines the characteristics of a submarine (the 'underwater' part), with those of a normal boat (the 'boat' part). The great advantage of this concept is that the submarine can be launched or moored practically anywhere, regardless of the depth.


CONTROLLER

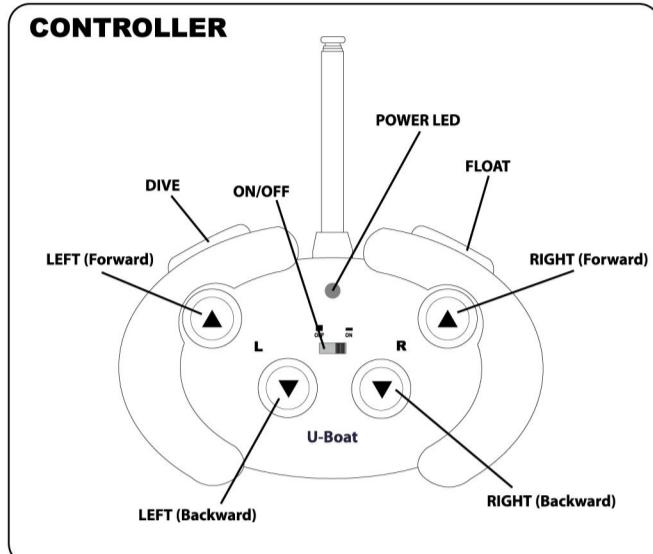

TO REPLACE BATTERIES REFER TO THE FOLLOWING DIRECTIONS & ILLUSTRATION:

1. Push the "ON/OFF" button to "OFF" position.
2. Use a phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.
3. Remove the battery compartment door.
4. Remove old batteries and replace with new battery following the (+) and (-) positioning in the battery compartment. Dispose of old batteries properly.
5. Fasten the screw to secure battery compartment door.

CONTROLLER

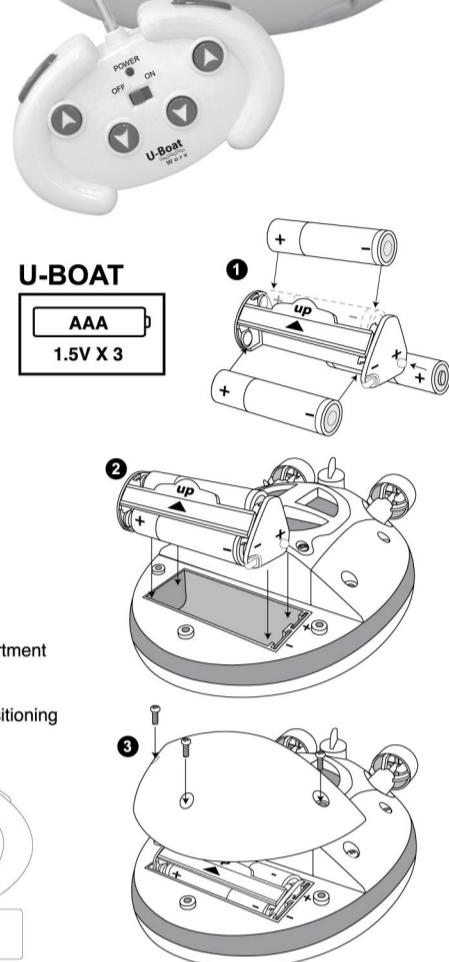

Warnings:

- . Do not let the U-Boat dive more than 3 feet (1 metre). You might lose control of it.
- . Do not use the product in strong currents, salt water, cloudy water or any body of water with large waves.
- . Not suitable for children under the age of 36 months because of small part(s) choking hazard.
- . Packaging materials are not toys. Please remove all packaging and packing tags/ wires before giving this toy to your child.
- . Water toys sometimes get messy. Protect play surfaces before use. Drain, rinse, clean and dry all items thoroughly before storing.
- . As with any product designed to be used in and around water, children who play with this toy should be supervised by an adult.
- . Never play with the U-Boat in strong winds or during a thunderstorm.
- . When your U-Boat reaches beyond the transmitter's control range, hold the transmitter as high as possible with the antenna vertical to re-establish contact. If you cannot, move closer to the U-Boat then try again.
- . If your U-Boat picks up other radio waves and starts moving, the transmitter should be brought closer to the U-Boat in order to regain control.
- . Make sure the U-Boat can make it back to shore, always guide it in as soon as you notice its movement slow down.
- . Do not leave your U-Boat in water when you finish playing, water might seep into the body and damage electronic parts.
- . Please take note: As an extra precaution, check this toy regularly for signs of wear or damage.
- . Please retain this information for future reference.

BATTERY CAUTION:

1. Alkaline battery is Recommended
2. Non-rechargeable batteries are not to be recharged.
3. Rechargeable batteries are to be removed from the toy before being charged.
4. Rechargeable batteries are only to be charged under adult supervision.
5. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
6. Do not mix old and new batteries.
7. Only batteries of the same or equivalent types as recommended are to be used.
8. Batteries are to be inserted with the correct polarity.
9. The supply terminals are not to be short-circuited.
10. If batteries are loose, bend out the contacts for a tight fit.
11. Exhausted batteries are to be removed from the toy and be disposed of immediately; never dispose of batteries in fire.
12. If storing product for long periods of time, make sure to remove batteries.
13. Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

If the unit malfunctions, please remove the batteries for one minute and reinstall again.

If the malfunctions persist, please replace with new batteries.

BATTERIES SHOULD BE INSTALLED BY ADULTS ONLY.

FCC Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generated, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Colors & contents may vary.

Please keep this packaging for future reference. Conforms to the safety requirements of ASTM F963 and EN-71




©2008 PLAYMIND LTD.
Room 413-415, Houston Centre,
63 Mody Road, Tsim Sha Tsui East,
Kowloon, Hong Kong
Visit us at: www.playmindltd.com




FORWARD

Press the upper left and right forward button at the same time for move forward.

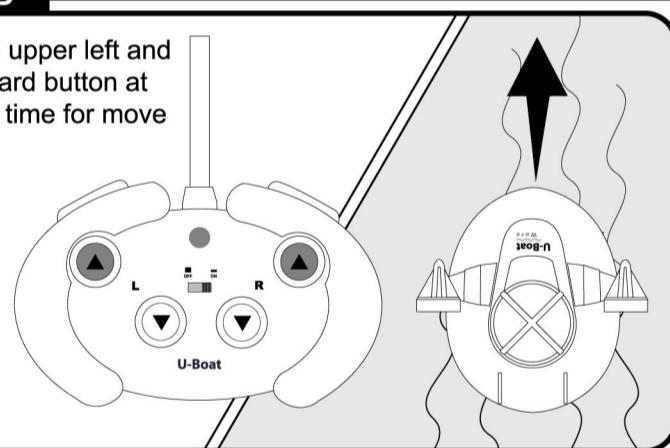

RIGHT

Press the upper right forward button for turn right.

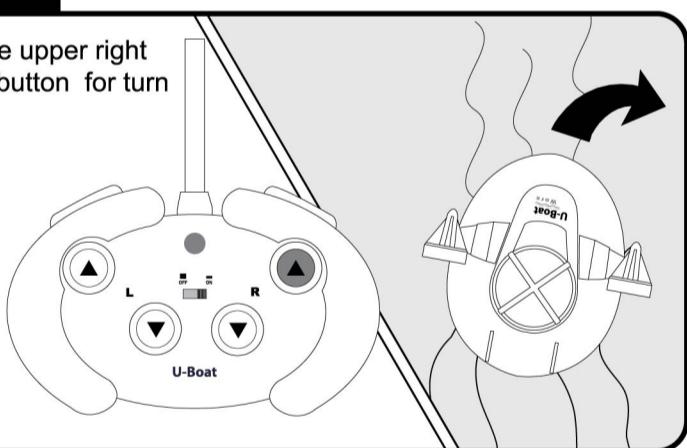


READY




LEFT

Press the upper left forward button for turn left.

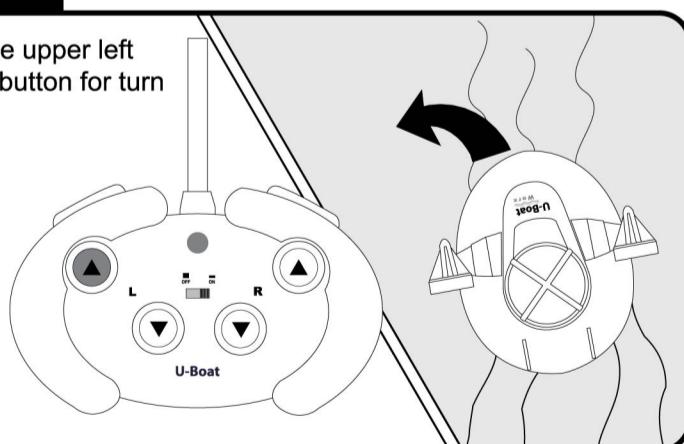


BACKWARD

Press the lower left and right backward button at the same time for move backward.

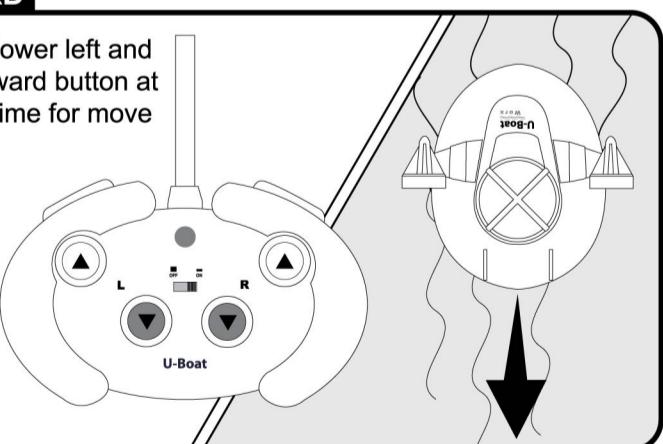


DIVING

Press the dive button to adjust the dive level.

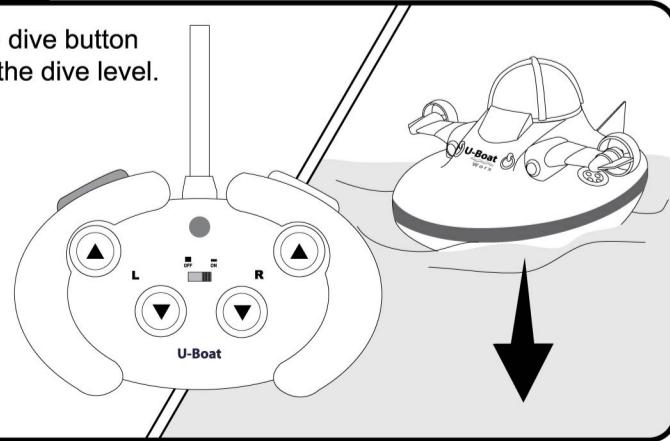

FLOATING

Press the floating button to adjust the floating level.

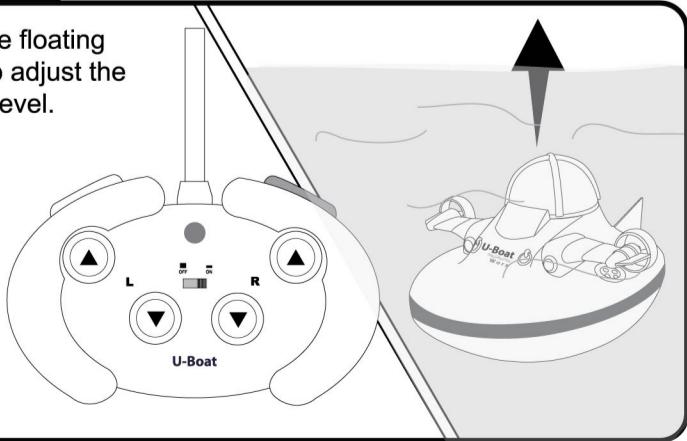

place the U-Boat into water until the air inside of the boat have squeezed out.