

A4 size

R/C AMPHIBIOUS VEHICLE

Recharge battery before operation!

- * Please read entire manual prior to operation.
- * Keep box and manual for future reference.

Safety precautions:

- USE UNDER CLOSE ADULT SUPERVISION!
- Make children should be aware of the dangers associated with playing near water .
- Always select a safe place to play. Never drive your vehicle near the street.
- Operate only in fresh water with little to no current.
- Do not operate in water during heavy winds.
- While in operation keep fingers, hair and loose clothing away from tires, wheel hubs and motors.
- Never use in salt water.

CAUTION-ELECTRONIC TOY: NOT RECOMMENDED FOR CHILDREN UNDER 5 YEARS OF AGE. AS WITH ALL ELECTRONIC PRODUCTS PRECAUTIONS SHOULD BE TAKEN DURING HANDLING AND USE TO AVOID ELECTRICAL SHOCK.
MODEL : AD-1230-UL(8) INPUT:AC120V/60Hz/27W OUTPUT:DC7.2 200mA

Battery Recharge:

7.2V Battery Charging - Please use under close adult supervision

NOTE

1. New battery pack must be charged for 5 1/2 hours the first two times charged. Subsequent charges will require 4 hrs. Charging the battery pack for more than 5 1/2 hrs will not give you a longer running time. 4 hrs is all that required.
2. Join the connector of the charger to the connector of the batteries pack.
3. Plug the charger into an electrical outlet.
4. After charging is complete, detach the charger from the outlet and disconnect the battery from the charger.
5. Unlike alkaline batteries which lose power gradually, a rechargeable battery will run for its normal running time and then lose most of its power at once. That's when you'll know it's time to recharge the battery pack.
6. After use, the batteries pack will be hot! Wait until the batteries pack cools before recharging. recharging a warm or hot battery pack will greatly reduce the number of times your battery pack can be recharged.
7. The charge must be disconnected from the electric supply when charging completed.

CAUTION:

- * Do not charge battery immediately after play, please cool down the batteries pack before recharge.
- * Avoid short circuits-they can cause overheating,burning and other damages to the battery and charger.
- * The Battery Charger should only be used to recharge the included batteries pack. Only charge one battery at a time.
- * Do not use the charger as an outlet for other electrical appliances.
- * Keep the battery pack and charger out of the hands of infants and small children while in use.
- * Do not charge near fire, hot temperatures or wet damp areas.
- * Charger may become warm while in use, allow sufficient space during this time.
- * If the battery pack remains weak after proper charging techniques, dispose of it correctly and replace with a new battery.
- * This product uses a NICKEL-CADMIUM rechargeable battery pack. The battery pack must be recycled or disposed of properly.
- * Disconnect the supply before making/ breaking battery connection.
- * Only use this battery charger for the included battery.
- * Regularly examine for damage to the plug, enclosure for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the charger until the damage has been repaired.
- * The charger is not a toy.

DO NOT RECHARGE NON-RECHARGEABLE BATTERIES!

P.1

WARNING: CHOKING HAZARD - Small parts Not for children under 3 years

NO. 60025

AGES
8
AND UP

0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3



0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

0-3

</div