

EU3C FilmScan35-II-2.5-TV-out



*-Patent pending-*

## User Manual

Version 1.00  
March 2009

## *Index*

|   |           |
|---|-----------|
| <i>I. Unpack FilmScan35-II-2.5-TV-out.....</i>    | <b>2</b>  |
| <i>II. Install film into the film holder.....</i> | <b>3</b>  |
| <i>III. Quick Start.....</i>                      | <b>7</b>  |
| <i>IV. Operation Guide.....</i>                   | <b>12</b> |
| <i>V. Specification.....</i>                      | <b>32</b> |

## I. Unpack FilmScan35-II-2.5-TV-out



FilmScan35-II-2.5-TV-out



Negative/Slide Film Holder



User Manual



USB power core



USB cable



Video cable



Clean brush

### Note

- ❖ We strongly suggest using a clean, dry, non-alcohol cotton swab to clean the glass surface periodically to produce a clear image during operation.
- ❖ Clean dust from filmscanner backlight, to use the clean brush to wipe the dust.
- ❖ Dust or dirt from the negative, slide films and cover trays may affect the scanned image quality, please make sure the materials are cleaned before inserting into the scanner.
- ❖ Please find recommend, processional purger from photo store to clean the dust on films if any to avoid damaging the only one copy of old films.



## *II. Install film into the film holder*

- Install the Slide into holder*

1. Open the slide holder as illustrated



2. Put slide into positive slide slot



3. Close the film holder



- *Install the Negative Film into holder*

1. Open the film holder as illustrated



2. Install film into negative film slot



3. Close the film holder



## **Note**

---

- ❖ To avoid mirror image, follow the serial numbers (from left to right) on top of film when install negative film into holder




*Figure 1*

- ❖ If the image is upside down [see fig.2], the image can be corrected by Flip function in hard key of device before capture, or enter playback edit menu after capture [see fig.3.4].



*Figure 2*

Down/Flip button  
(Flip hard key)

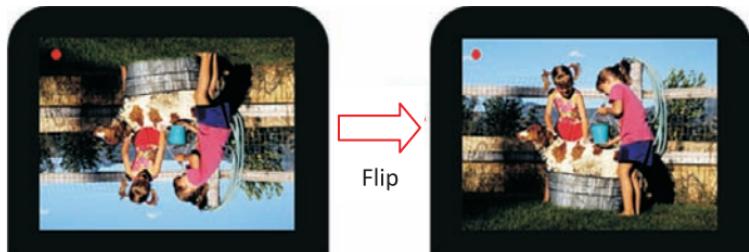

- Press hard key on top of device in live view


**Figure 3**



- Playback mode menu

**Figure 4**

### III. Quick Start

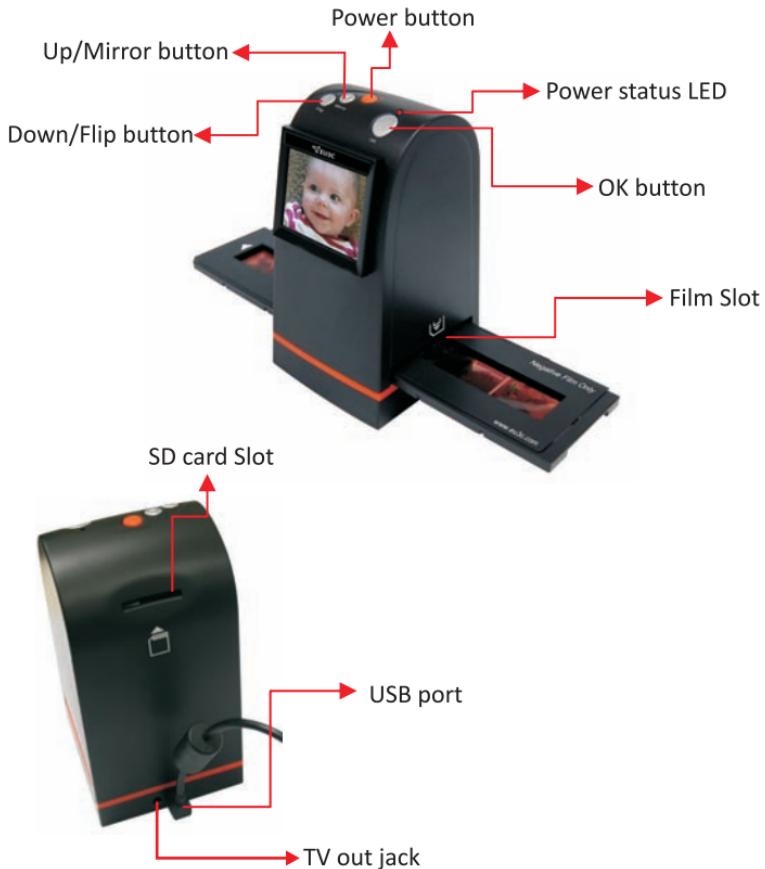

### *1. Put Film onto the film cartridge*



## 2. Insert the film cartridge into FilmScan35-II-2.5-TV-out



3. Connect USB cable to *FilmScan35-II-2.5-TV-out*



4. Turn on Device by power button



5. Press *OK* button to capture the image




6. Follow the menu on display for scanning



7. After finished the capture, take out the SD card which stored capture images




8. Or read picture from PC by MSDC mode

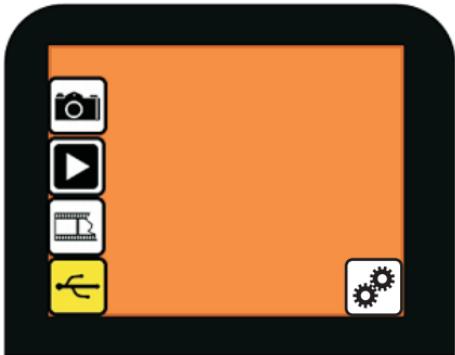


## IV. Operation Guide

### Home: Main menu

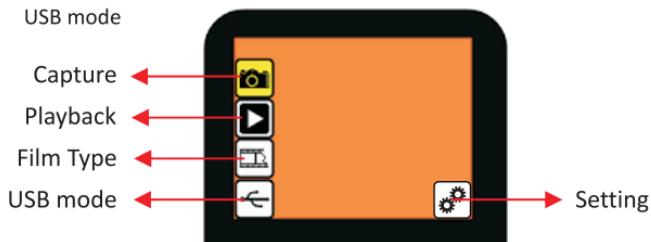


- *Capture: capture mode (default)*
- *Playback: playback mode*
- *Film Type: define the film type which loaded in cartridge*
- *USB mode: MSDC (Mass Storage Device Class) mode*
- *Setting: TV out and format option*

### 1. Capture

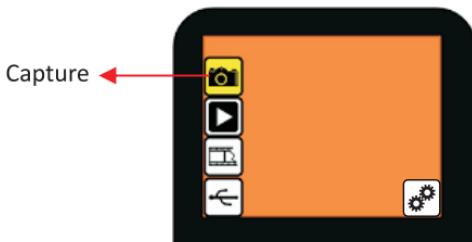


After welcome page, above menu will remains for 5 sec. User can press up/down button for desired menu. Or system will auto enter Capture mode if there is no action during this 5 second period.

## 1.1 Capture: Mirror/Flip (Hard Key)

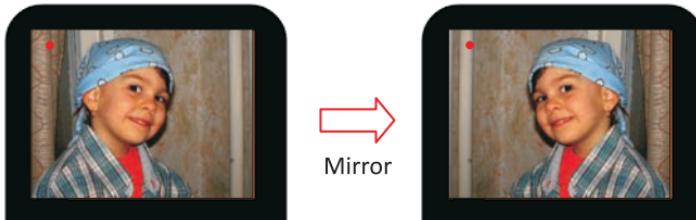


- Press Up/Mirror button to change image left to right

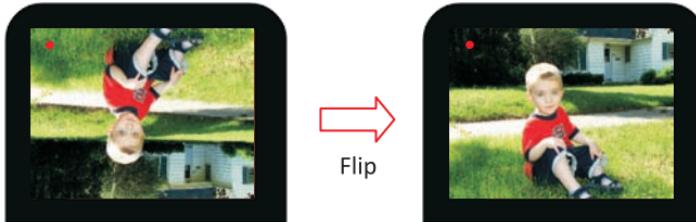

- Press Down/Flip button to upside down image

## 1.2 Capture mode

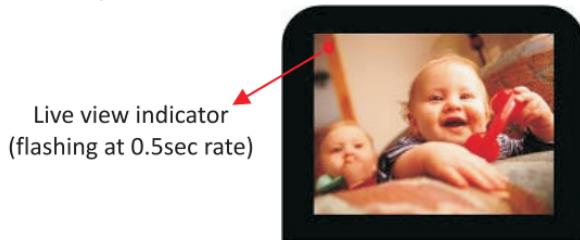

Once enter capture mode, there will be a red indicator on left top corner to indicate it is in live view mode. When the film cartridge is inserted into the scanner slot, the image always shows the positive image according to previous defined Film Type (after power on, the Film Type is default to negative film). Reconfirm the film position through the display before press OK button.


## 1.3 Capture: Edit Menu



- *Save: save captured image*
- *Rotate +90: continue rotate +90 degrees*
- *Rotate -90: continue rotate -90 degrees*  
(this is for adjusting the user who took the portrait picture)
- *Cancel: cancel any editing with this image*
- *Home: Back to main menu*


## 1.4 Live View -> Capture/Edit Menu

### Live View

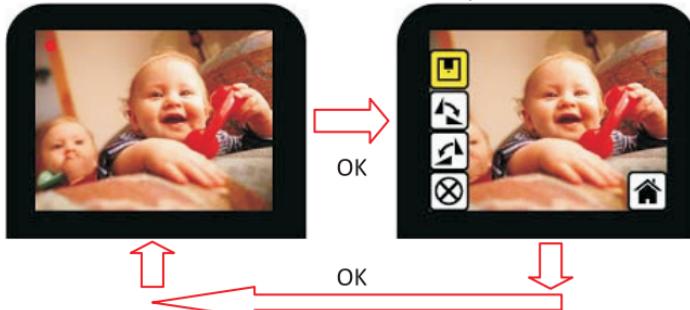

Once press OK button in live view, the edit menu will be appeared. When user press OK button again, the current image will be saved into SD card. The display will return to live view again.

## 1.5 Capture: Save

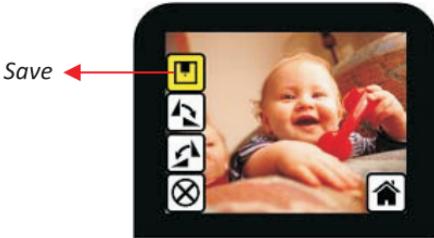

Once user press OK button on top of FilmScan35-II-2.5-TV-out, preview (live view) image will be selected and shown on the TFT which will take between 3-4 second with 4 icons shown on the left side of the screen. Save icon will be highlighted for user to confirm the saving by OK button. After the above step, display goes back to live view mode (preview).