 


CL-3108
USER'S MANUAL

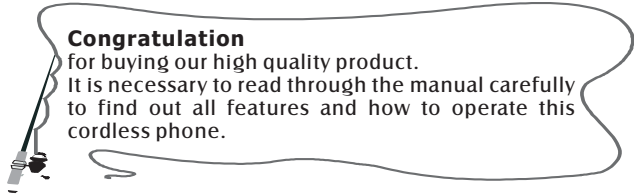

Congratulation





for buying our high quality product.
It is necessary to read through the manual carefully to find out all features and how to operate this cordless phone.

Before first Use

Please read IMPORTANT SAFETY INSTRUCTIONS on pages 25~26 before use.

Accessories

Take out from box: cordless handset, belt clip and base unit, in addition each carton contains the following accessories:

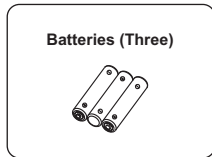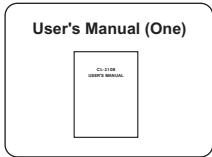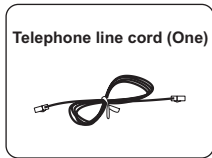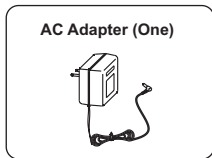

9. Do not overload wall outlets and extension cords as this will result in the risk of fire or electric shock.

10. Never introduce objects into this unit through the slots as this may risk in fire or electric shock hazard. Never spill any liquid on the unit.

11. To reduce the risk of electric shock, do not disassemble this unit, instead take it to a qualified service station for checking. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect repair jobs can be highly dangerous.

12. Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
A. When the power supply cord or plug is damaged.
B. If liquid has been spilled over the unit.
C. If the unit has been exposed to rain or water.
D. If the unit does not work normally upon following the instruction. Adjust only controls covered by the operating instructions, to avoid expensive repairs by qualified technicians.
E. If the unit has been dropped or damaged.
F. If the unit exhibits a distinct change in performance.

13. Avoid using the phones during a lightning storm. There may be a remote risk of electric shock from lightning.

14. Do not use the phones to report a gas leak nearby.

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including following items:

1. Please understand all instructions in the operation manual.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from wall outlets and telephone jacks before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for the job.
4. Do not use this unit near water, for example, near a bath tub, wash bowl, kitchen sink. If the unit comes in contact with any liquid, cut the power and unplug cords immediately. Do not reconnect the unit before totally dried.
5. Put this unit securely on a stable surface. Serious damage may result from falling.
6. Do not cover slots and openings of the unit, they are needed for ventilation and protection against overheating. Never place the unit near hot places where proper ventilation is not provided.
7. Use only the battery and adapter of the same type we offer.
8. Do not place objects on the power cord. Put the unit where no one can step on the cord.

Battery Charge


To power the handset, install the battery and charge it for about 24 hours before initial use.

Operating Distance/Noise

Calls are transmitted between the base unit and the handset using wireless radio waves. To find out max distance and limit of noise free operation, you have to follow these rules:

Keep away from electrical appliances, such as a TV, PC or another cordless phone.

In a HIGH and CENTRAL location stay away from obstructions such as walls.

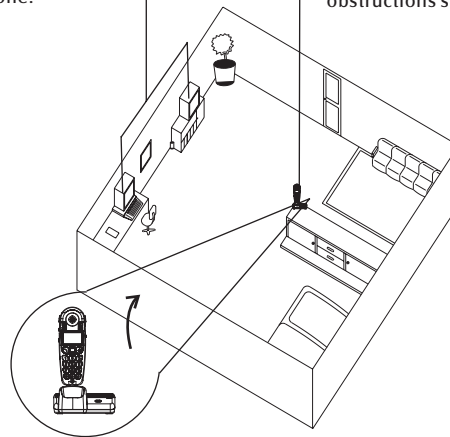

Features

1. FSK standard Caller ID
2. Stores up to 72 calling numbers with the date and time
3. Stores up to 60 numbers in phone book
4. Line transfer between handsets
5. Out of area/Private/Repeat/Error
6. Deletes single or all records
7. LCD display calling and dialling number
8. Auto-scan channel
9. 24 digits pre-enters dial digit with edit function
10. Page on base unit to look for the handset easily
11. Memory dial function
12. Comander circuit for noise reduction
13. LCD display indicates: operation mode, dial digits, real time and memory dial digits
14. Last number redial
15. Multi-handset compatibility, up to 3 handsets
16. Ringer volume selection (on/off) on handset
17. Receiver volume and tone adjustment on handset
18. LCD contrast selection
19. Ringer volume selection on base
20. Flash and vibration function on handset
21. LCD back light
22. Wall mounting

If you hear noise or static during a phone conversation

- Move closer to the base unit.
- Keep the base unit away from PCS, family videos, game and fax machines.
- Press the "CH." key to switch to another channel.

The TV or VCR picture becomes distorted while talking

- Remove the base unit as far away from the TV or VCR as needed.

Interference and noise on line

- Move away from TV, VCR, computers, fax machines, electronic equipment and other motor device.

If the LOW BATTERY indicator is on display

- The battery needs recharge.

If the battery is recharging

- Never touch the battery contacts on the base unit and handset with sweaty or the battery contacts may result in charging failure. If this has happened, clean them with Cleaned cloth or swab.

Troubleshooting

If you experience trouble with your unit, please check following items before calling for help.

Problem

Cause & Remedy

The unit does not work

- AC adapter unplugged or main power failure.

If you hear two beeps when trying to use the phone



- The handset is located beyond the range of the base Unit. Or the handset is out of registration. Place the handset On the base cradle.
- Move closer to the base unit or replace the handset on the base cradle. Try again a few seconds later.

If the phone does not ring with an incoming call


- Make sure the telephone line cord is connected firmly to the base unit and the telephone jack.
- Make sure the AC adapter is plugged into an outlet and the wall switch is on.
- Your phone may be too far away from the base unit. Move closer to the base unit.
- You may have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of the other phones.

Location of Controls

Base Unit

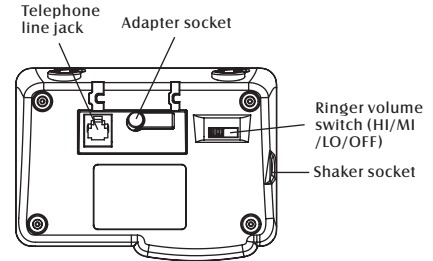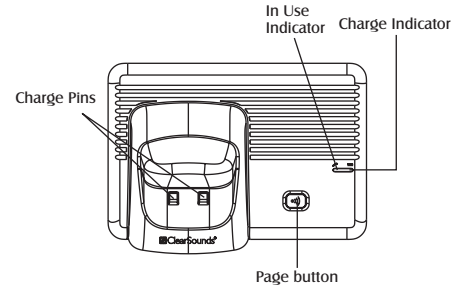

Handset

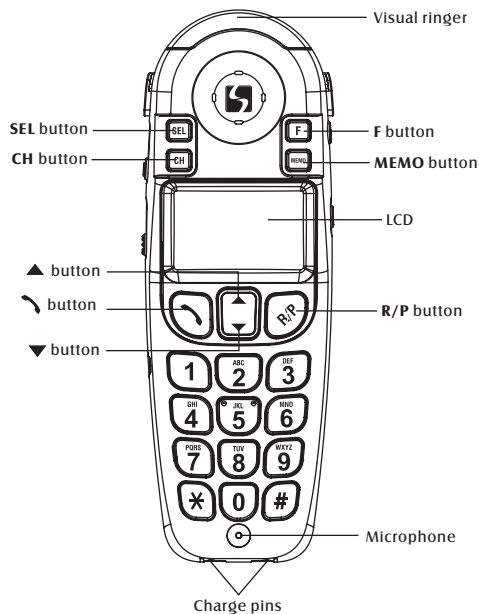

Deleting a single Caller ID number

 
1. Press ▲ or ▼ button, the LCD shows the total number of CID numbers and new numbers. (ALL XX NEW XX)
2. Press ▲ or ▼ button to find out the number you want to delete.
3. Press F button twice to delete the number.

Call ID on call waiting


When you have subscribed to call waiting service from your local telephone company, this telephone can indicate the name and number of the second caller while you are having a conversation with the first caller.

You can press F button to answer the 2nd caller. After the call, you can press this button once more to continue the first conversation.


- Press **1** button to dial the number ahead with the 1 digit.



 - Press **7** button to dial the last 7 digits of the number.





 - Press **8** button to dial the last 8 digits of the number.



Deleting all Caller ID numbers

  
1. Press **▲** or **▼** button, the LCD shows the total number of Caller ID numbers and new numbers. (ALL XX NEW XX)
2. Press **F** button twice to delete all of the Caller ID numbers.

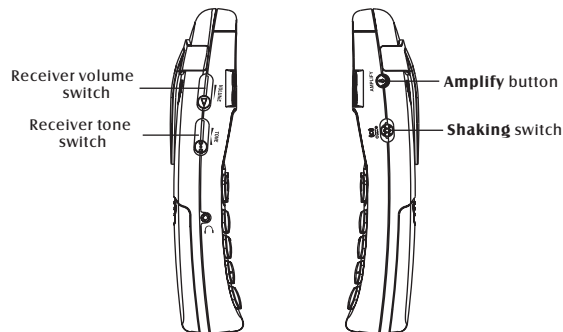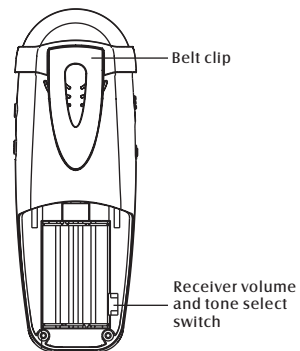

Installation


Base unit

 Connect the telephone line and the power.

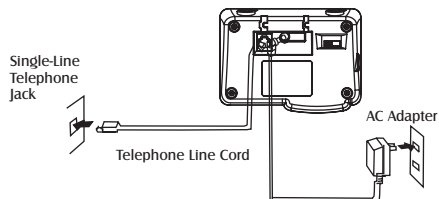

Handset

 Install and remove the belt clip

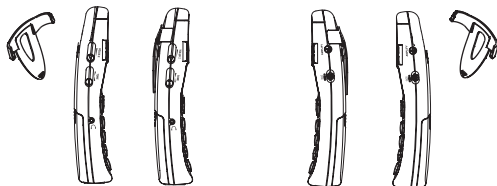

(1) Install belt clip

(2) Remove belt clip

Caller ID Operation

Reviewing the Caller ID list

1. Press ▲ or ▼ button, the LCD shows the total number of Caller ID numbers and new numbers. (ALL XX NEW XX)
2. Press ▲ or ▼ button to review the other caller numbers.

Dialling the Caller ID numbers

During the reviewing mode, press ↵ button to dialled out the number showed on the LCD.

If the Caller ID number exceeds 8 digits, you can dial the number as above or in other 4 ways as follows. (e.g. the number is 34567890123)

08 18:30 09/08
34567890123
JOHN BULL

- Press 0 button to dial the number with the 0 digit.

10:36
034567890123
TALK

2. Press  button to dial it out.

Deleting all records from phone book

 
1. In standby mode, press **MEMO** button, then the LCD shows the total number of records.
2. Press **F** button twice, then all of the records will be deleted.

Deleting a single record from phone book

1. Find out the record you want to delete. Please see "Reviewing names and numbers in phone book" for details.
2. Press **F** button twice, then the record will be deleted.

Install the battery

- (1) Slide the battery compartment cover downwards.
- (2) Insert new batteries as indicated, matching correct polarity (+, -).
- (3) Slide the cover up until it snaps in place.

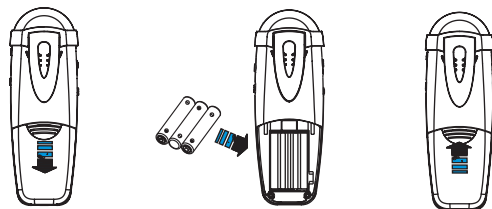


LCD Informations

Description

In standby mode: In this mode, the LCD will show the handset number, date and real time.



IN USE indicator:

After pressing  button, the *TALK* will turn on, in use indicator on base unit and handset will be bright steadily, which indicates that the unit is in use mode. The timer will turn on after about 6 seconds.

NEW call:

If there are new calls in memory, the **NEW** icon will turn on and flash. After all the new calls have been reviewed, the icon will turn off.

REPEAT icon:

If a call comes repeatedly, the **RPT** icon will turn on.

Battery indicator:

If the battery is low, the battery low icon will show as .

END OF LIST

This message will display when reaching the top (end) of the phone book or Caller ID list by using the **▲** or **▼** button.

PRIVATE

If the caller has exercised the option to prevent his number from being sent, it will be shown on the screen.

- a. Press **▲** or **▼** button to review the records.
- b. Enter the caller's name, then press **MEMO** button to review the matching record.
- c. Enter the first character of the caller's name, then press **MEMO** button. The LCD shows the matching records, press **▲** or **▼** button to get your desired record.

Modifying names and numbers in phone book

1. Find out the record you want to modify. Please see "Reviewing names and numbers in phone book" for details.
2. Press **SEL** button to enter the modifying mode, the last digit of the number flashes.
3. Enter the new number by keypad. If necessary, press **F** button to delete the error digits.
4. Press **MEMO** button to confirm and enter the name modification.
5. Enter the new name by keypad. If necessary, press **F** button to delete the error characters.
6. Press **MEMO** button to confirm.

Dialling a number from phone book

1. Find out the record you want to dial. Please see "Reviewing names and numbers in phone book" for details.

Phone Book

Storing names and numbers to phone book

You can store up to 60 names and numbers in the memory.

1. *Adding names and numbers to phone book:*

1. In standby mode, input the number you want to store by keypad.

2. Press **MEMO** button and then the LCD will show *NAME*.

3. Enter the name by keypad. If the next character is on the same button as the previous one, you need to for about 2 seconds before entering the next character. You can press **F** button to delete the error characters.

4. Press **MEMO** button to confirm and exit.

2. *Copying Caller ID numbers to phone book:*

1. In standby mode, press ▲ or ▼ button repeatedly to find out the Caller ID number you want to add.

2. If the number with caller's name, press **MEMO** button to store. If the number without caller's name, press **MEMO** button, then enter the name. After that, press **MEMO** button again to store.

Reviewing names and numbers in phone book

In standby mode, press **MEMO** button, then the LCD shows the total number of records.

Then there are 3 ways to review the records:

OUT OF AREA

This message will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing name and number delivery to your area via the long distance net work.

ERROR

If there are some error information in the incoming number or your telephone cannot receive the information correctly, the LCD will show ERROR. This does not mean that there is something wrong with your phone.



MESSAGE WAITING


If you have voice mail service from your telephone company and a recorded message is left, the "MESSAGE" will turn on and flash. You can press **F** button twice to delete the icon.

NOTE: This function should be supported by your local telephone company.

Handset Settings

Handset registration

1. Make sure the base unit is connected into the AC outlet and line jack.
2. Press and hold the  button on the base unit. After 3 seconds, press the **CH** button on the handset, the unit will give you a confirmation beep, which means that the code has been set and the handset will show *HS -1* on the LCD.
3. If you have a second handset need to be registered to the same base, press the **CH** button on the handset until you get a beep and the display shows *HS -2*. Continue the same procedure, if you have a third handset. If not, release the  button from the base unit.


NOTE: The  button on the base unit should be kept pressing during the whole procedure.

IMPORTANT NOTICE: The base unit and the handset have been set code already.

Settings



In standby mode, press **SEL** button once, then the LCD will show *PROGRAM* to indicate you enter the setting mode.

Out of range warning




In talk mode, if the handset is too far away from base unit, an out of range warning tone will be heard. The user should move closer to the base unit. If not, the handset will automatically return to standby mode after about 20 seconds. When the handset makes a noise, press  button to return to standby mode.

Line transfer

If extra handsets are set to the base unit:

1. During a phone conversation, press **SEL** button and handset number. The line will be hold and make music sounds to the other end, both the two handsets will ring.
2. The other handset can press  button to answer the call automatically after receiving the transfer ring.
3. Press  button to cancel the transfer if the other handset user does not want to answer the call during the transfer ring.
4. If the two handsets do not respond within 40 seconds, the line will be disconnected automatically.

Paging

1. Press the  button to page the handset.
2. Press  button once more to cancel the paging operation.
3. If you do not press  button again, the handset will ring for about 25 seconds then end the paging automatically.

Last number redial

Press **↶** button, then press **R/P** button to redial the last dialed number.

CH button

During the conversation, the phone will scan the clear channel automatically. If you still hear noise or static, press the **CH** button to find a clearer channel.

NOTE: It takes about 2 seconds for the unit to scan a channel.

Pause function

This function allows you to insert a temporary pause during dialling sequence. For example, dialling an international number (e.g. 011-886-22-795-1234), some telephone company systems will not register the entire number entry without a pause between the prefix numbers. You may have to dial 011-**R/P**, dial 886-**R/P**. This allows adequate timing for the phone number to register with the telephone company's system and complete the call.

Keys confirmation tone

Every time you press a key, your handset acknowledges it with a key tone.

Battery low warning and shut down protection

Once the battery voltage is low, the low battery icon will turn on. The low battery warning tone will also be generated if the handset is in talk mode. You can press **↶** button to return to standby mode, then replace it on the base to recharge.

LCD contrast setting

Press **SEL** button, then **2** button, and then the current level *CONTRAST ADJ XOX=1,2,3,4* will show on the LCD. Press **▲** or **▼** button to get the desired level and press **SEL** button once more to confirm and exit.

Ringer setting

Press **SEL** button, then **3** button, and then the current mode *RING ON/OFF* will show on the LCD. Press **▲** or **▼** button to activate/deactivate the ringer function. Press **SEL** button once more to confirm and exit.

Time setting

Press **SEL** button, then **4** button, and then the *SET TIME* will show on the LCD and the digit for *MONTH* will flash. Press **▲** or **▼** button to get the desired digit then press **SEL** button to confirm and enter the next item (the sequence is *MONTH-DAY-HOUR-MINUTE*). After the setting, press **SEL** button to confirm and exit.

Receiver volume and tone setting

You can increase the volume and adjust the receiver tone according to your own hearing requirements. The **receiver volume and tone select** switch within the battery compartment allows extra-receiver and tone function to be activated or not during the conversation. If you move the **receiver volume and tone select** switch to up position, the amplify function will be activated and the LED indicator will lit up, you can adjust the receiver tone and receiver volume button to get the desired volume level.

NOTE:

1.If you move the **volume and tone receiver select** switch up, the amplify function are automatically activated each time you use the phone. If you want to deactivate the function temporarily, press the **amplify** button once, at the same time, the LED turns off.

2.If you turn the **volume and tone receiver select** switch down, the amplify function are automatically deactivated each time you use the phone, you will need to activate the function temporarily by pressing the amplify button.

Vibration function

You can move the **shaking** switch to up position, when a call is receiving, the handset will shake. To turn off this function, just move the **shaking** switch to down position.

Basic Function

To make a call

1. Press **** button and wait for a dial tone.
2. Dial the telephone number.
3. During a call, you can press **F** button to get a new dial tone for another call or switch to call waiting.

To receive a call

To receive a call, just press **** button.

To end a call

To end a call, just press **** button.

Pre-dialling function

1. In standby mode, dial your desired number. You can press **F** button to delete the incorrect digits.
2. If the phone number is correct, press **** button to dial it out. Then you can start your conversation.

Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.