

Stalker 360 – User’s Manual

The following is a guide to assist you with the operations & trouble shooting of your new Western Rivers MP 3 electronic game caller. We appreciate you as our customer and wish you the best of success. Good luck and happy hunting!

STALKER 360 BUTTON PAD & REMOTE BUTTON OPERATIONS



POWER BUTTON: The “Power” button on the game caller is designed to manually turn your game caller to ON or OFF status. By pressing and holding the button down for a few seconds you will turn the unit on. The Western Rivers welcome screen will come up and then go to your library list. If you want to turn the unit off, you must press & hold down this button until the display goes to a blank screen and is no longer illuminated. The power button on the remote control functions the same way as the game caller. **This button is designed to put the caller into a “Standby Mode” while in use! This button will not power off the game caller.** The battery will discharge if you fail to manually turn unit off on the main button pad. (See Battery Maintenance) The game caller must be turned on before you can control it with the remote.

The “Power” button on the Remote Control unit is designed to remotely turn the game caller to the ON or STANDBY status only from a remote location. Press the button on the remote once to turn unit ON, press & hold to power game caller OFF. When game caller is in a standby mode, it is operating on minimum battery consumption. If power button doesn’t appear to work on either unit, please check the battery and replace. Low battery level will also affect the operation of the button pad. Make sure that game caller is showing a full to half battery cycle life before taking it to the field. (See Battery Maintenance).

IMPORTANT NOTE: The game caller will need to be connected to the remote after you upload or delete ANY sounds into the systems hard drive so that the remote can recognize the new order of the playlist selections (See Downloads & Uploads).



PLAY / ENTER BUTTON: The “Play” button on both units will **start** the pre-selected sound you have chosen. The “Play” button on either unit can be activated by firmly pressing the button. Press & hold is not required. You can also play two different sounds out of the speakers. In order to do this you need to choose your first selected sound. Once sound is playing press the Previous button to go back to the playlist and select and play your second sound. This icon also acts as the “Enter” button, so if you want to go back or make a selection choice you’d press this button. If either “Play” button on either unit appears not to work, check the battery for status. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control **will not** show the same information. Requests transmitted from the remote control **will be** shown on the game caller’s LCD.



PAUSE BUTTON: The “Pause” button on both units will **pause** the play of the current sound selected. If the “Pause” button appears not to work on either unit, check the battery for status. By pressing the **PLAY** button will restart the paused sound at the exact same location it was paused at.

The volume of the unit will automatically resume at the same level as previous setting when this function is activated. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control **will not** show the same information. Requests transmitted from the remote control **will be** shown on the game caller’s LCD.



NEXT BUTTON: The “Next” button on both units allows the user to scan in a downward motion to arrive at the desired sound to play that is seen on the LCD. To activate, firmly press and release for each scan to the next selection. Press & hold will scan the entire selection. For best results rename and reload sounds in your special grouping. If the “Next” button appears not to work on either unit, check the battery for status. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control **will not** show the same information. Requests transmitted from the remote control **will be** shown on the game caller’s LCD.



PREVIOUS BUTTON: The “Previous” button on both units allows the user to scan in a upward motion to arrive at the desired sound to play that is seen on the LCD. To activate, firmly press and release for each scan to the previous selection. Press & hold will scan the entire selection. For best results rename and reload sounds in your special grouping. If the “Previous” button appears not to work on either unit, check the battery for status. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control **will not** show the same information. Requests transmitted from the remote control **will be** shown on the game caller’s LCD.



NEXT 10 BUTTON: The “Next 10” button recalls ten (10) sounds at once thus allowing you to instantly scan through your entire library of sounds in the order they were loaded very quickly. The

Stalker 360 – User’s Manual

button function is the same on both the game caller and the remote. If the “Next 10” button appears not to work on either unit, check the battery for status. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control will not show the same information. Requests transmitted from the remote control will be shown on the game caller’s LCD.



PREVIOUS 10 BUTTON: The “Previous 10” button recalls ten (10) sounds at once, thus allowing you to instantly scan through your entire library of sounds in the order they were loaded very quickly. The button function is the same on both the game caller and the remote. If the “Previous 10” button appears not to work on either unit, check the battery for status. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control will not show the same information. Requests transmitted from the remote control will be shown on the game caller’s LCD.



VOLUME UP BUTTON: The “Volume Up” button adjusts the volume upward from the current setting on the game caller to the desired level. Press to increase volume step by step OR press & hold to increase quickly. Remote button provides the same function. The LCD bar volume bar will display the current level of sound on the game caller and the remote. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control will not show the same information. Requests transmitted from the remote control will be shown on the game caller’s LCD.



VOLUME DOWN BUTTON: The “Volume Down” button adjusts the volume downward from the current setting on the game caller to the desired level. Press to decrease volume step by step OR press & hold to decrease quickly. Remote button provides the same function. The LCD bar volume bar will display the current level of sound on the game caller and the remote. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control will not show the same information. Requests transmitted from the remote control will be shown on the game caller’s LCD.



DECOY BUTTON: The “Decoy” button allows the user to power on/off any motion device plugged in to simulate a live animal. (#174 Deceptor Rabbit) You must have the 2.5mm / 2.5mm power cord adapter for this function to work properly. Simply hook the power cord adapter to the units decoy auxiliary port & then to the Deceptor Rabbit.

IMPORTANT NOTE: DO NOT install any batteries into the decoy if using power from the game caller.

Once this is done you now have control of the motion for the decoy with the “Decoy” button on the unit or the remote. Press firmly once to activate & press again to deactivate. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control will not show the same information. Requests transmitted from the remote control will be shown on the game caller’s LCD. Decoy available at www.gsmoutdoors.com.



SINGLE/DUAL SPEAKER: The game caller features Dual Hi-output swivel speakers for increased volume and high performance sound clarity. This button will allow you to select if you’d like to play the sound from the one right side speaker or both speakers instantly. The icon on the LCD will denote how many speakers are in use.


Simply press the button once to select the opposite. Use of both speakers at time will greatly reduce operating time. If you use the button pad on the game operate the functions of the caller, the LCD on the remote control will not same information. Requests transmitted from the remote control will be shown on the game caller’s LCD.



the same caller to show the



SPEAKER SELECTION: The game caller also allows you the ability to select which speaker you would like to rotate. By pressing the icon you will switch from left to right to both speakers. The icon on the LCD will denote which speaker(s) you chose.

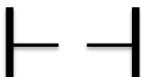

(Speaker Selection -L/R)



(Rotating Icon)

Remote button provides the same function. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control will not show the same information. Requests transmitted from the remote control will be shown on the game caller’s LCD.

Stalker 360 – User’s Manual



SPEAKER ROTATION: The game caller features two swivel speakers that can independently rotate 180° together or separately. Depending on which icon you press will determine which direction the speaker(s) will turn. Remote button provides the same function. If you use the button pad on the game caller to operate the functions of the caller, the LCD on the remote control *will not* show the same information. Requests transmitted from the remote control *will be* shown on the game caller’s LCD.



ADD/REMOVE TO FAVORITES: The game caller allows you to create and store your favorite sounds into a Favorites folder on the main menu, giving you access to it the moment you turn the caller on. This can “only” be done from the remote control unit. To “Add” a sound to the favorites list, simply go to the sound you want to add and start playing it and then press the icon with the “+” on it. To remove the sound from the favorites list you need to first go to the list itself. Highlight the sound you want to remove and press the icon with the “-“ on it. If the buttons appears not to be working properly, check the battery for status.

UPLOADING /DOWNLOADING SOUNDS (PC VERSION)

The game caller comes with a 4GB SD card loaded with sounds that can be linked to your home’s personal computer via the USB Type B cable and allows you to save the pre-loaded sounds to your computer’s hard drive. You will need a personal computer that’s running Windows XP or newer.

There are two ways to activate this procedure, first way is if your computer has a built-in SD card slot, you can remove the SD card from the caller and plug it OR if it doesn’t then you will need to connect the USB/DATA cable to your computer, then power on your game caller, open auxiliary cover located on top of the game caller, then insert USB/DATA cable into caller USB port.

A successful USB connection will display the USB Icon on the game caller LCD. If you run into an error of it not recognizing the drive, follow the instructions on the screen. Once the corrections have been made move to the next paragraph.

Once either method is done, go to the “My Computer” icon on your personal computer’s main screen & click on it. The SD card or game caller should be recognized as a removable drive. Click on this drive and it should display the sounds.

NOTE: At this time we recommend that you save all the sounds to your PC before proceeding. This can be done by selecting “EDIT” from the tool bar and then clicking “SELECT ALL”. Once this is completed choose the file location in which you wish to save them. After you have stored your sounds successfully then you are ready to update the sounds and load any additional sounds that you may want.

NOTE: Any sound loaded must be formatted to .mp3 or .wav before the game caller will recognize it. Simply locate the sound that you wish to load and right click on the computer mouse. You should see a “Send or Send To” option. Click on this option and send the sound desired to the designated drive that represents the game caller on your computer. The 4GB of memory, allows for approximately 2000 minutes of recorded .mp3 & .wav sounds. The game caller has the ability to go up to a 16GB SD card (sold separately) which would hold a lot more.

NOTE: You should not unplug the USB/DATA cable form the personal computer or the game caller without ejecting the unit FIRST. This can be done by selecting the “My Computer” option on your desktop and then choosing the appropriate “removable drive” that symbolizes the game caller unit. Next step is to right click on the mouse and a dialog box should drop down. Select the “Eject” option. You should then be advised that it is safe to remove or unplug the game caller at this time.

UPLOADING PLAYLIST TO REMOTE CONTROL: To update the remote control’s playlist with the new selection that you have added or deleted from the game caller, simply turn on or leave the power on the game caller after the selection update, then power on the remote control. Plug the Uplink Auxiliary cord into the game caller’s Uplink port and then into the remote. The update should automatically start. The LCD will prompt you when the task has been completed.

NOTE: All sounds will automatically repeat/loop at the end and start over without hesitation.

BATTERY POWER PORT: This port is for powering the game caller from a 12-volt auxiliary power supply. Recommended battery is a 12-volt (7 to 9 amp) sealed lead acid. **NO CAR BATTERY.** Hooking up automotive battery *will* void your warranty.


Stalker 360 – User’s Manual

DECOY POWER PORT: When connected to the caller, caller provides power and remote control capabilities for the decoy.

REMOTE CONTROL UPLINK PORT: This port is for allowing the uploading of data (play list) from the game caller to the remote control. If any changes are made to main calling system you must sync your remote each time. (Uplink cable supplied with game caller)

USB PORT (Type B): This port will allow you to connect your game caller directly into a personal computer that contains a USB port to add or remove sounds.

SD MEMORY CARD SLOT: Utilize this port to add or play sounds.

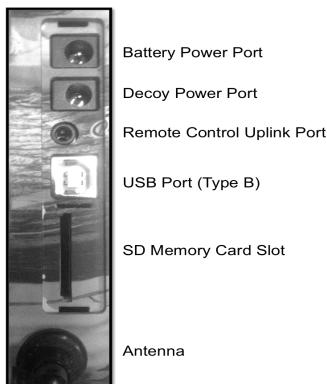

EXTREME CLIMATE CONDITIONS & OPERATION CONDITIONS

Your new Western Rivers MP3 Game Caller is designed to withstand most rugged Field Use conditions. However, we highly recommend that you never leave your unit in a place where the temperature exceeds 110 degrees for a prolonged period of time as this may cause damage to your unit.

When using your Game Caller in extreme cold weather conditions, place some form of warming device around the unit to achieve normal operation conditions. Place remote control unit close to your body as to keep the remote warm as well. Notes: The game caller is designed to operate outdoors at operation conditions of -13°F to 110°F in most all weather conditions. However, extreme conditions in the climate can alter the operation conditions of the unit and the above may vary pending the extremity of your outdoor use. You may experience shorter remote control distances, decreased operational time, slower button pad response, and minimum sound variances pending your conditions.

Altitude, weather & foliage are major factors in the remote range. Any visual obstructions between the remote and the game caller unit can decrease the operational range of the unit. The yardage range quote is based on ideal operational conditions in a line of sight situation at a temperature of 70 degrees with a fully charged battery in the unit & a new battery in the remote. Other conditions may cause the results to vary.

Stalker 360 – User's Manual

BATTERY MAINTENANCE

STALKER 360 UNIT: The units are designed to operate on 8 AA alkaline batteries. The LCD on the game caller will denote the level of the batteries. It is best to replace the batteries as the LCD graph bar displays 25% battery level. This will assure you that you have optimal battery level to make the hunt successful. **Batteries must be removed from game caller when not in use. Failure to the game caller caused by defective batteries will void your one-year warranty.**

BATTERY RUN TIME: 2.5 – 5.0 hrs. This time may vary depending on the temperature and the quality of batteries you have purchased. Always take a spare set of batteries with you on the hunt.

REMOTE CONTROL: To change the battery in the remote control, simply pull outward on the lower back part of the remote. Battery is a nine (9) volt alkaline. Battery should be changed at the beginning of each season. If you notice that the range of your remote has decreased it is suggested that you replace the battery at this time. **Batteries must be removed from game caller when not in use.**

Failure to the game caller caused by defective batteries will void your one-year warranty

NOTE: Should you leave your caller remote on for ten (10) minutes without use; the remote will automatically turn off. The normal operating battery life for the caller remote is approximately

BACKLIGHT (LCD): The backlight on the LCD will turn off automatically after 5 second of on time without being used. Any touch of the button will cause the LCD backlight to re-illuminate.

OPERATING SYSTEMS REQUIRED

- Windows Vista or above.
- Mac OS 10.6 or above.

OPERATIONS

Once you have charged the unit & familiarized yourself with all the features, then it is time for the field test. Place the unit out in an outdoor setting and position the unit in a desired location that is natural to the area for the type of calling that you are attempting.

Check the volume settings, selected sounds, direction of speaker & step off various distances to check to unit vs. your own abilities of sight & hearing. Run different tests from sound selection, pause-play to volume levels to better understand the unit. After this is done start scouting different area for signs and try your unit in the field. Remember that the more sets that you make in a day the more opportunity that you will have to take your desired game. (Not necessary when whitetail hunting)

DOWNLOADING FROM WEBSITE

To download sounds from our website, you must go to www.gsmoutdoors.com, and then go to Western Rivers. Select any sound at this point that you may wish and choose the download option.

**PLEASE BROWSE THE OTHER AREAS OF OUR WEBSITE TO LOCATE VARIOUS
ACCESSORIES FOR YOUR NEW UNIT AS WELL AS HUNDREDS OF OTHER HIGH
QUALITY HUNTING EQUIPMENT & SUPPLIES!**



Stalker 360 – User's Manual

CUSTOMER WARRANTY

GSM OUTDOORS guarantees the satisfactory operation of our **STALKER 360** for one year from the date of purchase. If one should ever fail to operate, we will repair or replace it at no cost.

Upon inspection of the caller, **GSM OUTDOORS** will either repair or replace any unit or part found to be defective. The decision to repair or replace material is solely at our discretion. If product is obsolete and beyond repair at the time of return, we will replace it with the closest similar product available.

GSM OUTDOORS is not responsible for incoming freight charges. Components damaged by any use of the product other than for its intended function, or by the owner's failure to maintain the unit in the manner and frequency prescribed by the instructions supplied at the time of purchase are not covered. Repair or replacement costs associated with such issues of the product will be based on **GSM OUTDOORS** net prices at the time of the work performed.

GSM OUTDOORS will not be held responsible, or assume any liability, for product damaged in transit, caused by acts of God; rework or repairs performed on product without our prior, written consent; damage to associated equipment; loss of profit; or any other damages and claims.

EXCEPTIONS

Battery Holder (1 Year)

Unit is not warranted for defects or damages incurred from the leakage of batteries. If the cause of damage or if a defect is determined to have been caused by a battery leakage, the one year warranty is voided. If unit is submerged underwater warranty will be voided. All repairs will be billed at **GSM OUTDOORS** net prices for labor and repair items. Batteries must be removed when unit is stored and not in use.

CUSTOMER SERVICE

Should a malfunction occur, first check to see that some simple, obvious, or routine step in the normal operating procedure has not been overlooked – remote battery, main unit battery, sounds loaded properly, etc.

If problems continue, please feel free to contact our Customer Service dept. at (877-269-8490).

Information for FCC:

NOTE1: Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

NOTE2: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

MP3 and WAV format that are supported

For MP3:

	32	40	48	56	64	80	96	112	128	160	192	224	256	320
48000	+	+	+	+	+	+	+	+	+	+	+	+	+	+
44100	+	+	+	+	+	+	+	+	+	+	+	+	+	+
32000	+	+	+	+	+	+	+	+	+	+	+	+	+	+

For WAV:

PCM: 16 and 8 bits, any sample rate<=44k Hz

IMA_ADPCM: Any sample rate<=44k Hz



Stalker 360 – User's Manual

Warranty Registration Form

Name: _____

Address: _____

City: _____

State: _____

Zip Code: _____

Model#: _____

Serial #: _____

Purchase Date: _____

Purchase From: _____