


BENEVE®



Quick Start Guide

M55

1 Device Overview

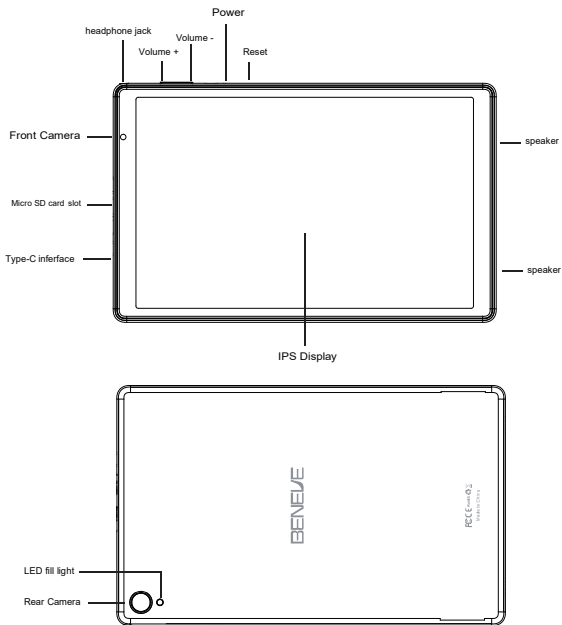

2 How to insert the micro SD card

To ensure that the Micro SD memory card can be used normally, please place the Micro SD card according to the below steps.

- ① Open the Micro SD card plug.
- ② Insert the Micro SD card silk-screened label upwards (screen direction)

into the card slot.

③ When the Micro SD card slot makes a "click" sound, it means that the Micro SD card has been inserted in place.

3 How to boot

Press the power button for 3-5 seconds to boot.

Note: This product is a non-removable battery. When the battery is low and cannot be turned on, you need to connect the charger to charge for about 10-20 minutes and then press the power button to turn it on.

4 Language switch setting

① In the APP interface--settings--system--language and input method--language--click "add language".

② Select the language you need, and the system will automatically jump back to the "language" interface.

③ Long press and hold the icon behind the added language bar, then drag it to the first position and release, the system will automatically switch languages.

5 Safety Precautions

In order to ensure the safe use of this product, please strictly abide by the following rules.

① It is not advisable to put other items on the tablet device to avoid damage to the screen.

② When not in use, it should be placed on a stable table to avoid damage to

the body due to accidental falls.

- ③ When not in use for a long time, do not plug in the charger for a long time to charge.
- ④ Avoid strong impact or squeeze on the equipment.
- ⑤ Try to avoid using it in a strong magnetic field and strong electrostatic environment.
- ⑥ The built-in electronic components are afraid of dampness and water, and they must be kept away from high temperatures, humidity, and dust. Please keep them in a dry place and avoid direct sunlight.
- ⑦ Once water or other liquid splashes on the tablet, it should be turned off and wiped dry immediately.
- ⑧ Do not use any chemical cleaners or other liquids to clean the machine to avoid corrosion and moisture damage. Please use a soft dry cloth or paper towel for cleaning.
- ⑨ Please keep the tablet and accessories out of the reach of children, and do not allow children to use the tablet unattended.
- ⑩ When reading files on the Micro SD card, do not remove the Micro SD card to avoid damage to the memory card or data files. Back up your important data at any time to avoid loss.

6 FAQ

6.1 The tablet cannot be turned on

The tablet's battery may be low. Please plug in the adapter to charge for 10 to 20 minutes and try to power it on again.

6.2 The tablet cannot be charged

- ① The USB charging cable is defective. Try to replace the USB charging cable with a new one.
- ② If you still cannot charge after changing the USB charging cable, the charging adapter may be defective. Please try to replace the charging adapter with a new one.

6.3 The tablet cannot recognize the Micro SD card

- ① Check if the slot and orientation of the Micro SD card are correct, and try to re-plug the Micro SD card.
- ② If the Micro SD card still cannot be recognized, it is recommended to put the Micro SD card in another mobile phone, observe whether it can be recognized normally, and judge whether the Micro SD card has been damaged.

- ◆ If the Micro SD card cannot be recognized in the mobile phone where the Micro SD card is tested, it means that it has been damaged. Please replace the Micro SD card.
- ◆ If it can be recognized, please back up the content of the Micro SD card, format the Micro SD card, and then put it back into the tablet to see if it can be recognized normally.

6.4 Tablet PC cannot connect to WIFI

- ① Check if the WIFI signal is normal.
- ② Check if the WIFI password is correct.
- ③ If the entered WIFI password is correct, but cannot connect to the network, try restarting the wireless router.
- ④ If you still cannot connect, you can restart the tablet and try to connect again.

6.5 how to do when the system crashes or slows down

- ◆ When the system or APP is stalled and there is no response from touching and there is no response from pressing the power button, please try to press the "Reset button" to force the restart of the tablet.
- ◆ When the tablet's files are full of storage space, the system may run APP very slowly. In this case, you can first backup the file data in the tablet, then exit the Google Account and boot the password, and restore the factory Settings.

Note: To restore factory Settings, please remove your Google Account and boot password first. If you forget your Google Account password and boot password and restore factory Settings without first removing your Google Account password and boot password, the tablet will not be able to access the system.

Google is a trademark of Google LLC.



BENEVE®

support1@sungworld.com

<http://www.sungworld.com>

Made in China

FCC Statement

This device complies with part 15 of the FCC Rules.

Operation is subject to the following

two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

. Increase the separation between the equipment and receiver

. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

. Consult the dealer or an experienced radio/TV technician for help.

Caution: This device not explicitly approved by manufacturer could

Caution: Any changes or modifications void your authority to operate this equipment.

RF Exposure Information
The device was evaluated to meet general RF exposure requirements. This equipment should be installed and used with a minimum distance of 0 mm between the radiator and your body.