

Menu

Table of contents

Section One: Getting Started

1.1	Appearance.....	3
1.2	Power button.....	5
1.3	Charging the device.....	6
1.4	Lock and unlock the screen.....	7
1.5	Touch-Screen Navigation.....	8
1.6	Homepage information column.....	9
1.7	Text input.....	10
1.8	Reset.....	11
1.9	USB connect.....	11

Section Two: System Setting

2.1	Wireless networks setting.....	13
2.2	Sound setting.....	15
2.3	Display setting.....	15
2.4	Application setting.....	17
2.5	Date & time setting.....	18
2.6	Language and input setting.....	18
2.7	Check battery level and usage details.....	20
2.8	Change backup & reset options.....	21

Section Three: Internet Access

3.1	Browser.....	22
-----	--------------	----

Section Four: Try Some Apps

4.1	Use all Apps.....	24
4.2	Camera.....	26
4.3	Gallery.....	28
4.4	Music.....	30
4.5	Calendar.....	31
4.6	Calculator.....	33
4.7	File browser.....	33
4.8	My music.....	35
4.9	E-mail.....	38
4.10	Screen Capture.....	40
4.11	Clock.....	41

Section Five: Hardware Configuration.....	42
--	----

Section Six: Attention.....	43
------------------------------------	----

Important Safety Precautions & FCC Statement.....	44
--	----

Section One: Getting Started

1.1 Appearance

Front view



1. Touch panel: 7" Capacitive touch screen: Clicking and dragging on the screen are available.
2. Built-in Camera: 0.3MP

Top view



1. Power source
2. Earphone jack
3. HDMI
4. Volume “+”, “-”
5. Power button

Back view



1. Reset
2. Micro SD Card slot support up to 32GB
3. Built-in Camera: 2.0MP
4. Speaker

1.2 Power button:

Turn on

Press and hold the power button about 2 seconds to open the screen.

Shut down

Press and hold the power button, then the screen shows< Do you want to shut down>, tap<OK> to shut down.

Turn on the standby mode

In boot mode, you can tap the power button on the top side of the tablet; the system will be set into the standby mode which can save power.

Reboot

Press the power button and hold for 2 seconds →Tap reboot →tap OK.

Silent mode

Press the power button and hold for 2 seconds →Tap Silent mode.

Reset

Press the reset button could be reset the device. It's will clear all the data, Please be careful with the function. After the current reset function cannot

restart, it can only be turned off, so you need to press the power button to restart the device after reset.

Airplane mode

Press the power button and hold for 2 seconds →Tap Airplane mode.

Turn off the standby mode

In the standby mode, light tap of the power button on the top side to wake up the device, enter the normal operation.

Force turn off: If device does not respond, press and hold the power button for 8 seconds.

Note: If it is necessary, we don't suggest use **Force turn off**. You should follow the steps to perform the shutdown.

1.3 Charge the device

Apply the power adapter to charge for device.


Use this device for the first time; charge your battery 6 hours to ensure that the battery is full of charged before use. It is not recommended to use the device while charging. Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

1.4 Lock and unlock the screen

Lock

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter Settings → Security → Lock Screen to switch.

Lock screen displays the following:

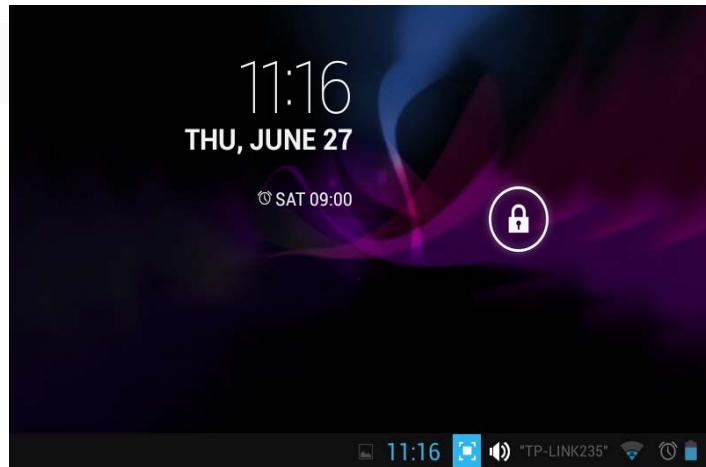

You can set up the sleep time in the <display> under system setting.

The system will sleep automatically and lock the screen to the standby mode if without any activity when reaches the preset of standby time.

Unlock



Moving and dragging this  to the right to unlock the screen and enter the application interface.



1.5 TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

Tap: Quick tap & release on an item on the screen.

Touch & hold: Touch and hold in place approx 2 seconds, and then release to display an options window. Finger slide: Touch & slide your finger across the screen and then release.

1.6 Homepage information columns




1. Back.
2. Home.
3. Recent Apps.
4. Hide status bar.
5. Current time.
6. Screen capture.
7. Volume.
8. Wireless network
9. Battery Status.
10. Google search.
11. Voice search.
12. Add Widgets/Apps shortcuts or setting wallpapers and more.
13. Tap to view the applications screen.

- Tap on any application icon to launch it.
- Touch, hold and then slide icons to reposition them on the screen.
- Touch, hold and slide icons onto  to remove them from the Desktop screen.

1.7 Text input

When use the tablet, you can use the virtual keyboard to enter text, number, symbols directly by touching screen. After selecting the Android input method, the default keyboard show as below:

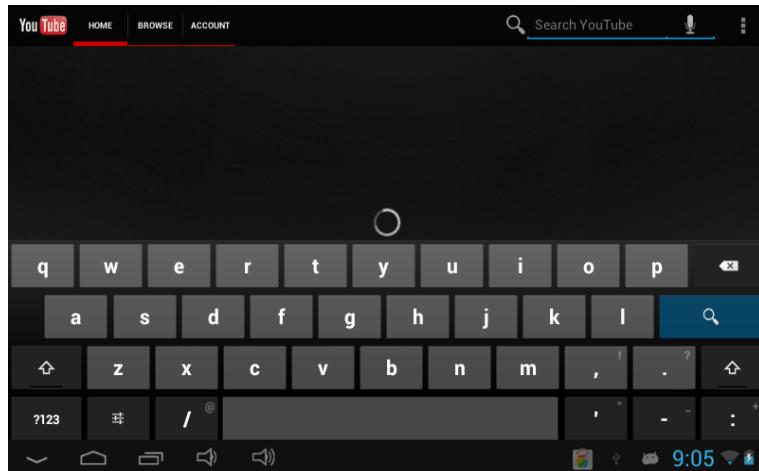

To switch the numbers and letters, please press 

To switch the capital and lowercase letter, please press 

1.8 Reset

Reset Button: Press the reset button to re-boot the device. Reset will erase all data on the device, please caution this feature. (**Note:** the reset function does not restart system, so after reset you need to press the power button to re-boot.)

1.9 USB connect


Connecting to a computer

Please connect PC with USB cable to your tablet and you will see on your tablet, click this sign and turn on USB storage to connect your device.


1. Connect the Device and computer by Micro USB cable, the reminder column will show the remind information.
2. Click the USB icon, pop up the status with reminder information Show as below picture:



- (1). Click the “USB Connected”. Show as below Picture:

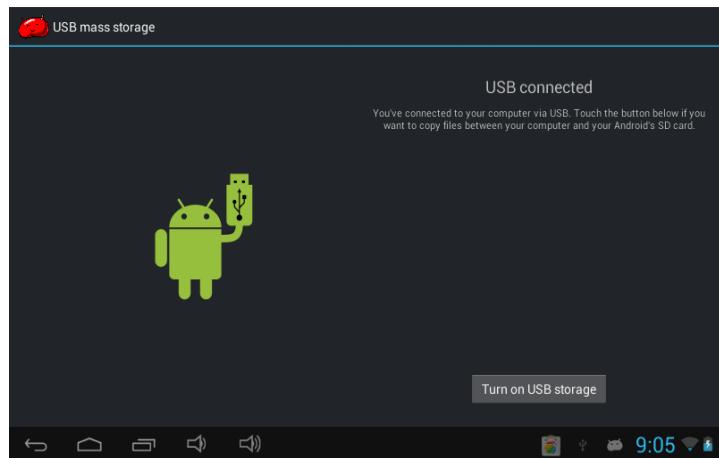

(2). In the pop-up picture, click “Turn on USB storage”; after the connection is successful, the robot icon will turn yellow. Show as below:

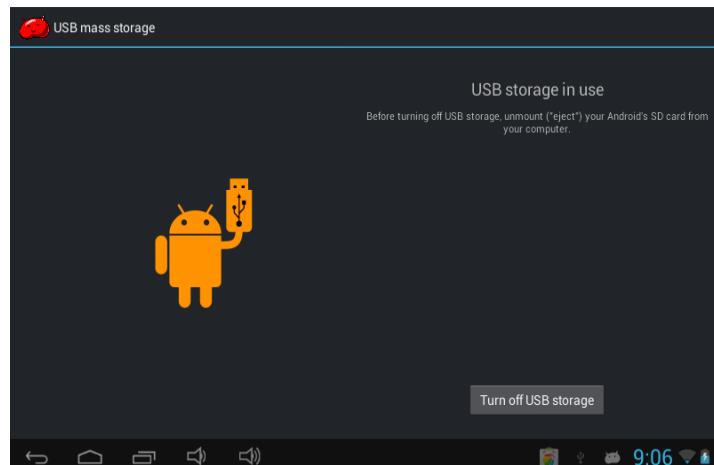

Turn off USB storage to disconnect your device with PC.

3. Copy files between your computer and your Android's SD card.

4. After copying finishes, click “Turn off USB storage” to disconnected.

When the device is connected to the computer, please do not play files, in order to avoid adverse effects.

Section Two: System Setting

2.1 Connect to Wi-Fi networks

Turn Wi-Fi on & connect to a Wi-Fi network

If you're adding a Wi-Fi network when first setting up your tablet, Wi-Fi is turned on automatically.

1. Touch **Settings > Wireless & networks > Wi-Fi**.
2. Slide the Wi-Fi switch to the **On** position.

The tablet scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon. If the tablet finds a network that you connected to previously, it connects to it.

3. Touch a network name to see more details or connect to it, and type a password if necessary.

Or, if your Wi-Fi router supports Wi-Fi Protected Setup, touch the WPS icon on your tablet, and then touch the same button on your router.

To modify a network's settings, touch & hold the network name.

Add a Wi-Fi network

You can add a Wi-Fi network so that your tablet will remember it, along with any security credentials, and connect to it automatically when it's in

range. You must also add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

To join a secured network, you first need to learn security details from the network's administrator.

1. Turn on Wi-Fi, if it's not already on.
2. Touch the Plus icon at the top of the screen.
3. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details.
4. Touch **Save**.

The information about the network is saved. Your tablet will connect to this network automatically the next time you come within range.

Forget a Wi-Fi network

You can make the tablet forget about the details of a Wi-Fi network that you added—for example, if you don't want the tablet to connect to it automatically or if it's a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch the name of the network.
3. Touch **Forget** in the dialog that opens.

2.2 Sound setting

Change sound settings

If your tablet has multiple users, each has separate Sound settings.

To customize the sounds your tablet makes, go to **Settings > Device > Sound:**

Volumes set the master volume separately for music, notifications, and alarms. You can still use the physical volume control on the tablet to rise or lower volume of whatever sound is currently playing.

Default notification announces the arrival of notifications unless you specify a different sound in an individual app.

Touch sounds give audible feedback when you touch active icons or buttons on the screen.

Screen lock sound is triggered when you unlock the screen.

2.3 Display setting

To change your tablet's brightness, font sizes, and more, go to **Settings > Device > Display**.

Brightness

Touch and drag the slider to set the brightness or touch **Automatic brightness**.

Touch **OK** to save the setting.

Wallpaper Settings

You can choose a picture to display on the Home Screen, Lock screen, or to both the Home and lock screens. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. From a Home screen, touch **Settings** → **Display** → **Wallpaper**.

2. Touch **Home screen**, **Lock screen**, or **Home and lock screens**.

Then Select wallpaper from screen displays the following options: **Gallery**, **Live wallpapers**, and **Wallpapers**.

Gallery: Access the Gallery to select a photo. Touch a photo to select it.

Crop and resize the picture, if desired. Touch **Done** to save the picture as wallpaper. Touch **Cancel** to cancel.

• **Live wallpapers**: Choose from pre-loaded interactive animated wallpapers.

Touch a wallpaper to see an example. If available, touch **Settings** to view options for the selection. Touch **Set wallpaper** to save your choice. Touch

Back to return to the Live wallpapers menu.

• **Wallpapers**: Choose from pre-loaded wallpaper images. Touch an image

to view it. Touch **Set wallpaper** to save it as wallpaper. Touch **Back** to return to the Home screen.

Dormancy time

When the screens in light state a period of time, it will automatically lock to save the power if without any operations.

Font size

This option changes the font size to the largest available. For more fine-grained control over font size, go to **Settings > Display > Font size**.

Touch **Font size** and select a font size.

2.4 Application setting

In the application setting, you can manage the running services and access rights

Management and development only for developer.

Application management

In this setting, it is easy to manage and delete some applications that have been installed.

First, get into the application list, click the **according to sort** buttons to order the alphabet and number; click the **all** menu to scan the running program or programs that provide by a third party software developers.

Chick on an application, you can see the application's relevant information to clear the cache unloads programs, clears the default value or forced to stop operation etc.

Running services

In this setting, you can end and set up some programs that are running Access management.

In this setting, by using the opening or prohibition to manage the applications to access content permissions.

View and control services running on your device.

- 1.** From a Home screen, touch **Apps** → **Settings** → **Application manager**.
- 2.** Touch the **Running** tab. All the applications that are currently running on the device display.
- 3.** Touch **Show cached processes** to display all the cached processes that are running. Touch **Show services in use** to switch back.
- 4.** Touch one of the applications to view application information. The following options display:
 - **Stop**: Stops the application from running on the device. This is usually done prior to uninstalling the application.

2.5 Date & Time setting

In this setting interface, you can set up your system time and series options.

Time setting

You can use automatic time from the network, to choose the time zone, to set specific date and time and display format in time setting.

2.6 Language and input setting

In this setting interface, you can choose the language and keyboard input you want.

Language

Set the language used by your device.

1. From a Home screen, touch **Apps → Settings → Language and input → Language**.
2. Touch a language / locale from the list.

Input method

In here the input methods can be set by users, you can add the words in the dictionary or to delete.

Keyboards and Input Methods

Set the keyboard used by your device.

1. From a Home screen, touch **Apps → Settings → Language and input**.
2. Touch **Default** and select a keyboard.

This keyboard is the only selection available for this device.

3. Touch **Set up input methods**.
4. Touch **Google voice typing** to automatically use Google voice typing.
5. Touch next to Google voice typing. The following options are available:
 - **Choose input languages**: Touch **Automatic** to use the local language or select a language from the list.
 - **Block offensive words**: Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches. When enabled, a check mark appears in the check box.
 - **Download offline speech recognition**: Enable voice input while offline.

Touch the **All** tab to download speech recognition for other languages.

Android keyboard

You can set up automatic capital function of opening or closing.

2.7 Check battery level and usage details

Open **Settings > Device > Battery**.

The list at the bottom of the screen shows the breakdown of battery usage for individual apps and services. Touch a graph for more details. The details screen for some apps includes buttons that allow you to adjust settings affecting power usage, or stop the app completely. Battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.

The discharge graph shows battery level over time since you last charged the device, and how long you've been running on battery power.

See how much battery power is used for device activities.

1. From a Home screen, touch **Apps → Settings → Battery**.

The battery level displays in percentage. The amount of time the battery was used also displays. Battery usage displays in percentages per application.

2. Touch **Screen** or **Android System** to view how the display and the Android system are affecting battery use.

2.8 Change backup & reset options

If your tablet has multiple users, only the owner can see the backup & reset options.

To view the settings described here, go to **Settings > Backup & reset**.

You can back up settings and other data associated with one or more of your Google Accounts. If you need to replace or factory reset your device, you can restore your data for any accounts that were previously backed up.

These options are available:

Back up my data. If you check this option, a wide variety of your personal data is backed up automatically, including your Wi-Fi passwords, Chrome bookmarks, a list of the apps you've installed on Google Play, the words you've added to the dictionary used by the onscreen keyboard, and most of your customized settings. Some third-party apps may also take advantage of this feature, so you can restore your data if you reinstall an app.

If you uncheck this option, your data stops getting backed up, and any existing backups are deleted from Google servers.

Backup account. Displays the Google Accounts whose information gets backed up. You must sign in with one or more of these accounts on a new or reset device to retrieve the associated information.

To add a new account, touch **Backup account > Add account**.

Automatic restore. Check this option to restore settings and other data when you reinstall an app. This feature requires that you are backing up your data with your Google Account and that the app is using the backup service.

Factory data reset. Touch this option, then **Reset tablet** to erase all your personal data from internal storage, including information about your Google Account, any other accounts, your system and app settings, any downloaded applications, and your music, photos, videos, and other files.

After resetting your tablet, you'll need to re-enter the same information requested when you first set up your tablet. If you've been backing up your data to a Google account, an option during the setup process allows you to restore it.

Some third-party apps also make use of the backup service, so if you reinstall one, its settings and data are restored.

Section Three: Internet Access

3.1 Browser

Require network connection before using a web browser, if there are network supporting problems, please contact your network operator or the service provider.

Make sure the WIFI signal is within range.




Please touch to set up the WIFI connection and select the available WIFI source from the list.



Touch here  in the application list to enter the browser pages; the default homepage is the Recently Viewed showing recently viewed pages.

Browser supports the following features:

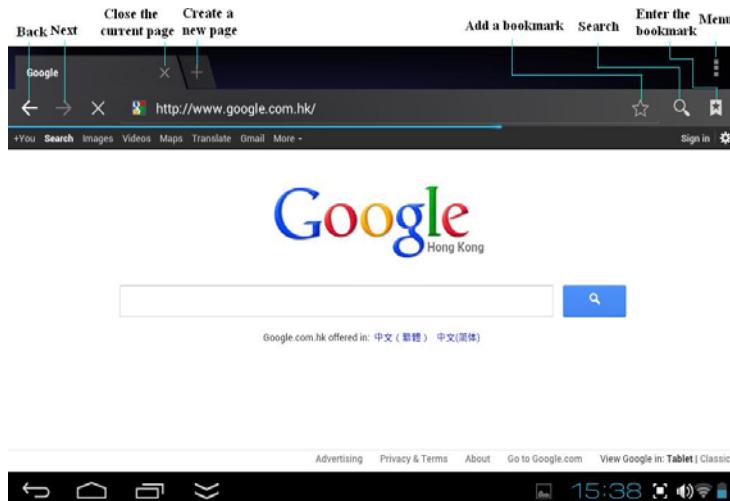

Enter the URL-touch the input area to get the soft keyboard, then text the



UPRL Bookmark search-click this  to add into the bookmark.



Touch this  to read the favorite website that collected.



Touch this  to search the internet.



Touch this  to add new browser.



Touch this  to close the browser.

Section Four: Try some Applications

4.1 Use All Apps

To see all your Apps, touch All Apps in the Favorites tray on any Home screen.

This is where you can see all your Apps, including those downloaded on Google Play. You can move App icons to any of your Home screens.

From All Apps, you can:

- Move between screens. Swipe left or right.
- Open an App. Touch its icon.
- Place an App icon on a Home screen. Touch & hold the App icon, slide your finger, and lift your finger to drop the icon in place.


- Browse widgets. Touch the Widgets tab at the top of any All Apps screen.

- Get more Apps. Touch the Play Store icon in the list of App icons.

To remove an App icon from the Home screen, touch & hold it, slide your finger toward the top of the screen, and drop the app over the Remove icon.

To view info about an App from an All App screen, touch & hold it, slide your finger toward the top of the screen, and drop the app over the App Info icon.

Most Apps include a Menu icon near the top or bottom of the screen that lets you control the app's settings.

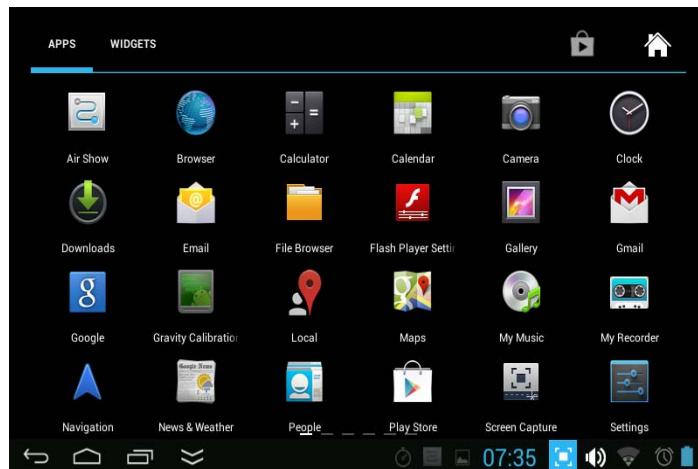


4.2 Camera



Touch this  in the application list to enter the camera, the views

showed on the screen and you can do the following as picture:

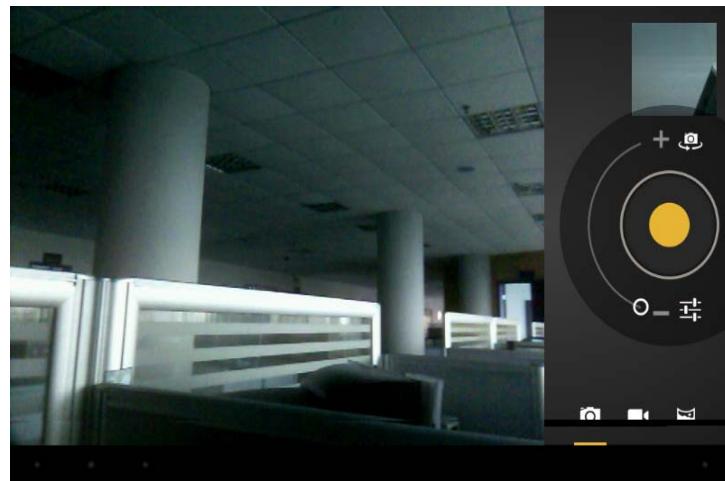

Camera



Click this  to get snap shot.




Click this  to set up  white balance,  scene mode,  save.

Video



Click this  to video and do the relevant operation.

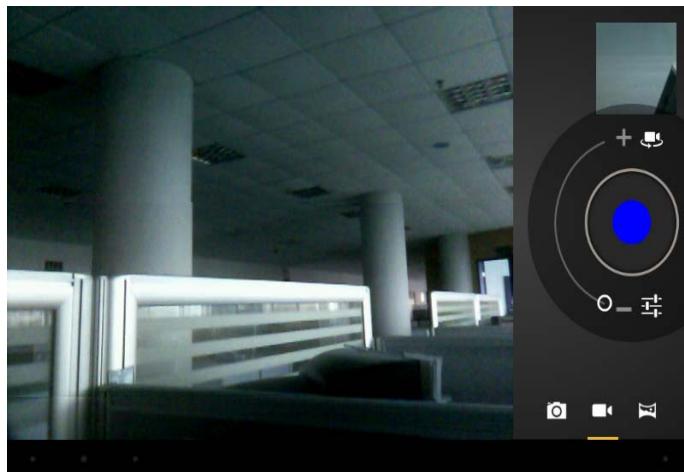

Click this  to set up  white balance,  time lapse interval,  save.

Single-motion Panorama

For capturing larger scenes, tap  icon and switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide a perspective as needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

☆ You can press Viewfinder long, or on the top right screen tap  ,



then tap , enter camera settings menu. In the dialog box, click select storage device, to choose the files which are stored in the Local, SD card or USB storage.

4.3 Gallery

Classification of photos and videos list

In the root directory, on the top left click the **Albums**、**Locations**、**Times**、**People**、**or Tags** classify the photos and videos. In the classification file folder, on the top left click **Filmstrip view** or **Grid view** to switch the view display mode.

View, play the photos and videos

Photo

In the classification folder, click on the photo thumbnails to open the photo,

 


and on the top right of the folder interface tap  →**Slideshow** to playing slide.

Video


In the classification folder, click on the view or preview to enter to the video preview interface, and click the play button in the video preview to play the video.

☆In preview picture interface, on the top right screen click



to operate the corresponding photos (including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, show details).

 
☆ In preview video interface, on the top right screen click



to operate the corresponding videos (including trim and details).

The operation with picture or video playback

 Playback of the video floating window



In video playback, on the top right click to switch to playback of the video floating window.

☆ Ordinary video playback and floating window playback all are supported by two points zoom to adjust the size of the video screen.

☆ Floating window video will continue to play after you switch to other interface(ex: browser the website、desktop、run the software etc.) .

☆ You can easily drag the floating window to adjust the position in the screen.

Delete the photos and videos in the list



On the top right of the screen, Tap icon → Tap **select album** or **Select item**. Select the album、image thumbnails or video preview which



you want to delete, tap → **OK**. If you want to delete a single picture

 


(or video), please enter the folder, select the picture (or video), tap or



delete it in the image thumbnails(or video preview) , tap → **OK**.

4.4 Music




Touch here to the music player. Music can be played by artists or album classification.

This page displays the songs alphabetically.

Click the songs you want to listen and get into selected state to play.

Click on the **now playing** will playing being played album page; there will be lyrics showed under the page right.

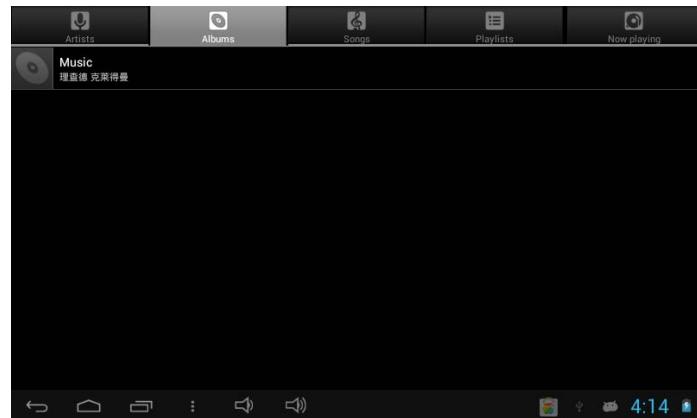

Play

Click one song to play.



List



Random play



Repeat



Lyrics

4.5 Calendar



Touch this  to calendar , for the first time into the calendar interface

will remind to add the Google account, which facilitates more calendar operation, if do not need to set, click on the **not now**, otherwise to set up Google account settings, set into the calendar interface, the default page shows the months.


Day view: Long press to the event to rebuilt, view, edit, and delete; click on the blank area can set up new events; long press the blank area you can built new events or display/not display the lunar day view.

Week view: Long presses the event to rebuilt, view, edit, and delete events; long press the blank area you can rebuilt events or display/not display the lunar weeks view.

Month view: Long press date to build new calendar items or display/not display the lunar month view.


Agenda: list all events click or read the details.

In any view, when you switch to other date, week or month, all can be back to today or week or month now by touching “today” button.

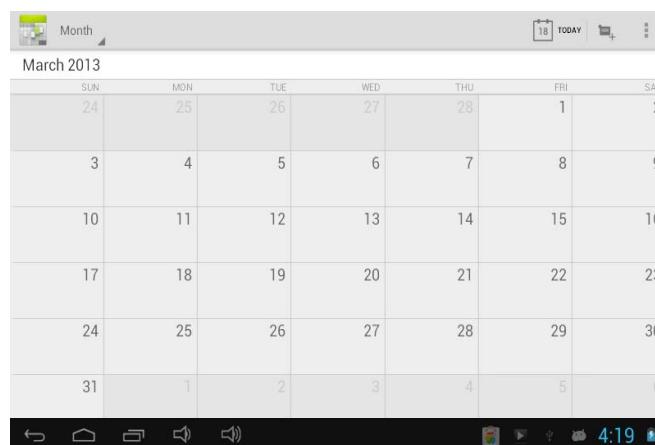

4.6 Calculator

Touch here in the application list to get into the calculator.

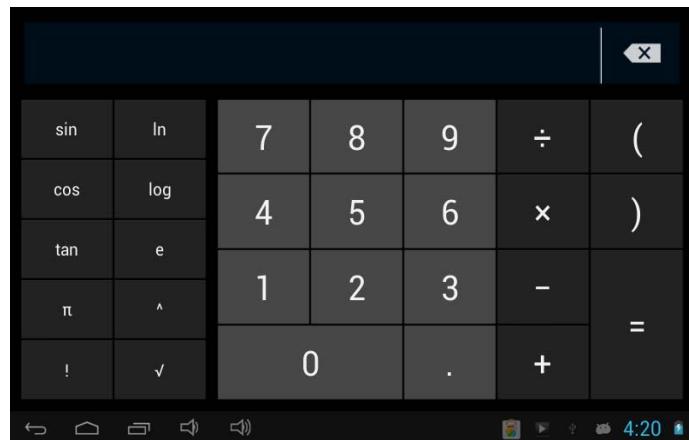

4.7 File Browser



Tap the **File Browser** application icon to view the files on all storage devices (Internal memory, SD card, USB device), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:



Internal Flash (ROM)



SD Card



 
USB Storage




Paste



Back to the previous folder



Switch folder display mode

 

Menu

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can firstly copy the desired files onto a SD card or USB device.

☆ The internal device storage is titled “Local”, a memory card “SD”, and a USB storage device is titled “USB”.

☆ The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.

SD

USB

1. Tap **Go To**, select **SD** or **USB** to display the contents of your storage device.

2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.

3. Tap **Go To**, select **Local** Internal Memory → tap

on the folder into which you want to copy the file →
tap 

Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Delete** → **OK** to confirm the deletion. → tap **Delete** → Tap **OK** to confirm the deletion.

4.8 My Music

☆ Audio file formats supported: MP3, WAV, WMA, APE, FLAC, OGG

Play Music

1. Tap the  **My Music** application icon.

2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.



3. Tap the **Pause** icon to pause your music.



4. When you are playing the music, you can tap



or return to the previous screen.



Click switch to the currently playing interface, It is showed as the following:



At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

Create Music Widget

Through the Music Widget can be quickly play the music.



On the desktop tap icon, in the pop-up list select **Widgets**

→ select **Music Widget**.

The Operation with Music and Playlist

Add playlist



 
1. Enter Play list interface → click



2. Input the playlist name.

3. Tap **Save**.

Rename or Delete playlist



Switch to **display mode**, Tap the playlist → tap → Enter a new name in the dialog box, and click **Save**. If you want to delete the playlist,



click → click **save**.

Add music

1. In the **all song, album, and artist** list, Tap the music and hold for switch to multi-select mode.
2. Select the music which you want to add to the

list (if you don't want to add, tap it again to cancel).

3. Tap **Add to playlist**, and then select a playlist.

Delete music

Tap and hold on the music you want to delete → tap **Delete**.

Sort by title or date added



In the all song interface, on the upper right click the **≡**, in the pop-up list select **sort by title**, and then click the alphabetical of the right hand, the interface will quickly jump to the songs match the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will be sorted by add date.

4.9 E-mail


Require the internal support before using e-mail, if there are problems in network supporting; please contact your network operator.

Add account

If you are the first time to use email, get into a mailbox interface directly or set up an account according to instruction.

If you want to add more mailboxes, click **Settings** on the top of the page to


add more mailboxes, and then select **Add account**.

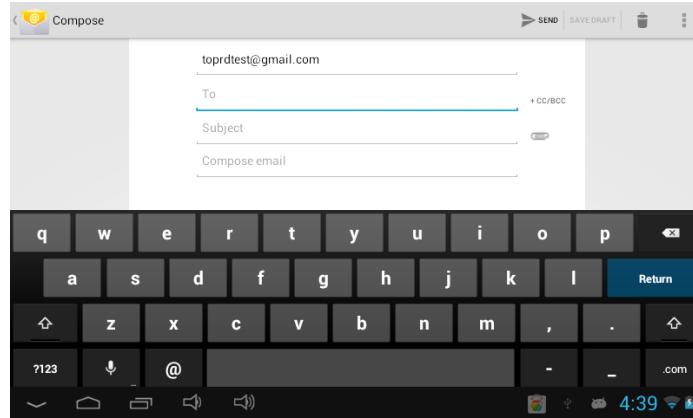

Draft e-mail

In **inbox** page, you can click  this on the top of right page to draft mail quickly.

In the draft mail page, you can add mail recipients quickly.

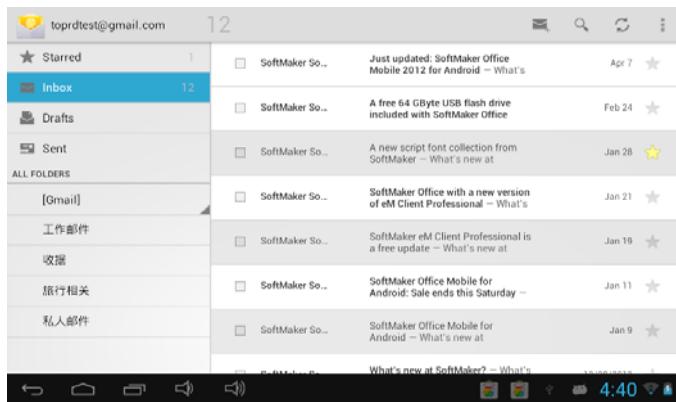

Add attachment

Add attachments from the documents, when it succeeds, the name will show

 
one “New e-mail” page; you can click to select to open or remove them

Reply, forward mail

Click the right page preview area of the toolbar **reply** , **reply all** ,

forwarding  choices. The base operation is same with the draft e-mail.

4.10 Screen Capture

You can capture a screen image by tapping  at any time.

Tap the  **Screen Capture** application icon to set options for a screen capture.

- Select a delay time to capture the screen (seconds) .
- Select the default storage device.
- Show screen capture icon in status bar.
- View software version information.

After the images are saved, they can be view through  **Gallery** application.

4.11 Clock



Click here in the application list to access clock interface.



Tap the **Clock** application icon. You can see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.


Add Alarm



1. Tap the **Clock** application icon.
2. Tap **Set alarm** → **Add alarm**.
3. Set up your alarm as desired.
4. Tap **OK**.
5. Turn on the right switch of the alarm clock which need to be enabled.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

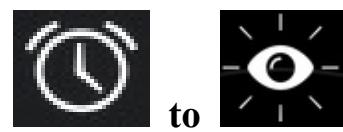

Drop to if you want to be reminded again in 10 minutes.



Turn Alarm on

1. In the Alarm list, find the desire alarm.
2. The switch button to open the alarm clock on the right side, the switch button from



Edit Alarm

1. Enter the alarm list; click the alarm time to edit.
2. After editing, tap **OK**.

Delete Alarm

1. Enter the alarm list, drag left or right to delete the alarm you want to delete.

Section Five: Hardware configuration

- Processor: WM8880
- Display: 7" TFT LCD
- Resolution: 1024x600
- Touch Panel: Capacitive Type
- Internal RAM: DDR3 1 GB

- Webcam: Front 0.3MP, Back 2.0MP
- Wireless: 802.11b/g/n
- Operating System: Android 4.2
- Internal Memory: 8 GB Nand Flash
- External Memory: TF Card 1G~32G
- Support: HDMI
- Support Image format: JPEG, BMP, GIF, PNG, TIFF
- Support Audio format: MP3, WMA, APE, FLAC, OGG, WAV
- Support Video format: MKV, AVI, RM, RMVB, MP4, MOV, TS, M2TS, MPEG, DAT, 3GP, FLV
- Battery: 3.7V 2300mAh Embedded Lithium Battery
- Power: DC 5.0V 2A Adapter
- Accessories: Adapter, Instruction Manual

Section Six: Attention

Information provided in this manual may varies from model to model, so your model may not have some of the features described in this book. Pictures of features may also be different from actual one. This book reserves the right to change any information without any notice. For avoiding the accidents, please make sure to read this manual carefully before using.

Follow all precautions and instructions. Except as described in this manual, refer all servicing to qualified personnel. Do not use damaged power cords, accessories, or other peripherals. Do not use strong solvents such as thinners, benzene, or other chemicals on or near the surface.

Important Safety Precautions

1. Please do not put your device in high temperature, moisture or dust place; the tablet is not waterproof.
2. Avoid falling or violent collision, do not violently shake the touch screen, otherwise, it could lead to damage or display unmoral.
3. If system shutdown automatically, bootable again soon after the shutdown.
4. Please charge the tablet regularly if not use it for long time to avoid the damage caused by the excessive consumption from battery.
5. Do not disassemble or use alcohol, thinner or benzene class to swab product surface.
6. Please do not use the tablet when driving or walking in the street, otherwise it may lead to an accident.
7. Please choose the appropriate volume, if had tinnitus, please lower the volume or stop using.
8. Memory space available dishonest nominal for the android system itself

takes up part of the memory space and the operation of the program will also take up space if you open them.

9. Storage capacity that dishonest nominal for android system occupies about hundreds of MB storage capacity, also in order to install the software needs, the system must lay off certain storage capacity, so the actual usable space and nominal space have deviation.

10. When CPU in high-speed operation, especially in games or in long time playback high-definition video, the fuselage will have the phenomenon of fever.

When the machine is charging, it will be a little hot (but not too hot), this is normal, and won't effect your using.

11. Do not remove the connector while formatting, downloading and uploading. Otherwise it will make the device get error.

12. Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene.

13. For those losses of removing memory caused by device damage, incorrect repair or some other reasons, our company will not take the responsibility. Please follow this manual to operate this device.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.