

Important Information Required By the FCC

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the use's authority to operate the equipment

Instruction manual

1. Put 3PCS AAA batteries inside the battery holder correctly
2. Slide the Power switch to the “ON” position ;
3. Set the FM frequency (4 position: 88.1MHz/88.3/88.5/88.7MHz) by the frequency setting slide switch ;
4. Insert the Audio jack into your audio device ;
5. Turn on your radio (or other FM receiver) , and set to the same frequency ;
6. Then the music is coming and start to enjoy;
7. Please slide the power switch to “OFF” position after using ;

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and**
- (2) This device must accept any interference received, including interference that may cause undesired operation**