

maxell

SYNC UP

True Wireless

Bass¹³
TO THE MAX



B13-TWS

FCC ID: WKA-TW173B

USER'S MANUAL

EN

MANUAL DE USUARIO

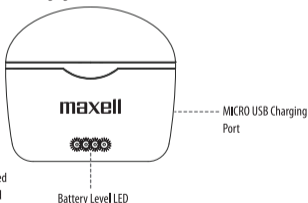
FR

MANUAL DE USUARIO

ES

Specification:

Chipset Solution: AB5376A2
Driver Size : 10mm
Impedance : 16 Ohms
Battery Capacity : Earbud: 30mAh Charging Box: 300mAh
Play Time : 3 hours + 9 hours in total with charging case
Power Input : 3mW
Speaker Output : 3mW
Charging Time Earbuds : 1.5 Hrs for full charge - Charging Time Case : 1.5 Hrs for full charge
Working Voltage and Ampere : 5V -, 24/240mA

The function instructions for the charging case:

4 LEDs = 75% to 100% charged

3 LEDs = 50% to 75% charged

2 LEDs = 25% to 50% charged

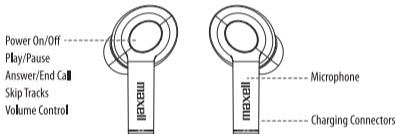
1 LED = 25% charged

0 LEDs = 0% charged

Charging the Case:

To charge the case **plug** in the micro USB **cable** and connect to a computer or **wall** charger. When **fully** charged, the battery **life** indicator **will** show four **blue** dots.

*Using for the first time: **It** is recommended to **fully** charge the earbuds in the charging case, for up to 2 **full** hours.

The function instructions for the earbuds:**Charging the Earbuds:**

Place the earbuds in the charger. The earbud LEDs **will** be a **solid** red when charging. The LEDs **will** turn off when they are **fully** charged.

*When both earbuds are **fully** charged, the charging case **will** turn off the charging function **automatical**ly and turn to standby.

Power ON:

The earbuds **will** **automatical**ly turn on, once removed from the case.

Power OFF:

Earbuds **will** **automatical**ly turn off, once you put them back into the case.

Pairing a new device:

Remove the earbuds from the case, then place earbuds back into the case. Remove again and this will automatically turn the earbuds on. The flashing red and blue LEDs indicate that you are now in pairing mode. Now go to your device's Bluetooth list and select "Sync Up" to get connected. No need to pair again, your Bluetooth device will auto connect to the earbuds for all future use.

Earbud Controls:

Pause/Play Music: Press the power button on either bud once

Volume +: Press the power button for two seconds on the Left Bud

Volume -: Press the power button for two seconds on the Right Bud

Next Track: Double press the power button on the Right Bud

Previous Track: Double press the power button on the Left Bud

Take and End call: Press the power button on either bud once

Reject a Call: Press the power button on either bud twice and hold. Once rejected your music will automatically resume.

Solo:

You can use either bud separate in solo mode, just in case you want to hear and be aware of your surroundings. Just place either earbud back into the case and that earbud will turn off. The other earbud will remain on and playing.

WARRANTY INFORMATION:

Maxell warrants this product to be free from all defects for a period of 90 days from the date of original purchase. This Warranty does not apply to normal wear or damage due to accident, abnormal use, misuse or neglect. This Warranty only applies to personal and individual use of the product and not for commercial, institutional or any other use. Any defective item will be replaced, at no charge, upon reasonable confirmation by Maxell of its defective condition, if returned with proof of purchase to an authorized Maxell dealer or directly to Maxell Warranty Replacement, 3 Garret Mountain Plaza, Suite 300, Woodland Park, New Jersey 07424. Neither Maxell nor any authorized Maxell dealer shall be liable for consequential damages arising from this Warranty, unless otherwise provided by law.

Maxell garantit que ce produit exempt de tout défaut pendant une période de 90 jours à compter de la date d'achat d'origine. Cette garantie ne s'applique pas à l'usure normale ni aux dommages dus à un accident, à une utilisation anormale, à une mauvaise utilisation ou à une négligence. Cette garantie s'applique uniquement à une utilisation personnelle et individuelle du produit et non à une utilisation commerciale, institutionnelle ou autre. Tout article défectueux sera remplacé, sans frais, sur confirmation raisonnable par Maxell de son état défectueux, s'il est renvoyé avec la preuve d'achat à un revendeur Maxell agréé ou directement à Maxell New Jersey 07424. Ni Maxell ni aucun revendeur Maxell agréé ne pourront être tenus pour responsables des dommages résultant de cette garantie, sauf disposition contraire de la loi.

Maxell garantiza que este producto está libre de defectos por un período de 90 días a partir de la fecha de compra original. Esta garantía no se aplica al desgaste o daño normal debido a un accidente, uso anormal, mal uso o negligencia. Esta garantía solo se aplica al uso personal e individual del producto y no al uso comercial, institucional o de otro tipo. Cualquier artículo defectuoso será reemplazado, sin cargo, luego de que Maxell confirme razonablemente su condición defectuosa, si se devuelve con el comprobante de compra a un distribuidor autorizado de Maxell o directamente a un reemplazo de la garantía de Maxell, 3 Garret Mountain Plaza, Suite 300, Woodland Park, New Jersey 07424. Ni Maxell ni ningún distribuidor autorizado de Maxell serán responsables de los daños consecuentes derivados de esta Garantía, a menos que la ley disponga lo contrario.

FCC INFORMATION:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.