



Requires  
6 AA batteries.  
(Not included).

**AGES 6 AND UP**

2132  
27MHz

# RC Skunk™

## Remote Control Skunk with Flip-Up Tail

### This package contains:

- 1 Motorized plush skunk
- 1 Remote control

### Installing batteries into skunk

Tool required: small Phillips-head screwdriver (not included) 

1. Using a Phillips head screwdriver, remove battery cover from bottom of RC Skunk (see Figure 1).
2. Insert four AA batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in battery compartment. Replace cover.

### Installing batteries into remote control

1. Using a small Phillips-head screwdriver (not included), remove battery cover from the back of the remote control (see Figure 2).
2. Insert two AA batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in battery compartment. Replace cover.

### Using your Remote-Controlled Skunk

1. Turn the power switches to the "ON" position on both the remote control and skunk (see Figure 1 and Figure 2).
2. To move RC Skunk forward, push FORWARD BUTTON on remote control (see Figure 3).
3. To turn RC Skunk, push ROTATE BUTTON on remote control (see Figure 3).
4. To raise tail and shake it, push and hold TAIL CONTROLLER button on remote control (see Figure 3).

**Note:** For best performance, use RC Skunk on a smooth, flat surface like a hardwood floor.

### BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Figure 1

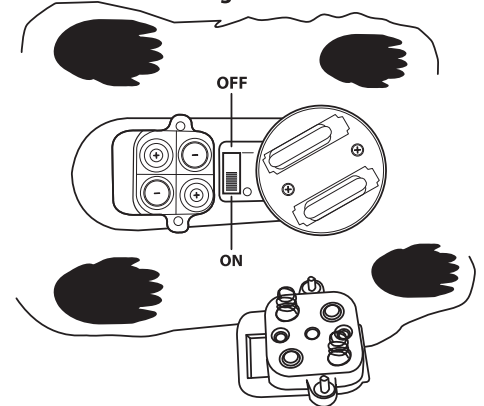 


Figure 2

 
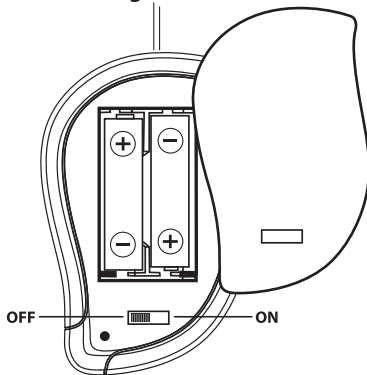 


Figure 3

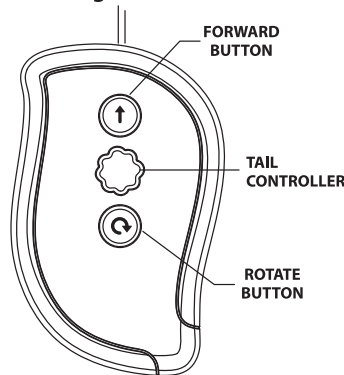

FCC ID:WL22132UMI2008

27Mhz

### MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**⚠ WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE - DO NOT DISCARD**

Questions? Comments? Please contact us. We can help!  
1-888-742-2484 or go to [www.unclemilton.com](http://www.unclemilton.com)



Uncle Milton Industries, Inc.  
31186 La Baya Dr., Westlake Village, CA 91362  
Tel: 1-888-742-2484 Fax: 818-707-0878 [www.unclemilton.com](http://www.unclemilton.com)  
© UMI. All rights reserved. RC Skunk™ is a registered trademark of UMI. Printed in China.

2132-0250-0708