

MANUAL

Connecting the wireless guitar

1. Insert four AA batteries into the back of the guitar.
2. The red light on the receiver indicates that the power is on. The green flashing light indicates that it does not have a connection with the guitar.
3. Locate the ON/OFF switch on the bottom edges of the guitar and turn the switch to the ON position. This should cause the green connection light to stop flashing indicating that a connection has been made.

WARNINGS

- IF YOU HAVE ANY PHYSICAL CONDITIONS CONSULT WITH YOUR PHYSICIAN BEFORE USING THE GUITAR CONTROLLER
- Read, understand and follow all instructions listed in this manual. Failure to follow instructions could result in personal injury.
- The Guitar controller must be used with care to avoid injury.
- Do not use additional attachments other than those recommended or provided by the manufacturer unless otherwise is specified.
- Do not immerse in water or expose the Guitar controller to heavy moisture
- Do not operate the Guitar controller in or near water or with wet hands
- Do not use the Guitar controller in any way other than its intended use.
- Do not use the Guitar controller if damaged in any way.
- Do not disassemble any part of the Guitar controller.
- Keep away from areas where dirt or liquid can get into the Guitar controller
- Keep away from direct sunlight and extreme temperatures
- Store in areas away from dust and humidity
- Excessive or improper use of the strum bar can cause it to break
- Use a dry cloth to clean the Guitar controller, never use chemicals.
- This is not a toy. Do not allow small children to play with the Guitar controller unsupervised.

Battery safety

Incorrect use of batteries may result in battery leakage, overheating or explosion.

When using batteries, be sure to follow these instructions:

- Make sure the positive(+) and negative(-) ends of the batteries are inserted in the correct directions.
- Keep batteries out of reach of children
- Do not mix old and new or different types of batteries. Use only AA type batteries.
- remove the batteries when the product will not be used for an extended

period of time.

- . If the battery has leaked, be sure to carefully remove all fluid and dry residues with a paper towel before inserting new batteries, Take care to keep all leaked fluid from touching your skin or clothes, If fluid comes into contact with the skin, flush with water immediately.
- . Dispose of batteries in accordance with local and national disposal regulations.

To insert the Batteries into the Guitar controller:

1. Remove screw from the locking tab on the battery compartment cover.
2. Remove the battery compartment cover by pressing in the locking tab and lifting the cover up and off the unit.
3. Insert 4*AA battery cells. Make sure that the batteries are inserted as indicated by the schematic inside the battery compartment to avoid potential damage.
4. Replace the battery compartment cover back into place on the Guitar controller and replace the screw back into the locking tab.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER' S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation