


# NEO M1

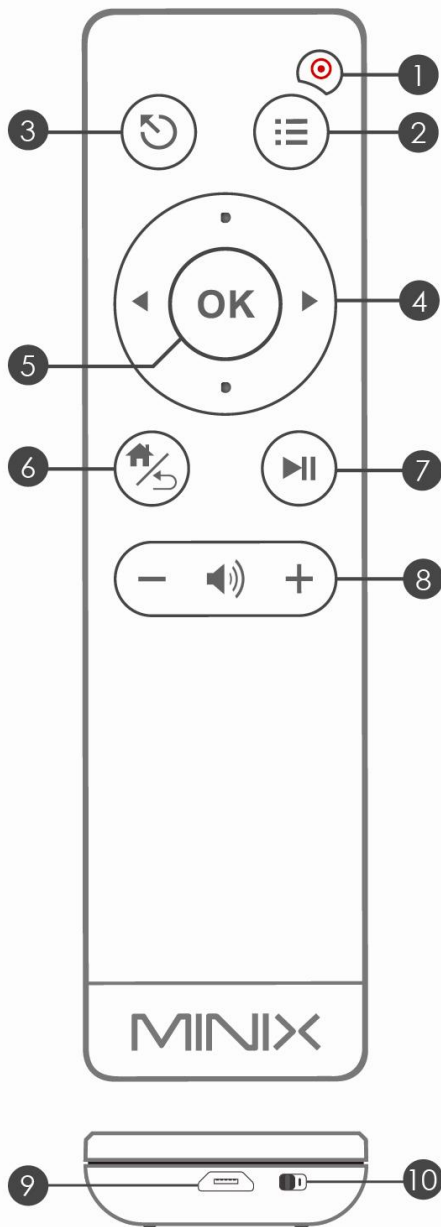

- 1 Short Press - Sleep  
Long Press - Shut Down Menu  
\* Only compatible with MINIX NEO Series devices
- 2 Short Press - Menu  
Long Press - Show/Hide Status Bar
- 3 Fly Mode On/Off  
\*Using the D-Pad will de-activate Fly Mode
- 4 Directional Pad
- 5 Using Fly Mode - Left-click  
Using Remote Mode - Enter
- 6 Short Press - Return  
Long Press - Homescreen
- 7 Play/Pause
- 8 Volume Up/Down
- 9 Micro-USB Port (for charging purposes)
- 10 Power Switch (turn off when not in use)

## Troubleshooting Hints

1. In the rare occurrence the NEO M1 becomes unresponsive turn off and on again

2. Pairing the NEO M1 and USB receiver:

- 1 Turn on the NEO M1
- 2 Press and hold the Fly Mode and Volume Up keys until LED glows
- 3 Lay the NEO M1 on a flat surface and Plug in the USB receiver
- 4 LED light will go off once pairing is completed

3. Recalibrating the NEO M1:

- 1 Press and hold the Left and Right directional keys on the D-Pad until LED glows
- 2 Lay the NEO M1 on a flat-surface
- 3 LED will flash and go off once recalibration is completed

## FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.