

Remote Control GiftCard Instruction Sheet

- Not suitable for children under 3.
- Read through this manual before use.
- Use under adult supervision.

FCC

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Features

1) Mouse Cart

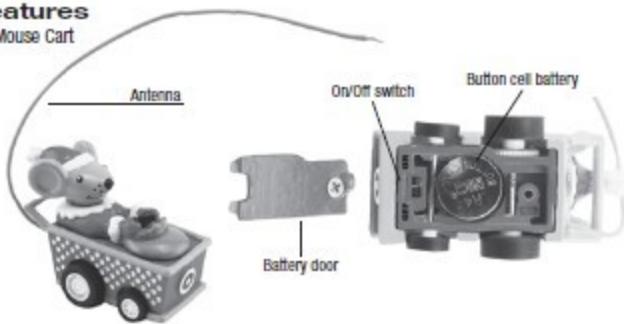

2) Cheese Controller

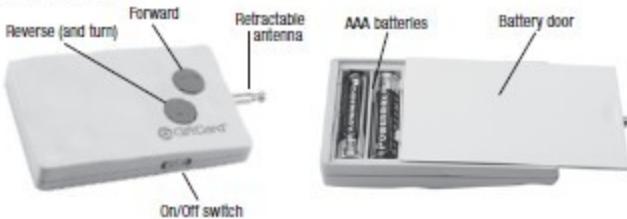

How to Use Your Remote Control Car

Move power switch to "ON" position on Mouse Cart and Cheese Controller. Place Mouse Cart on flat, smooth surface.

Pull antenna to extend range on the Cheese Controller.

Push "Forward" button on controller to move the car forward. Push "Reverse" button to move the car backward. Car also turns while moving backward.

Radio control broadcast range: 3-6 ft.

Be sure to turn both units "OFF" when not in use.

Battery Replacement (Adult supervision required)

Controller is powered by two AAA alkaline batteries accessible via sliding panel.

Replace batteries following orientation engraved on inside of battery compartment.

Car is powered by one G13 (LR44 - 1.5V) battery accessible via battery door on the car chassis.

Battery door is secured via one standard Phillips head screw. Battery orientation is engraved inside the battery compartment.

To extend battery life, remove batteries when units will not be used for a long period of time.

Do not mix old and new or different types of batteries. Use alkaline batteries only.

Dispose of batteries safely.

MANUFACTURER'S INFORMATION

Manufactured for Target Corporation by Americhip, Inc. Controller and car produced in Guangdong, China. For compliance information, please visit www.americhip.com/compliance.

Product name: Remote Control GiftCard Model no. 8067741.

TARGET790011542F1227882-07/09