

Operation description

First of all, put 2 AAA 1.5v battery in the 2.4G laser mouse, and power on pc .waitting for the 2.4G laser mouse connect to PC,then you can move and press mouse .