

Operation description

First of all, put 2 AAA 1.5v battery in the bluetooth mouse, and power on pc ,running bluetooth .waitting for the bluetooth mouse connect to PC,then you can move and press mouse .