

Installing the Batteries


The RF2.4GHz Laser mouse use two AAA alkaline batteries.

Installing Batteries In the Mouse

Step 1. Open the battery compartment

Step 2. Insert the batteries as shown inside the battery compartment.


Step 3. Replace the cover.

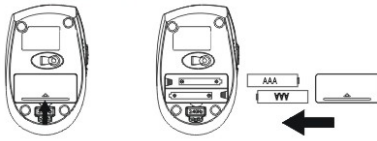

Connecting the Receiver




USB Port

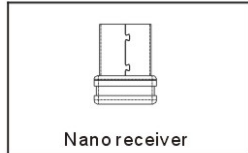

Nano receiver

1. Connect the USB plug ONLY to USB port of the computer.

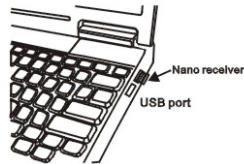

1

Power-Save function:

* This mouse is equipped with Traveling-Power-Save function. When you are traveling with this mouse, the LED of the mouse will be switched off automatically for the purpose of power-save, but the pre-condition is that the receiver is disconnected with your notebook or PC.

* When your mouse no any click or scroll or moving, the mouse will come to sleep state for the economize after about 8 seconds, for the wake up, you can scroll the wheel or click any button for this

Restoring factory default settings

When you find this set doesn't work, you can make the mouse in working condition by restoring the mouse back to factory default settings.

- 1: check the battery volume is normal; if the battery is used out, please replace new batteries.
- 2: press the right button and middle button (under the scroll wheel) simultaneously; then
- 3: insert the nano receiver onto the USB port of PC or notebook.

3

CAUTION:

Windows 98 or higher is required for USB port installation. Connect the receiver USB to the USB port on the computer. For windows, you maybe prompted to insert the windows software CD. Insert this software CD into the computer's CD-ROM driver when asked to do so, the follow the on-screen instructions.

Obtain the receiver on the mouse

1: when you want use the mouse, you can take out the receiver to computer by the list ① step;

2: when you need stop the work or to travel, you can store the receiver on the mouse for the moving by the list ② step.



① Take out the receiver



② Store the receiver

Software Installation

The driver is supports Win2000, win ME and WinXP.

The driver will install automatically if the auto-run is enable in your computer, otherwise, you can manually launch the installation by double clicking the file setup.exe in the CD-ROM.

The setup applet's icon of the keyboard and the mouse will appear on the windows taskbar after successfully completing software installation.



Mouse setup applet

You can double click or right click the applet, and setup the functions of your preferred selection for both keyboard and mouse to enhance your device

2

Model: SM506AGL

Instruction Manual

RF2.4GHz Laser Mouse



CAUTION: To use this device properly, please read the user's guide before installation.

VER:00

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.