
## Label & Location documentation

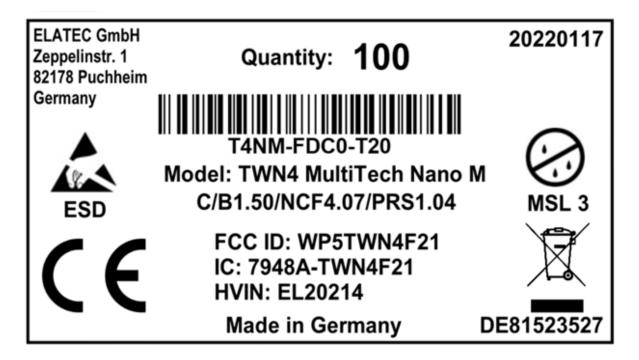

EUT label will be placed on packaging because there is no free space at this small PCB.

