


Digta7 Typ701 printed circuit board "complete":


top-side complete:

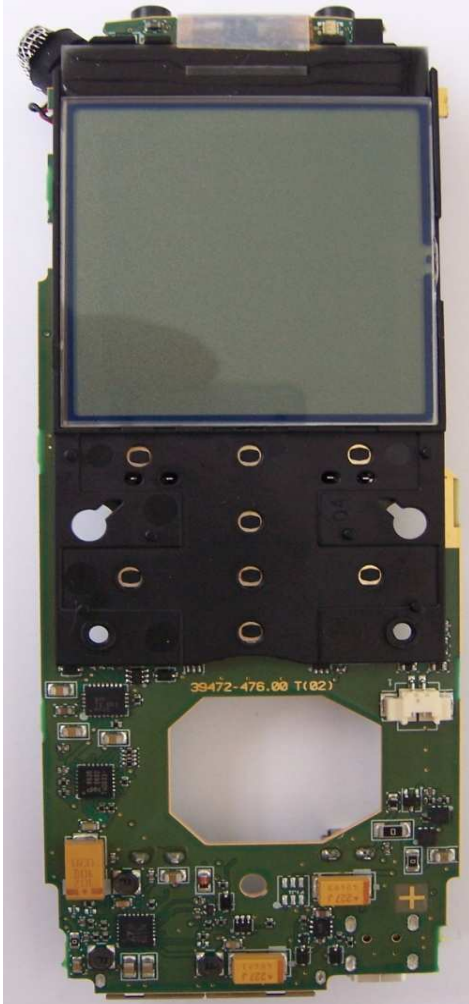

bot-side complete:



right-side complete:

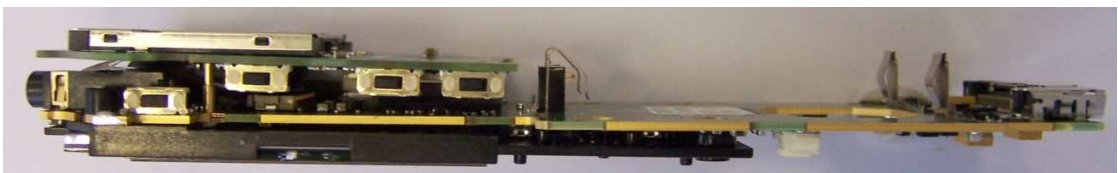

left-side complete:



Digta7 Typ701 printed circuit board "controller 39472-476-00(02)":

top-side:



bot-side:



right-side:




left-side:



Digta7 Typ701 printed circuit board "39472-477.00(02)":

top-side:

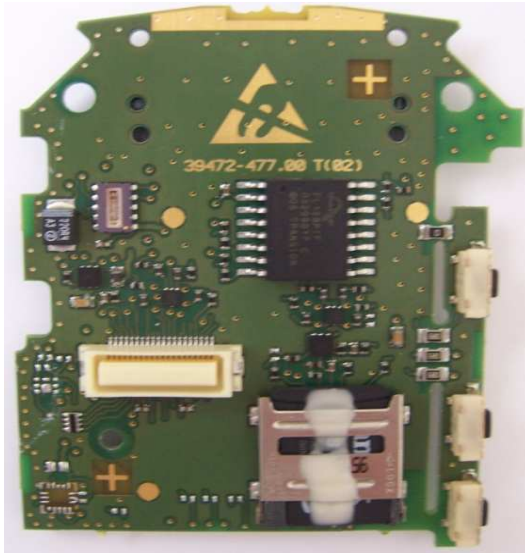

bot-side:



right-side:




left-side:



Digta7 Typ702 printed circuit board "complete":

top-side complete:

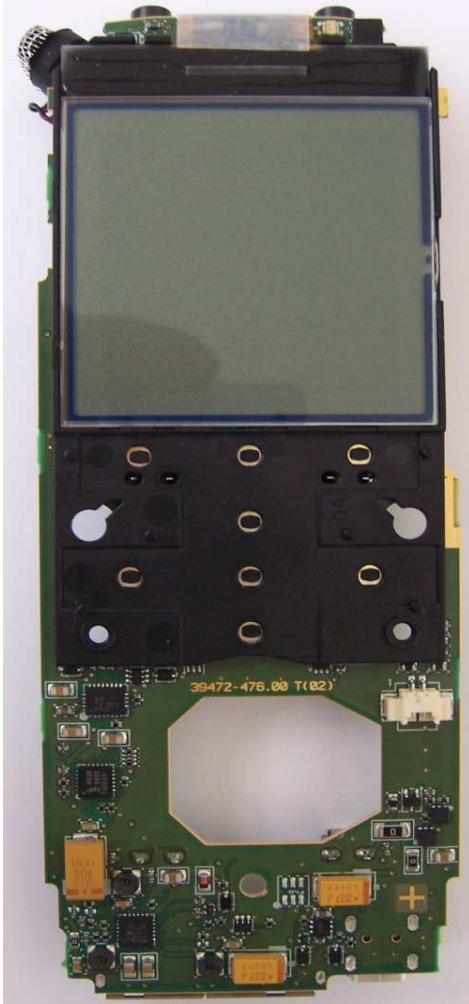


bot-side complete:



right-side complete:



left-side complete:

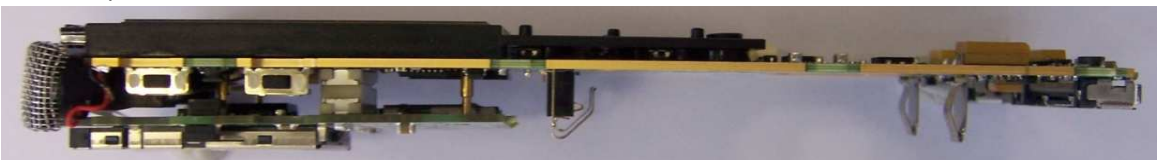

Digta7 Typ702 printed circuit board "controller 39472-476-00(02)":

top-side:



bot-side:



right-side:




left-side:



Digta7 Typ702 printed circuit board "39472-477.00(02)":

top-side:

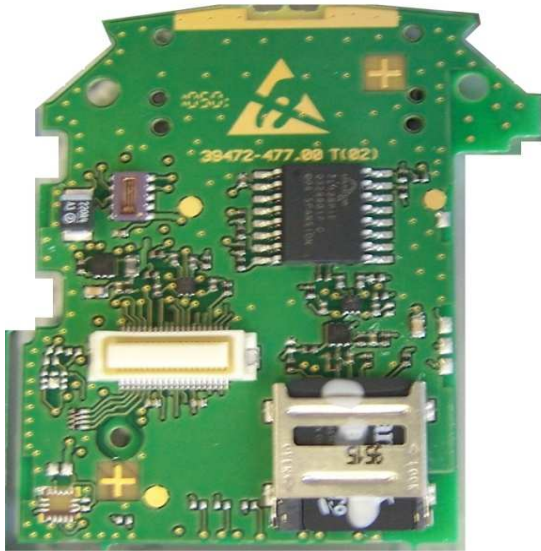

bot-side:



right-side:



left-side:



Digta7 Typ703 printed circuit board "complete":

top-side complete:



bot-side complete:



right-side complete:



left-side complete:



Digta7 Typ703 printed circuit board "controller 39472-476-00(02)":


top-side:



bot-side:



right-side:

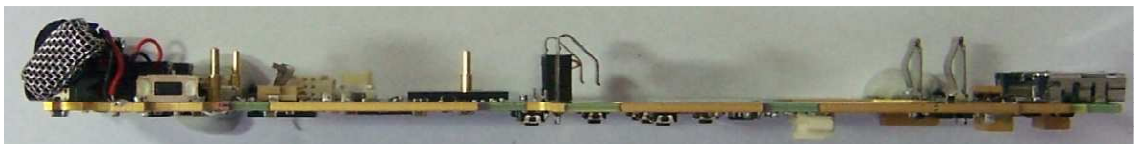

left-side:



Digta7 Typ703 printed circuit board "39472-477.00(02)":

top-side:



bot-side:



right-side:



left-side:



Digta7 Typ704 printed circuit board "complete":


top-side complete:



bot-side complete:



right-side complete:

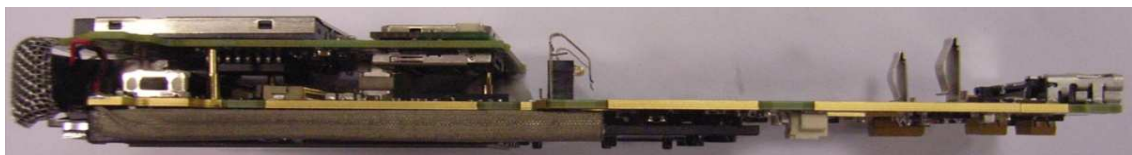


left-side complete:



Digta7 Typ704 printed circuit board "controller 39472-476-00(02)":

top-side:

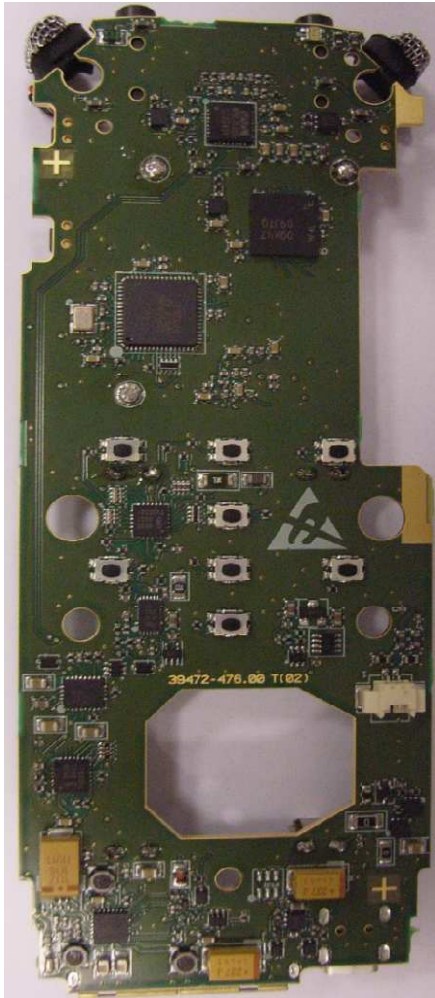


bot-side:



right-side:



left-side:

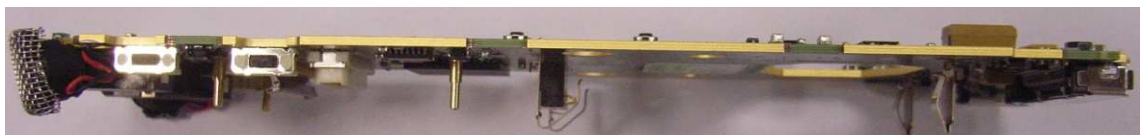

08.02.2011

Digta7 Typ704 printed circuit board "39472-477.00(02)":

top-side:



bot-side:



right-side:



left-side:

