# 서울통신기술

#### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

**FCC Caution:** To assure continued compliance, (example - use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation



ser Guide






This manual is provided to promote the user's safety and prevent financial and other damage. Please read carefully and follow the instructions before using.

SHT-5180XL/EN SHT-5180XL/US

# **Safety Precautions**

\* To use the product safely and properly, please read the following carefully.

## **Components & Functions**

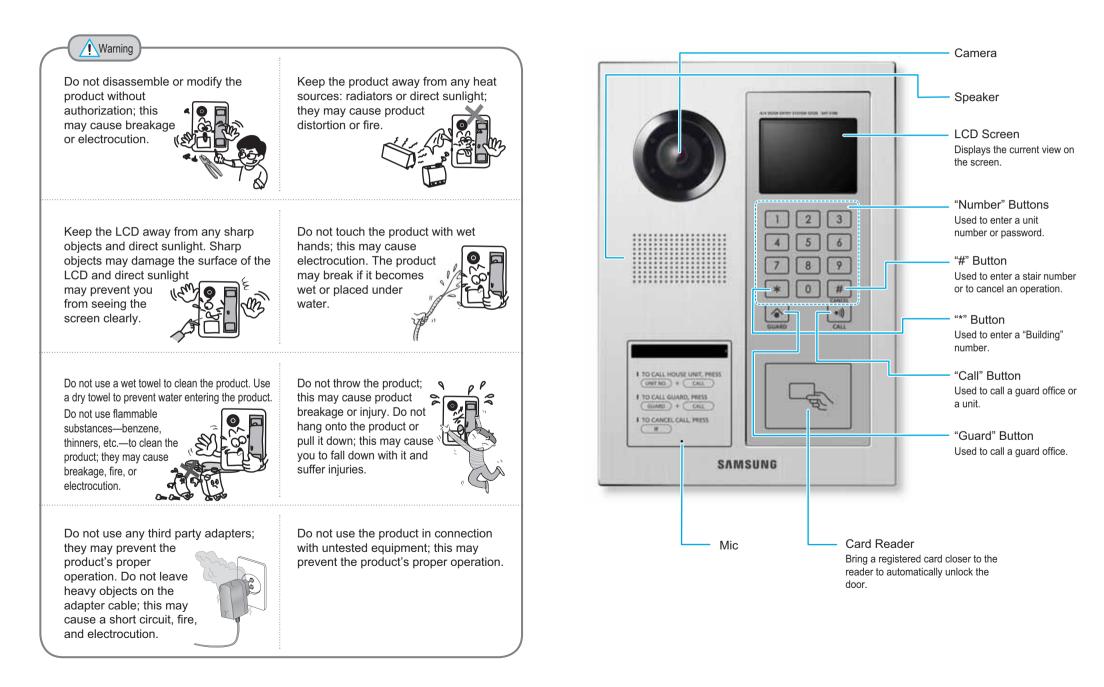


# **Operation Guidelines**




#### How to Open a Building Lobby Door

- Opening the door while speaking to a unit Press the "Open Door" button at the unit end to open the automatic lobby door for 7 seconds.
- Opening the door while speaking to a guard office Press the "Open Door" button at the guard office end to open the automatic lobby door for 7 seconds.
  
#### Opening the door with personal password








Press the "#" Enter 4-digit "ID." button.

- Enter 4-digit "password".
- If the password is confirmed, the automatic lobby door opens for 7 seconds.

\* ID and password must be registered prior to use.

#### Opening the door with a card

 

Bring a registered card close to the reader to open the automatic lobby door for 7 seconds.

\* Card must be registered prior to use.



displayed on a Building's lobby LCD screen.

If a fire alarm signal is received from a unit or the fire alarm system, the fire alarm message is

A voice message alerting, "Building Unit Fire," will repeat continuously.

The automatic

open.

lobby door will be

• If a fire alarm signal has started from a unit, pressing "#" at the unit or control server ends cancels the alarm.

### MEMO



#### MEMO

