

# Doro 8028/8030/8031

English

 


1



EN: Remove battery cover

2



EN: Insert SIM card (not included)

EN: For the full manual please visit [www.doro.se/support/search/](http://www.doro.se/support/search/) or contact our Helpline.

3




EN: Insert the battery and replace the battery cover

4



EN: Charge the phone

5

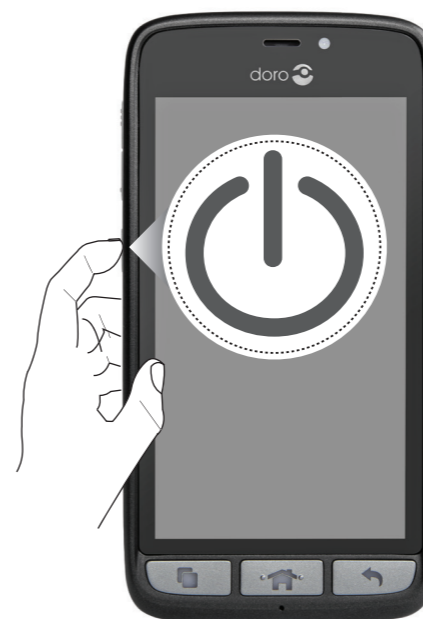

EN: Turn on the phone and enter your SIM card PIN, if requested

6



EN: Follow the instructions in the setup assistant to activate your device and set it up.

QSG\_Doro\_8028-8030-8031\_A6(A3)\_v30\_en(+FCC)\_20160810  
Model: DSB-0010  
Doro 8028 (2041)  
Doro 8030 (2041)  
Doro 8031 (2041)  
English (EN)

Version 3.0

CE 0984

