

SKY WING BOOMBAR+


SKY WING COMMUNICATION ELECTRONICS CO.,LTD

Box contents

- KS Boombard+
- Battery
- Micro USB charge cable
- 3.5 mm aux cable
- Carry pouch
- User manual

Functions

1. Multi Function Button (MFB)
2. LED indicator
3. Aux input
4. Micro USB charge port
5. Microphone

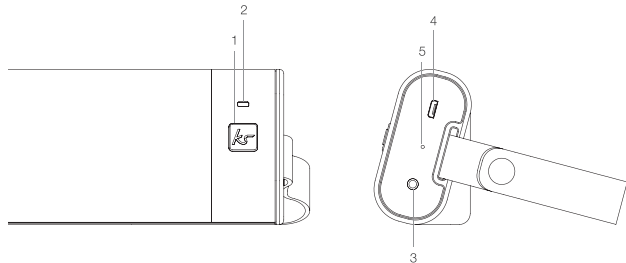

Instructions for use

Charging the battery

The Boombars+ has a built-in rechargeable lithium battery.

Connect one end of the Micro USB charge cable to the Micro USB charge port (4) on the Boombars+ and connect the other end to your PC or USB mains adaptor.

The battery will start charging.

- It takes up to 3 hours to fully charge the battery
- Whilst charging, the LED indicator (2) will light up red
- When fully charged, the LED indicator (2) will turn off

Battery protection mode

To keep the rechargeable battery in good condition, please discharge and recharge speaker every 3 months, especially if you are not using the speaker for long periods of time.

Getting started

- To turn the Boombars+ on, press and hold the MFB (1) for 3 seconds
- To turn the Boombars+ off, press and hold the MFB (1) for 3 seconds whilst it is on

Bluetooth setup

Pairing a Bluetooth device for the first time

1. With the Boombars+ turned off, press and hold the MFB (1) for 3 seconds
2. The LED indicator (2) will quickly flash blue to indicate power on. Shortly after powering on the LED indicator (2) will flash red/blue, indicating pairing mode has been entered
3. Activate the Bluetooth function on your device and search for Bluetooth devices (check your device's manual if you're unsure how to do this)
4. Select 'Boombars+' from the list of found devices. If asked for a passcode, enter '0000' and the Boombars+ will then be connected to your device
5. After pairing successfully, the LED indicator (2) will change to a slow flashing blue

Note: If your device is not connecting automatically, it's because it is not the last paired device. Simply delete 'Boombars+' from the list of Bluetooth devices on your device and re-pair.

Re-pairing or pairing new devices

1. The next time the Boombars+ is turned on, it will automatically search for and attempt to connect to the last paired device
2. Make sure the Bluetooth is turned off on any previously paired devices
3. Follow 'Pairing a Bluetooth device' instructions from step 1

Playing audio wirelessly

1. Follow the instructions in the 'Pairing a Bluetooth device' section
2. Use the controls on your device to select content
3. Audio played through the connected Bluetooth device will now be heard through the speaker
4. To play or pause the selected track, use the controls on your device or press the MFB (1)
5. To skip to the next track, use the controls on your device or press the MFB (1) twice. Previous track can only be controlled using your device
6. The volume can be adjusted on your device only

Note: Track control functions from the MFB (1) on the Boombars+ will require your device to have Bluetooth profile AVRCP. Please check your device's manual if unsure.

Using the aux-in

1. With the Boombars+ turned on, insert the 3.5 mm aux cable into the Aux input (3) on the Boombars+
2. The LED indicator (2) will turn solid green and any active Bluetooth connection will disconnect
3. Plug the other end of the aux cable into the audio/headphone output on an MP3 player or other audio source
4. Audio played through the connected device will now be heard through the speaker
5. The volume can be adjusted on your device only

Note: The MFB (1) does not operate in Aux input mode.

PLEASE NOTE: Your device will have an internal amplifier and if it is playing digital files like MP3s it will also have an integrated DAC (Digital Audio Converter). If you turn up the volume to 100%, your device will be sending distorted signals to the Boombar+. To avoid this and to get the best sound quality from the speaker, we recommend that you do not run your device any higher than 95% volume.

Call-handling

Answer a call When a call comes through, the Boombar+ will play your ringtone.
Press the MFB (1) to answer

End call During a call, press the MFB (1) to end the call

If using an Android phone, you can disable the hands free function. To do this:

1. Go to the Bluetooth menu and press the settings icon next to 'Boombar+'
2. Uncheck the 'Call Audio' box

Calls are now controlled and played through the phone as normal.

Care for your Boombar+

Please DON'T:

- Get the Boombar+ wet
- Drop the Boombar+ as this will invalidate your warranty
- Open up the Boombar+ as there are no user serviceable parts inside
- Expose the Boombar+ to extreme temperatures or rapid changes of hot to cold or vice versa

Please DO:

- Clean the Boombar+ with a soft dry cloth and no detergents

Specifications

S/N	85 dB
Bluetooth	V4.1
Bluetooth range	up to 10 m
Frequency response	150 Hz – 20 kHz
Driver	2 x 40 mm
Output RMS	5 W
Aux-in	3.5 mm
Play time	up to 20 hours
Charging time	up to 3 hours
Battery	Li-ion, 1120 mAh

Troubleshooting

We hope you've now got all the information you need to get started, but if you're having problems with anything, please feel free to contact us at: support@kitsound.co.uk

The use and operation of this speaker is beyond our control. Warranty of the Boombar+ is limited to defects caused by faulty manufacture or defects in materials only. No warranty whatsoever is given or implied for damage caused by the user under any circumstances.

This does not affect your statutory rights.

Please do not attempt to open this product. There are no user serviceable parts inside, in particular if your product has an embedded, non-replaceable battery, do not attempt to access or remove the battery as this may cause personal injury and will damage the product.

Making any attempt to open the product or carry out repair voids any and all warranties.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- oReorient or relocate the receiving antenna.
- oIncrease the separation between the equipment and receiver.
- oConnect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits