


kitsound.co.uk

All trademarks are acknowledged as the property of their respective owners. Unless otherwise stated their use does not imply that the trademark owner is affiliated with KitSound or endorses the products herein.

Warning: To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these earphones. Not suitable for children.



JB. 5294-b / Made in China. © KitSound™ 2017. Christchurch, Dorset, BH23 4FL, UK



MANHATTAN
WIRELESS
HEADPHONES

USER MANUAL


Please read this manual carefully before use.

Box contents

- KS Harlem Wireless Headphones
- Micro USB charging cable
- 3.5 mm to micro USB audio cable
- User manual

Functions

1. Microphone
2. Micro USB charging port
3. ON/OFF button
4. Multi-function button (MFB)
5. LED indicator

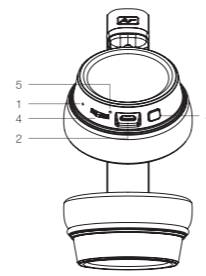

Instructions for use

Charging the battery

1. Connect the micro USB end of the charging cable to the Micro USB charging port (2) and the standard USB end to a PC, Mac, or laptop USB port or USB mains charger
2. The LED indicator (5) will flash red whilst charging. It will turn off after around 2-3 hours. The battery is now fully charged
3. If the LED indicator (5) flashes red twice every 30 seconds while using the Harlem, this means the battery is running low. Once this happens you have about 5-10 minutes of use before the Harlem powers off automatically

Wireless

1. Start by holding the ON/OFF button (3) down for 2 seconds, and the LED indicator (5) will flash red and blue
2. Turn your iOS, Android, or Windows device's Bluetooth ON and search for new devices
3. Select 'KS Harlem' from the list of the found devices. If asked for a pass code, enter '0000' and the headphones will then be connected to your device
4. The next time the headphones are switched on, they will automatically search for and attempt to connect to the last paired device. If no device is found, the headphones will automatically go into pairing mode

Note: 'Bluetooth' is a trademark of Bluetooth SIG, Inc. This product is in no way affiliated with or endorsed by Bluetooth SIG Inc.

Functionality

Power on	Hold the ON/OFF button (3) down for 2 seconds
Power OFF	Hold the ON/OFF button (3) down for 4 seconds
To answer a call	Press the MFB (4) inwards and immediately release
To end call	Press the MFB (4) inwards and immediately release
To reject a call	Press and hold the MFB (4) inwards for 2 seconds and then release
Voice control	When connected with no music playing, press and hold the MFB (4) (not supported by all devices)
Redial	Press the MFB (4) twice quickly to redial your most recent call

(continued...)

[...continued] Functionality

Volume +	Push the MFB (4) forwards and hold to increase volume
Volume -	Push the MFB (4) backwards and hold to decrease volume
Previous track	Push the MFB (4) backwards and immediately release
Next track	Push the MFB (4) forwards and immediately release
Play/Pause	Press the MFB (4) inwards and immediately release

LED indicator status

LED indication	The KS Harlem is . . .
Solid blue light for 2 seconds	Turning on
Solid red light for 2 seconds	Turning off
Red and blue flashing alternately	Pairing mode
Blue flashing once every 10 seconds	Connected standby mode
Red flashing twice every 30 seconds	Low battery warning
Solid red light	Charging
Red LED turns out whilst charging	Fully charged

Care for your Harlem

Please DON'T:

- Get the Harlem wet
- Drop the Harlem as this will invalidate your warranty
- Open up the Harlem as there are no user serviceable parts inside
- Expose the Harlem to extreme temperatures or rapid changes of hot to cold or vice versa

Please DO:

- Clean the Harlem with a soft dry cloth and no detergents

Specifications

Wireless connectivity type	V4.1
Wireless connectivity distance	up to 10 m
Frequency	20 Hz - 20 kHz
Play time	up to 30 hours
Battery type	LiPo, rechargeable

Troubleshooting

If you cannot connect the headphones to your device, please try the following:

- Ensure that the headphones are charged, switched on, paired with, and connected to your device
- Check the headphones are within 10 metres (30 feet) of your device and that there are no obstructions (such as walls or other electronic devices) between the headphones and the device
- Only one device may be paired to these headphones at a time, so please ensure there are no conflicting wireless devices trying to connect to the headphones
- If the headphones will not switch off, they can be reset back to normal by putting them on charge
- If you receive an intermittent signal, please ensure the headphones are fully charged before continuing use
- If you do not use the headphones for longer than 5.5 minutes whilst not connected to a device, they will automatically power off to conserve power

We hope you've now got all the information you need to get started, but if you're having problems with anything, please feel free to contact us at: support@kitsound.co.uk

*Hereby, Kondor Ltd declares that the radio equipment type, KSHAR Harlem Wireless Headphones, is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://kondor.co.uk/product-documents/>

Please do not attempt to open this product. There are no user serviceable parts inside. In particular if your product has an embedded, non-replaceable battery, do not attempt to access or remove the battery as this may cause personal injury and will damage the product. Making any attempt to open the product or carry out repair voids any and all warranties.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SIZE:60X90MM

128克双铜纸双面印刷

中间打一颗钉 过哑膜