

MANUAL

Thanks for purchasing our product. Please read this manual carefully before starting to use this device. When you use this device, you are supposed to learn well of this product.

1. Power On-off

Power on: Press any key of the keypad to turn on the power, when there are an antenna symbol and signal in

LCD, it means connection between keypad and base station is successful.

Power off:

-If not under the vote mode, you don't press any key of the keypad, after 20 seconds, the keypad will be turned off automatically.

-Keypads also can be turned off together remotely by software.

2. Functions

Sign-in & Presentation	LCD display	Operation
Sign-in	Press any numeric key, the LCD will display the corresponding number. When data is transmitted successfully, it displays "OK" symbol.	Press "OK" key to sign-in
Quickly response	As above	Press "Ok" key to quickly response.
Vote	As above	"1、2、3" stand for "Yes、No、Abstain" separately, then press "OK" key to confirm.
Grade	As above	1~9 stand for 9 grades, then press "Ok" key to confirm.
Single/Multiple choice	As above	Make the single / multiple choice by pressing 1~9 keys, - the numbers are displayed in LCD,

		<p>the buzzer will ring if the keypresses are efficient, otherwise no buzzer ring; the vote numbers reach the set option numbers, then cannot choose more. if you want to change the vote answers, press “c” to cancel them first, then make a new choice, finally press “Ok” to confirm.</p>
Score	As above	<p>You can set the upper-lower limit (integer) and digits after floating dot, or not set. When pressing numeric keys, the LCD will display these corresponding numbers, press “C” key to clear the last number, finally press “Ok” to confirm.</p> <ul style="list-style-type: none"> - If setting the upper-lower limit, when the data is wrong, LCD displays “Err” automatically, then please input again. - If not setting the upper-lower limit, you can input 10 numbers at most including “-” and floating dot, and floating dot stands the place of one number

3. Read and set keypad ID No.

Work with base station and software, press “OK” key to read and set keypad ID No. When not vote, press “C” key to display the keypad ID No.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER’S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation