

JJ-RC-F8

1. Install a battery (6V AE), remote control be in ready state.
2. Press a remote control's button, LED will blink, MCU transmits data.
3. Data will be modulated to be ASK mode, and transmitted by the wireless antenna in PCB panel.