

## **JJ-RC-A**

- 1. Install a battery (12V AE), remote control be in ready state.**
- 2. Press a remote control's button, LED will blink, MCU transmits data.**
- 3. Data will be modulated to be ASK mode, and transmitted by the wireless antenna in PCB panel.**