

**- Stereo Speaker-
The Bluetooth Music System
For Your iPod, and Bluetooth Device**



Table of Contents

A Consumer Guide to Product Safety	
FCC Information	
Getting Started	
Controls and Indicators	
Charging Your iPod	
Listening to Your iPod	
Listening to Bluetooth Music Device	
Listening to your PC	
Listening to Other Audio Device	
Answering and Making Calls with a Bluetooth mobile Phone	
Answering and Making VoIP Calls with Your PC	
Using the Remote Control	
Replacing the Remote Control Battery	
Trouble Shooting	
Warranty Information	



NOTE : The Stereo Speaker is designed for use with Bluetooth wireless devices compatible with the **HSP**, **HFP**, **A2DP** and **AVRCP** streaming audio profiles. Refer to your Bluetooth device's user manual or technical support to determine if your Bluetooth devices supports these profiles.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

When use in the directed manner, this unit has been designed and manufactured to assure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operation instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, and adhere to all warnings on the unit and in the instruction and service manual.

1. **Water and Moisture** - The unit shall not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that block the ventilation operations; or placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat source, such as radiator, heat register, stoves or other appliances including amplifiers that produce heat.
4. **Power Source** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power Cord Protection** – Power supply cord should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into AC outlet.
6. **Cleaning** – The unit should be cleaned only recommended by manufacturer.
7. **Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.

9. **Lighting and Power Surge Protection** – Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lighting storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lighting and power-line surge.
10. **Overloading** – Do not overload wall outlet, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The appliance should be serviced by qualified service personnel when:
 - a. The power supply cord or plug has been damaged.
 - b. Objects have fallen into or liquid has been spilled into the enclosure.
 - c. The unit has been exposed to rain.
 - d. The unit has been dropped or the enclosure damaged.
 - e. The unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged and take out batteries from the unit to prevent damage or corrosion.
13. **Service** – The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Getting Started

Thank you for purchasing the Stereo Speaker which's designed specifically to work with your iPod and play Bluetooth audio wirelessly from your mobile phone, computer or other devices via Bluetooth or with wire via line-in cord, this product provides high quality audio performance that brings out the best in your music. Please read this manual carefully before operating the Stereo Speaker and keep it for future reference.

Package Contents

- 1 audio patch Cord
- 1 USB cable
- 1 remote control (1 CR2302 battery pre-installed)
- 1 Stereo Speaker main unit
- 1 AC adaptor
- 4 iPod inserts

Connect AC Adaptor

Connect the USB cable plug into the jack on the back of the Stereo Speaker and the other end of the USB cable to AC adaptor, then plug the AC adaptor into the wall outlet. When connected the AC adaptor, the Stereo Speaker charges your iPod and allows you to play it.

Note: iPod does not charge when the Stereo Speaker is operating on batteries. This AC adaptor is for use with the Stereo Speaker only. To avoid damage, do not use another kind of adaptor with the Stereo Speaker.

Install/Replace Batteries

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 4 AA batteries, checking the polarity (+ and – ends of the battery) matches the drawing near the battery

compartment. Different types of batteries or new and used batteries are not to be mixed.

3. Close the compartment cover.

Note:

- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Make sure you dispose of batteries properly (see your local regulation)

Install iPod Inserts




Please use the insert comes with your iPod or select one of the inserts attached with Stereo Speaker to ensure your iPod fits properly in the dock on the top of the system.

iPhone Insert	Thin iPod Insert	Thick iPod Insert	Nano Insert
Use with iPhone	iPod 3 Gen 10 -15GB	iPod 3 Gen 30GB	iPod Nano 2GB
	iPod 3 Gen 20GB	iPod 3 Gen 40GB	iPod Nano 4GB
	iPod 4 Gen 20GB	iPod 4 Gen 40GB	
	iPod Photo 30GB	iPod Photo 40GB	
		iPod Photo 60GB	

To place an insert:

1. Use the insert comes with your iPod, or
2. Select the insert for your iPod (see chart above) using the correct insert ensures the proper fit for your iPod.
3. Gently press the iPod insert into the dock. (The iPod must not be in a case or skin)
4. Carefully place your iPod into the dock.
5. To remove/replace an insert, first remove your iPod, then grip the insert and pull gently upwards.

Controls and Indicators

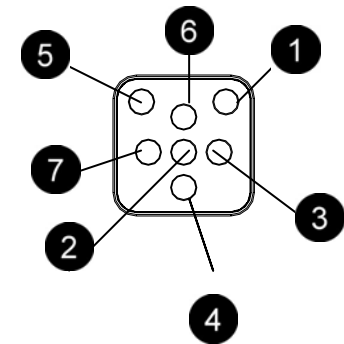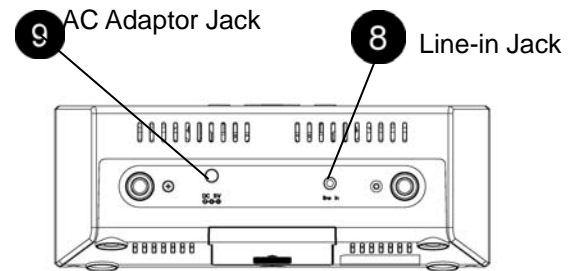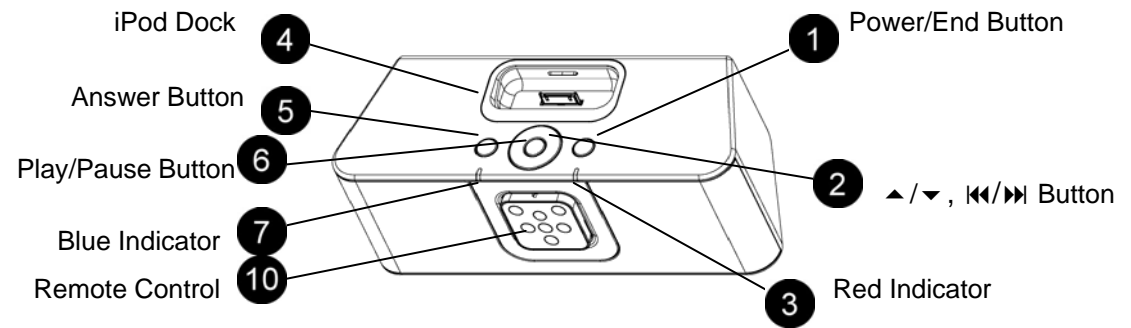

Charging Your iPod

1. Make sure you are using the correct insert for your iPod and that it is properly docked into the Stereo Speaker. Failure to do so may damage your iPod.
2. While your iPod is docked in the main unit, it recharges until fully charged. **Your iPod will not charge when the unit is running on battery power.**

Listening to Your iPod

1. Press **Power/End Button** to turn on the unit and dock the already playing iPod. You will hear the music playing from your iPod.
2. When the iPod is docked and in standby mode, press the **Play/Pause Button** (or **Play/Pause Button** on the remote control) to play it.
3. Press the **Play/Pause Button** again to pause play, press again to resume play.
4. Press the **Volume ▲** or **▼ Button** on main unit or remote control to adjust the system volume.
5. Press **⏪** or **⏩ Button** to go to the next or previous track. Press and hold while track is playing for high speed forward or reverse music search of the current track.
6. Change to listen to Bluetooth music device if it has paired and linked with Stereo Speaker, press and hold **Play/Pause Button** for 3 second.
7. To turn off the Stereo Speaker, press **Power/End Button** on main unit or remote control.

Listening to Bluetooth Music Device

Before you can play Bluetooth music through the Stereo Speaker, you need to pair and link your Bluetooth device with the Stereo Speaker.

Note: Your Bluetooth device (mobile phone, MP3 player, PDA, etc.) must support the **HSP, HFP, A2DP** and **AVRCP** Bluetooth profiles to pair with Stereo Speaker. Please refer to your device's user manual for details on the Bluetooth profiles it supports and on how to set the device's Bluetooth pairing, searching mode.

Pairing and Linking Your Bluetooth Device with Stereo Speaker

1. Make sure your Bluetooth device is fully charged.
2. Power up your Bluetooth device and connect your Stereo Speaker to AC adaptor.
3. Turn on Bluetooth functionality on your Bluetooth device. Typically, Bluetooth controls are found on the device's tools or setting menu (see your user manual). Turn on Bluetooth connectivity.
4. Press the **Power/End Button** on the Stereo Speaker to put it in pairing mode. The blue and red indicators on Stereo Speaker will flash.
5. Choose "add a new Bluetooth device" on your device. It will start to search. If the pairing attempt fails or time out, press and hold **Play/Pause Button** on Stereo Speaker for 3 second to restart the process, and repeat "add a new Bluetooth device" on your Bluetooth device.
6. After your device and Stereo Speaker have discovered each other, you will be asked to enter a pass-code on your Bluetooth device. The pass-code for Stereo Speaker is : **1234**
7. A 'pairing successful" or similar message should appear on your device and the blue indicator on the STEREO SPEAKER should flashing twice a time following.
8. Pairing will remain intact even if either or both devices are powered off. However, the active link between the devices will be lost and need to be re-established.
9. To re-establish a link, select Stereo Speaker from the Bluetooth device menu on your Bluetooth device or press **Answer Button** on Stereo Speaker.
10. To disconnect the link between Stereo Speaker and Bluetooth device, press the **Power/End Button** to turn

unit off.

Playing Bluetooth Music

1. Once your device and the Stereo Speaker are paired and linked, you can start to play Bluetooth music through the Stereo Speaker.
2. Initiate music playing on your Bluetooth device.
3. Press **Play/Pause Button** on the Stereo Speaker or remote control to play your Bluetooth device.
4. Press **Play/Pause Button** again to pause play, press again to resume it.
5. Press **⏪ or ⏩ Button** on the Stereo Speaker or remote control to go to the next or previous track.
6. Use the **Volume ▲ or ▼ Button** on the Stereo Speaker or remote control to adjust the system volume.
7. Change to listen to iPod, press and hold **Play/Pause Button** for 3 seconds.
8. To turn off the Stereo Speaker, press the **Power/End Button** on the main unit or remote control.

Listening to Your PC

Before using your PC with the Stereo Speaker, make sure your PC is paired and linked with Stereo Speaker. See Bluetooth pairing section for details.

Note: Your PC or notebook must have Bluetooth build-in or a Bluetooth dongle plugged in with **HFP, HSP, A2DP & AVRCP** Bluetooth profiles and a program of music player and Bluetooth driver/software program installed. Please refer to the user manual of music player, Bluetooth driver/software program for details on the Bluetooth profiles it supports and on how to set the Bluetooth pairing/searching mode and music playback.

1. Once your PC and the Stereo Speaker are paired and linked, click Bluetooth AV Audio (Advanced Voice Audio) connection on the Bluetooth software program.
2. Launch the music player on PC and play your favorite music. You can hear the music streamed to the STEREO SPEAKER wirelessly.
3. Press **Play/Pause Button** on the Stereo Speaker or remote control to play your PC.
4. Press **⏪ or ⏩ Button** on the Stereo Speaker or remote control to go to the next or previous track.

5. Use the **Volume ▲ or ▼ Button** on the Stereo Speaker or remote control to adjust the system volume.
6. To turn off the Stereo Speaker, press the **Power/End Button** on the main unit or remote control.

Note :

1. The music player should be started after the Stereo Speaker paired and linked with your PC.
2. The music players supported by Stereo Speaker are : Windows Media Player 9.0, Real Player 10, Winamp 5.0, Musicmatch 9.0 and iTunes 4.0 or all the higher version on PC.
3. iTunes shall be put in the foreground if you want to remote control the music player from Stereo Speaker.
4. Winamp should set General Preference / Global Hotkey then can support remote control from Stereo Speaker.
5. When execute AVRCP to start playing music from 1st track or last track, player must be set at Repeat Play Mode.

Listening to Other Audio Device

If you are using an iPod without a docking port or other MP3 player or other audio device, you can still play it through the Stereo Speaker via the Line-in jack.

1. Plug one end of the audio patch cord (included) into the line-out or headphone jack on your device and the other end of the patch cord into Stereo Speaker Line-in jack, located on the back of the unit.
2. Red indicator will flash twice a time to show that an external audio device is connected with the Stereo Speaker.
3. Turn on and play your device.
4. Press the **Volume ▲ or ▼ Button** on main unit or remote control to adjust the system volume.
5. To turn off the Stereo Speaker, press **Power/End Button** on main unit or remote control. Remember to turn off your device, too.

Noted:

1. While the audio patch cord is plugged, the Stereo Speaker will automatically switch from Bluetooth or iPod

- to play your device.
2. The audio patch cord should be unplugged from the Stereo Speaker Line-in jack if you stopped playing your device.

Answering and Making Calls with a Bluetooth Mobile Phone

Before using your phone with the Stereo Speaker, make sure your Bluetooth phone is paired and linked with Stereo Speaker. See Bluetooth pairing section for details.

Answering a Call

1. The ringer will sound. To answer a call, press the **Answer Button**. The Stereo Speaker will now function as a speaker phone.
2. For best sound performance, speak toward the MIC within 5 feet and use **Volume ▲ or ▼ Button** on main unit or remote control to adjust the system volume.
3. **Call Waiting** : If you have call waiting and receive a second call, the Stereo Speaker will sound a call waiting tone. Press the **Answer Button** to answer the second call and put the first call on hold. Press **Answer Button** again to back to the first call and put the second call on hold.
4. Press the **Power/End Button** once to end the call and Stereo Speaker will automatically return to the call on hold.
5. To hang up, press the **End Button**.

Making a Call

1. Enter the desired number on your mobile phone to dial out.
2. To redial the last number dialed, rapidly press the **Talk Button** twice.
3. **Voice Dial** : If you have voice dial, press **Talk Button** once to enter into voice dial, following the instruction from mobile phone for a voice dial.
4. To hang up, press the **Power/End Button**.

Trans to Phone

During talk, press and hold the **Answer Button** you can transfer the call to your mobile phone.

Answering and Making VoIP Calls with your PC

Before using your **Voip** call with the Stereo Speaker, make sure your PC is paired and linked with Stereo Speaker. See Bluetooth pairing section for details.

Note: VoIP (Voice over Internet Protocol) is a protocol optimized for the transmission of voice through the Internet or other packet switched networks like **Skype, MSN**, etc.

Answering a Call

1. Once your PC and the Stereo Speaker are paired and linked, click Bluetooth Headset connection on the Bluetooth software program.
2. To answer a call, press the **Answer Button** on Stereo Speaker or click **Talk** on your VoIP software program. The Stereo Speaker will now function as a speaker phone.
3. For best sound performance, speak toward the microphone within 5 feet and use **Volume ▲ or ▼ Button** on main unit or remote control to adjust the system volume.
4. To hang up, click **End** on your VoIP software program.

Making a Call

1. The VoIP program, such as Skype, MSN shall be started after the Stereo Speaker paired and linked with your PC.
2. Select the person you are going to talk from the contact list and click **Talk** on your VoIP software program.
3. To hang up, click **End** on your VoIP software program.

Using the Remote Control

Power/End	Pressing to turns unit on/off and entering to pairing mode functions as it does on the main unit.
Play/Pause	Pressing Play/Pause functions as it does on the main unit
Volume ▲/▼	Pressing Volume ▲/▼ will functions as it does on the main unit.
⏮/⏭	Pressing ⏮ or ⏭ functions the same as the ⏮/⏭ button on the main unit
Answer	Pressing to answer a call, redial, voice dial or trans to phone functions as it does on the main unit.
End	Press to end a call functions as it does on the main unit.

Replacing the Remote Control Battery

The remote control battery is already installed at the factory. When the remote control stops operation or its range seems reduced, it is time to replace the battery.

1. The battery door is located on the back end of the remote.
2. Pull the battery door to release the battery door latch.
3. Insert a CR2032 battery, checking that the + and – sides of the battery match the drawing inside the battery compartment.
4. Replace the battery door into the remote control.

Note: Make sure you dispose of batteries properly (see your local regulation)

For best results, aim remote control towards the remote sensor on the lower of the display.

Trouble Shooting

Unit doesn't respond (no power)	AC adaptor isn't plugged to a wall outlet or the connector isn't plugged into the power supply jack on the back of the unit	Plug the AC adaptor into a wall outlet and plug the connector into the DC jack on the unit
	Wall outlet is not functioning	Plug another device into the same wall outlet to confirm the outlet is working. If the outlet is controlled by a switch, check that the switch is ON.
	Power is off	
iPod can not dock properly	Using no or wrong iPod insert	Make sure the dock insert is the proper fit for your iPod
	iPod is not installed properly	Remove your iPod from the dock and check for any obstruction on the connectors in the dock and on your iPod. Then reseat it in the dock.
iPod does not respond to the unit	iPod is not installed properly	Remove your iPod from the dock and check for any obstruction on the connectors in the dock and on your iPod. Then reseat it in the dock.
	Your iPod software is too old	Upgrade software on your iPod. For details, visit http://www.apple.com/ipod/download
	iPod is locked up	Make sure your iPod is working properly before docking it to the unit. Please refer to your iPod manual for details on iPod operation.

iPod didn't charge up	iPod is not installed properly	Remove iPod from the dock and check for obstruction on the connections in the dock and on your iPod. Then reseal it in the dock.
	iPod is locked up/frozen	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details.
	iPod Battery has problem	
Sound is distorted	Volume level is set too high	Decrease the volume
	Sound source is distorted	If the iPod original sound source is of poor quality, distorted and noise are easily noticed with high power speakers. Try different audio source such as a music CD
Remote Control didn't work	Battery weak	Replace current battery with new battery
	Remote control is not pointed toward to the Stereo Speaker	Point the remote control toward the Stereo Speaker, move within 10 feet of the unit
Bluetooth Music is broken up	Bluetooth device is out of range of Stereo Speaker	Move your Bluetooth device within 30 feet of the Stereo Speaker
Can't hear caller's voice	Bluetooth device is out of range of Stereo Speaker	Move your mobile phone closer to Stereo Speaker
	Volume on Stereo Speaker is too low	Raise volume on Stereo Speaker
My Bluetooth headset won't pair with Stereo Speaker	Headset and other receiver will not pair with the Stereo Speaker	Pair headset directly with mobile phone or other transmitting device.
Others can't hear my voice or voice is not clear to listener	You are too far from Stereo Speaker microphone	Move within 5 feet of the Stereo Speaker

Calls don't sound clear	Volume on Stereo Speaker is too low	Raise volume on Stereo Speaker
	Poor connection or mobile phone reception	Retry call after moving phone for better reception, connection

Warranty Information