



INTERACTIVE
24
GAME GROUP

Gene Simmons Game

Wireless Guitar
Controller

compatible with
PlayStation®2, PlayStation®3
& Nintendo® Wii™ Guitar
Simulation Video Games





TABLE OF CONTENTS

Please read before using your Guitar Controller.....	page 1
Setting up and connecting your Guitar Controller.....	page 3
Using your Guitar Controller.....	page 4
Technical Support / Credits	page 5
Warranty.....	page 6

PLEASE READ BEFORE USING YOUR GUITAR CONTROLLER

WARNING: If you have any preexisting medical condition, including heart, respiratory or other physical impairments that limit your physical activity, **DO NOT** use this Guitar Controller. Always consult a physician before engaging in any physical activity that may strain your limitations.

**THE GUITAR CONTROLLER IS FOR USE AS A GUITAR CONTROLLER ONLY.
CARE MUST BE TAKEN TO AVOID INJURY.**

- **Never stand on your Guitar Controller.**
- **Never get the Guitar Controller wet.** Likewise, do not leave your Guitar Controller in a dusty or humid place. Only use a dry cloth to clean the controller, no water or chemicals.
- **Small children should be supervised at all times when using the Guitar Controller.**
- **Do not try to modify, fix, or disassemble your Guitar Controller.** There are no user serviceable parts, and doing so will void your warranty.
- **Some people may experience fatigue or discomfort after long periods of use.** If this occurs, **DO NOT** continue to use your Guitar Controller.

Thank you for purchasing this Gene Simmons AXE video game guitar controller (the "Guitar Controller").

For the 1st time EVER, Gene Simmons presents the Gene Simmons AXE controller for PlayStation®2, PlayStation®3 and Nintendo®'s Wii™ guitar simulation video games. This high quality 3/4th size replica is personally sanctioned by Gene Simmons to give you the ultimate "God of Rock" experience.

Larger than standard video game guitars, the AXE is the tool of choice for those who want to take their guitar expertise to the next level. Through wireless control with a huge range of up to 30 feet (8 meters), the AXE will provide the freedom to express yourself like never before. The Gene Simmons AXE comes equipped with highly durable components, replicated paint finish and full features.


For your personal safety and the safety of others, please carefully read the instruction manual before using this product.



SETTING UP AND CONNECTING YOUR GUITAR CONTROLLER

SETTING UP YOUR GUITAR CONTROLLER

Your Guitar Controller runs approximately 40 hours on just 4 AA size batteries. Unscrew the battery cover on the back of your guitar and insert the batteries as shown.

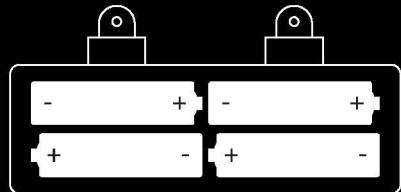

CONNECTING YOUR GUITAR CONTROLLER for PS2/PS3

The Guitar Controller is a 2.4 GHz wireless controller that connects to a PlayStation® 2 or PlayStation® 3 via a detachable receiver.

The receiver has 2 available connections:


- PlayStation® 2 controller port connector
- USB connector for PlayStation® 3 consoles

The receiver comes ready to plug in to a PlayStation® 2 controller port. To connect the receiver to a USB port, attach the provided USB adaptor and plug the receiver into the appropriate PlayStation® 2 or USB port. The receiver draws its own power directly from the device, and automatically finds your Guitar Controller. No additional physical setup is required.

CONNECTING YOUR GUITAR CONTROLLER FOR NINTENDO'S WII

The Guitar Controller requires the use of a Wii remote in order to operate. Insert the Wii remote in the cavity in the back. Please make sure that the Wii remote is synchronized with the Wii console.

USING YOUR GUITAR CONTROLLER

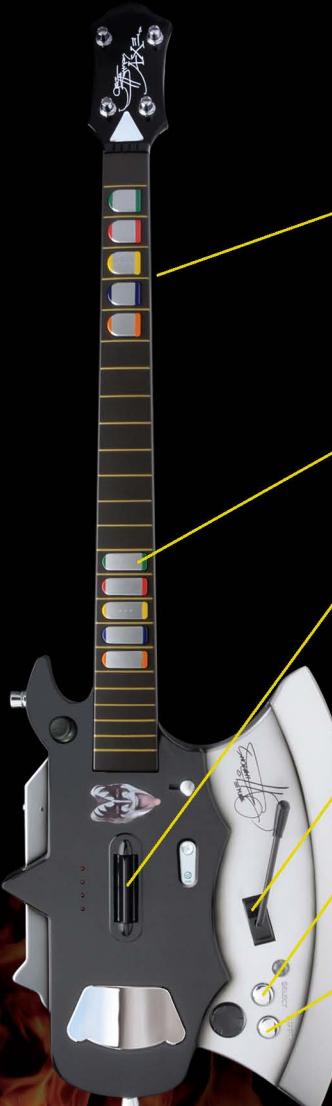

Green Fret Button – Activates the green note and used to confirm a menu selection

Red Fret Button – Activates the red note and used to cancel a menu selection

Yellow Fret Button – Activates the yellow note

Blue Fret Button – Activates the blue note

Orange Fret Button – Activates the orange note

Narrow color buttons for Rock Band™ only. In Guitar Hero™ mode, these will work the same as the normal fret buttons

Strum Bar – Press the Strum Bar UP and DOWN to simulate strumming, activating any fret buttons being pressed. Also use to navigate menus

Whammy Bar – Add your own personal touch on longer notes by pressing the whammy bar IN and OUT

Select – To confirm a selection and activate power-ups during game play

Start Button – Confirm/Pause

Tilt Sensor – Activate Star Power by tilting your Guitar Controller up



TECHNICAL SUPPORT/CREDITS

TECHNICAL SUPPORT

Video game controller compatible with Guitar Hero™ and Rock Band™ video games for PlayStation®2, PlayStation®3 and Nintendo®'s Wii™

Please refer to www.genesimmonsaxeguitar.com

CREDITS

Please refer to www.genesimmonsaxeguitar.com

CARE AND MAINTENANCE

To ensure optimal performance from your Gene Simmons AXE Guitar Controller, please follow the below guidelines:

- Do not stand on your Guitar Controller.
- Do not expose the Guitar Controller to any liquids.
- Do not leave your Guitar Controller in a dusty or humid environment.
- Do not expose your Guitar Controller to extreme conditions, including direct sunlight or excessive heat.
- Do not try to modify, fix or disassemble your Guitar Controller. There are no user serviceable parts and doing so will void your warranty.
- Only use a dry cloth to clean the Guitar Controller, no water or chemicals.
- Always remove batteries during transport of the device or when not in use for long

WARRANTY

Warrantor: Interactive Game Group, LLC

Limited Warranty

The limited warranty set forth below is given by Interactive Game Group, ("I2G") with respect to the I2G brand product (the "product") that you have purchased. The product that you have purchased is the only product to which this limited warranty provided by I2G applies.

Your product, when delivered to you in new condition in its original container, is warranted against defects in materials or workmanship as follows: for a period of 30 days from the date of original purchase, a defective product returned to a I2G repair facility or a I2G Authorized Service Facility ("ASF") for such product, as applicable, and determined to be defective upon inspection, will be exchanged for new or refurbished product, as determined by the ASF. Warranty repair or replacement shall not extend the original warranty period of the defective product. This limited warranty does not cover any supplies or accessories. Proof of purchase that is a copy of the invoice or receipt to evidence the date of purchase will have to be provided to claim under the warranty.


This limited warranty shall only apply if the product is used in conjunction with compatible equipment and compatible software, as to which items I2G shall have no responsibility. This limited warranty covers all defects encountered in normal use of the product, and does not apply in the following cases: (a) Loss of or damage to the product due to abuse, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, failure to follow operating, maintenance or environmental instructions prescribed in I2G's instruction manual, or service performed by other than a I2G repair facility or an ASF. (b) Use of parts or supplies (other than those sold by I2G) that cause damage to the product or cause abnormally frequent service calls or service problems. (c) If the product has had its serial number or dating or identification marks altered or removed. Any physical damage will void warranty unless specified otherwise.

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER EXPIRY OF THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE. All inquiries with regards to the product warranty may be directed to support@geneimmonsaxeguitar.com

NO OTHER EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND I2G. (SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.)

I2G SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE OR MISUSE OF, OR INABILITY TO USE THE PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF I2G HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST I2G BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY I2G WHICH CAUSED THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE THE PRODUCT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF I2G. (SOME PROVINCES/STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THE PRODUCT, OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT, AND STATES YOUR EXCLUSIVE REMEDY.

©2008 Interactive Game Group, LLC. All rights reserved. The Gene Simmons Axe Guitar is the property and is a trademark of The Gene Simmons Company, and is licensed by The Gene Simmons Company to Interactive Game Group, LLC. The facial makeup worn by Gene Simmons is a trademark of Kiss Catalog, Ltd. Used with permission. PLAYSTATION, PS2 and PS3 are registered trademarks of Sony Computer Entertainment Inc. Nintendo, Nintendo Wii and Wiimote are registered trademark of Nintendo of America Inc. Guitar Hero is a trademark of Red Octane, Inc. Rock Band is a trademark of Harmonix Music Systems, Inc., an MTV Networks Company. All other trademarks and trade names are the properties of their respective holders. THIS PRODUCT IS NOT SPONSORED, ENDORSED OR APPROVED BY SONY COMPUTER ENTERTAINMENT OF AMERICA, SONY COMPUTER ENTERTAINMENT OF EUROPE, NINTENDO OF AMERICA, NINTENDO OF EUROPE, RED OCTANE, INC. or HARMONIX MUSIC SYSTEMS, INC.

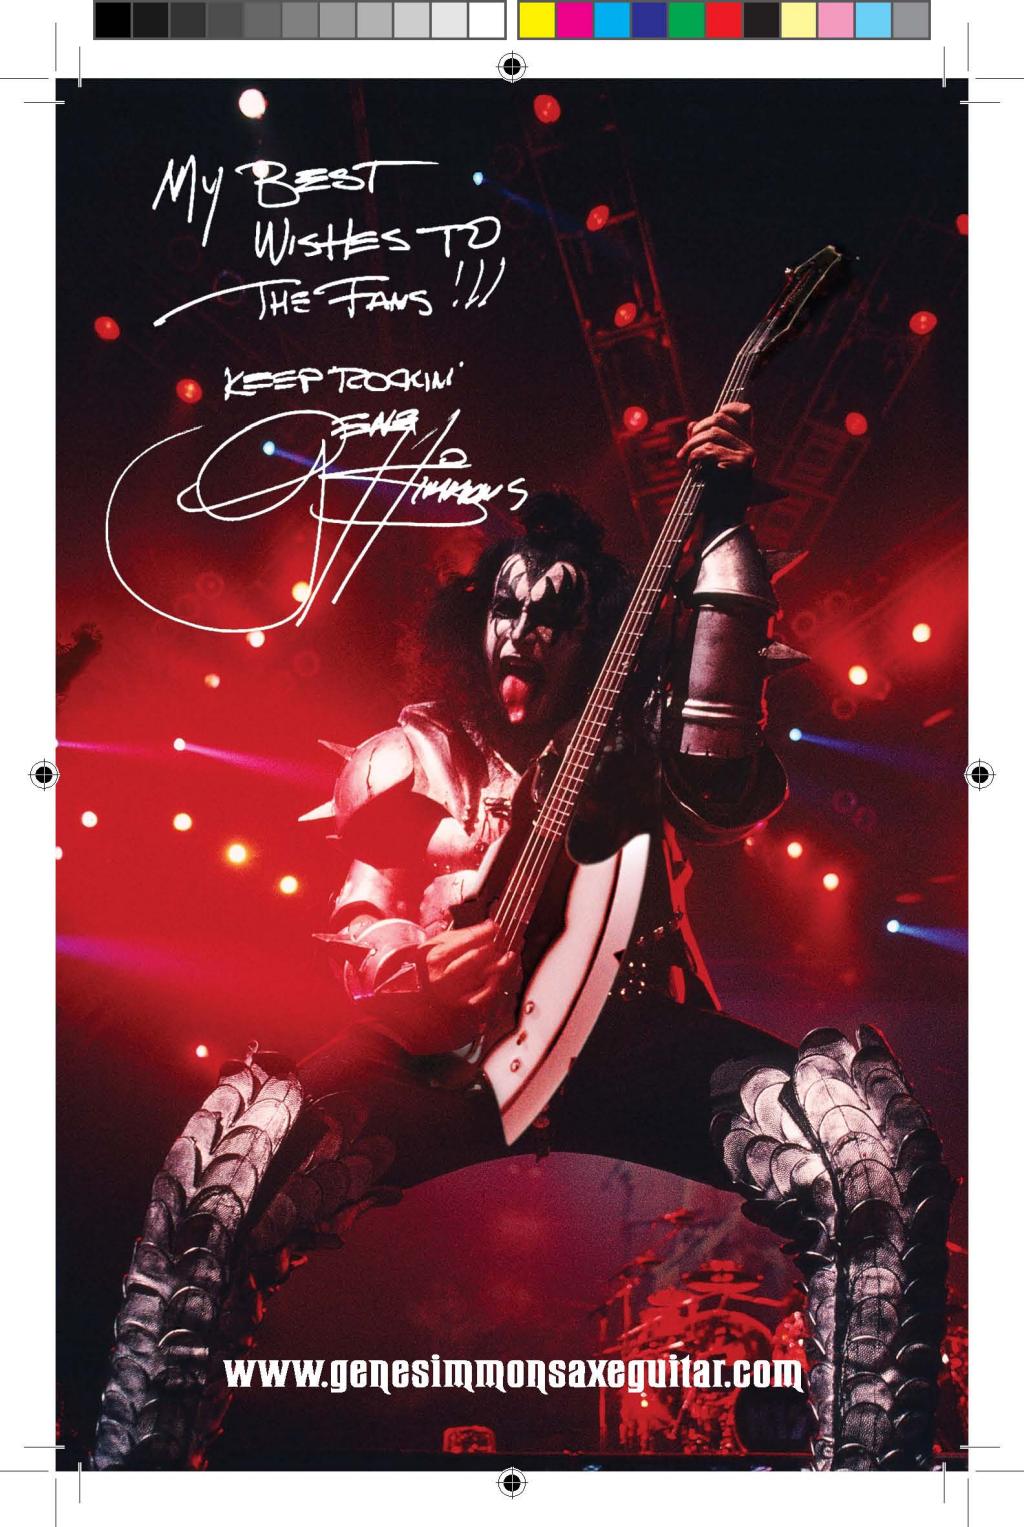

My BEST
WISHES TO
THE FANS !!!

KEEP ROCKIN'

*Gene
Simmons*

www.genesimmonsaxeguitar.com

FCC ID:WYZPS2PS3

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.