

## ELECTRONIC BALLAST USER MANUAL

MODEL NO.: YC-322519A-1, YC-322519A-2

1. The ballast electrify, high-voltage electricity exists, when fix or maintain the lamp, cut off power and provide good grounding, non-professionals do not operate.
2. This ballast applied to the indoor or dry outdoor environment.
3. Input voltage of this ballast is 120V 60Hz  $\pm 10\text{V}$ , not for use with dimmers.
4. This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.