

User Manual



Dear customer	Instructions	Changing batteries
<p>Thank you for purchasing our Easy2Pick, the most advanced luggage locator. Now your days of anxiety and fear whether your luggage will appear at the conveyor belt are over! With Easy2Pick you can relax next to the conveyor belt - once the luggage appears, your receiver will notify you. All you have to do is step to the belt and pick up your luggage.</p> <p>www.easy-2-pick.com</p>	<ol style="list-style-type: none"> 1. Turn on the luggage tag and the key chain (receiver). Make sure you hear a beep once you turn on the receiver which will let you know the receiver recognizes the transmitter and will be able to recognize it later. 2. Attach the tag to your suitcase using the included strap, and hand it to the airline. 3. Once you exit the plane, make sure the receiver is still on. 4. Walk to the luggage pick up area. 5. Relax, no need to stand shoulder to shoulder with the other passengers; you can stand as far as 20 to 25 yards from the conveyor belt. 6. Once the suitcase arrives, your key chain (receiver) will start beeping and vibrating and letting you know the suitcase has arrived. 7. Step to the conveyor belt and pick up your luggage. 8. Turn off the switch on the receiver, and begin your vacation. <p>Bon Voyage!!</p>	<p>Please note that while changing batteries, you must make sure the receiver and transmitter recognize each other and work in harmony.</p> <ol style="list-style-type: none"> 1. Remove the old battery; the receiver needs 10 seconds to disconnect. 2. Insert the new battery into the receiver or transmitter, turn both on. The receiver will make "beeping" sounds three or four times, to indicate it is turning itself onto learning mode. The learning mode lasts 5 seconds. Make sure the transmitter is switched on during this 5 second period and it is near the receiver. 3. The receiver will make one "beeping" sound when it recognizes the transmitter and the learning mode is completed. 4. If it did not "learn", within 5 seconds, it will make 2 beeping sounds. Turn off the transmitter and start from step one again. 5. When the process is complete, turn off the transmitter.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.