

T00062 REV X2  
X88T000A3

**X<sup>ON</sup> Flex**

Volume / Pairing



**Operation LED**

Record = Blinking Red  
Buffer = Blinking Green  
Bootup = Solid Red  
Disconnect = Blinking Yellow

**Power Switch**

Red = On

**Event Button**

Double Tap = Start Record  
Hold 3 Sec = Stop Record

**Battery Button**

Green = Full Charge  
Yellow = 20% - 40%  
Red = Less than 20%



Customer Service 1.877.270.0553  
evidencehelp@taser.com

MLB0170

**LITHIUM BATTERIES**

MAY EXPLODE OR CAUSE BURNS IF DISASSEMBLED, RECHARGED  
OR EXPOSED TO WATER, FIRE OR HIGH TEMPERATURE.



TASER INTERNATIONAL  
SCOTTSDALE, AZ, USA

082015

FCC ID: X46300832  
IC: 8603A-S00832