

Thank you for purchasing the Game Stop Wireless Controller for the PLAYSTATION 3 video game system.

Contents:

- 1 Wireless Controller for PS3
- 1 USB Dongle (found attached to the controller)
- 1 Manual

General:

Game Stop Wireless Controller for the PLAYSTATION 3 console works only with the PS3® gaming console. Do not use it with other USB devices. The dongle doesn't connect with PC

Set up:

- 1) One lithium battery was enclosed, it's chargeable by a PS3 Controller Charger and make sure the power switch is in "OFF" position.
- 2) Remove the USB receiver that is attached to the bottom of the controller and plug it into one of the free ports of your PLAYSTATION 3
- 3) USB receiver LED will flash rapidly while looking for positive connection with the controller. USB receiver light will light up solid when the connection is established
- 4) Place the power switch is in "ON" position
- 5) Press the "HOME" button, the controller will be automatically assigned a player number. (you can change the controller player number by pressing and holding the HOME button and then changing the player number from the PS3 menu – refer to your console manual for more information
- 6) The battery of the controller is low when its LED start flashing.

Power Save Mode:

Controller will go into Power Save Mode after 3 (three) minutes of inactivity. You need to press the START button to turn it back to the ACTIVE mode

Important Notice

1. Do not place different types or capacities of battery together.
2. Recommended user age range 12+.
3. Adult supervision is necessary when controller is used by child

CAUTION:

Changes or modifications to this equipment not expressly approved by the manufacturer could void the users authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID for Controller: X5B-PL6310 FCC ID for Dongle: X5B-BB6308C

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2010 Performance Designed Products LLC. All rights reserved. PDP and AFTERGLOW™ are trademarks of Performance Designed Products LLC. PlayStation 3® is a registered trademark of Sony Computer Entertainment, Inc. This product is not designed, manufactured, sponsored or endorsed by Sony Computer Entertainment.

Please keep this information for future reference.