

Thank you for purchasing wireless controller for the PLAYSTATION 3 video game system.

**Contents:**

- 1 Wireless Controller for PS3
- 1 USB Dongle (found attached to the controller)
- 1 USB Cable
- 1 Manual

**Set up:**

- 1) Remove the USB receiver that is attached to the bottom of the controller and plug it into one of the free ports of your PLAYSTATION 3
- 2) USB receiver LED will flash rapidly while looking for positive connection with the controller. USB receiver light will light up solid when the connection is established
- 3) Place the power switch is in “ON” position
- 4) Press the “HOME” button, the controller will be automatically assigned a player number. (you can change the controller player number by pressing and holding the HOME button and then changing the player number from the PS3 menu – refer to your console manual for more information
- 5) The battery of the controller is low when its LED start flashing.

**Power Save Mode:**

Controller will go into Power Save Mode after 3 (three) minutes of inactivity. You need to press the START button to turn it back to the ACTIVE mode

**Important Notice**

1. Recommended user age range 14+.
2. Adult supervision is necessary when controller is used by child

**CAUTION:**

Changes or modifications to this equipment not expressly approved by the manufacturer could void the users authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Controller FCC ID: X5B-PL6423 IC: 8814A-PL6423

Dongle FCC ID: X5B-PL6423A IC: 8814A-PL6423A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### INDUSTRY CANADA CONFORMITY

This device has been tested and found to comply with the limits specified in RSS-210. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This Class [B] digital apparatus complies with Canadian ICES-003.

#### DECLARATION DE CONFORMITE D'INDUSTRIE CANADA

Ce périphérique a été testé et reconnu conforme aux limites spécifiées dans RSS-210. Son utilisation est soumise aux deux conditions suivantes : (1) il ne doit pas provoquer d'interférences gênantes et (2) il doit tolérer les interférences reçues, notamment celles susceptibles d'en perturber le fonctionnement.

Cet appareil numérique de classe [B] est conforme à la norme canadienne ICES-003.

© 2010 Performance Designed Products LLC. All rights reserved. PDP and AFTERGLOW™ are trademarks of Performance Designed Products LLC. PlayStation 3® is a registered trademark of Sony Computer Entertainment, Inc. This product is not designed, manufactured, sponsored or endorsed by Sony Computer Entertainment.

Please keep this information for future reference.