

Disney  
**TRON**  
LEGACY  
COLLECTOR'S EDITION CONTROLLER

 


Thank you for purchasing the official Collector's Edition TRON remote controller for the Wii®. You are now ready to dominate the Cyber World.

### CONTENTS

- 1 TRON Remote Controller for the Wii®
- 1 TRON Remote Controller Wrist Strap
- 1 Manual


### TRON REMOTE CONTROLLER FOR THE WII® LAYOUT

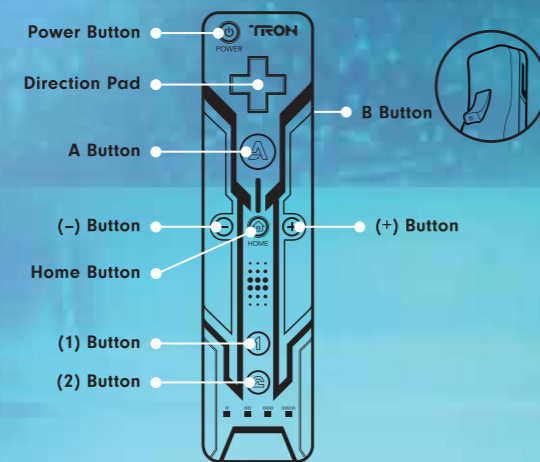


**CAUTION** - Use the Wrist Strap - Wii gameplay with the TRON Remote Controller for the Wii® can involve rapid or vigorous motion. **You should always** use the enclosed wrist strap during gameplay to prevent losing your grip on the TRON Remote Controller for the Wii®, which can cause damage to the remote controller and/or surrounding objects, or cause injury to people and pets.

### INSTALLING THE BATTERIES

 **1** Remove the battery cover on the back of the TRON remote controller and insert two AA batteries using the plus (+) and minus (-) guides in the TRON remote controller's battery compartment to insert the batteries in the correct direction.

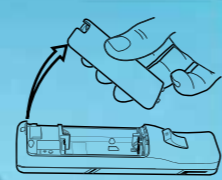

**2** Replace the battery cover.

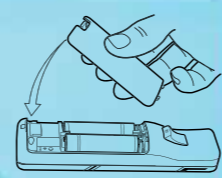


#### CAUTION:



The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modifications could void the user authority to operate equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 —Reorient or relocate the receiving antenna.  
 —Increase the separation between the equipment and receiver.  
 —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 —Consult the dealer or an experienced radio/TV technician for help.  
 To assure continued compliance, any changes or modifications not expressly approved by the Party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices.)

### USING THE TRON REMOTE CONTROLLER FOR THE WII®

**1** The TRON remote controller for the Wii is designed to work with the Nintendo Wii® system. The TRON controller for the Wii must be synced to the Nintendo Wii® system in order to function.

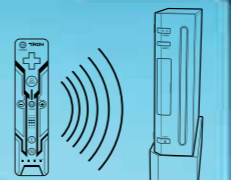


**2** First, remove the battery door from the TRON remote controller for the Wii® and insert two (2) AA batteries into the compartment according to the battery orientation instructions engraved in the battery compartment. (see above "Installing the Batteries")

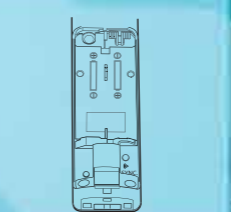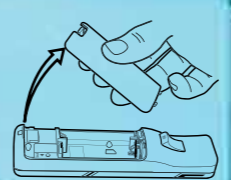


This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and  
 (2) This device must accept any interference received, including interference that may cause undesired operation of the device.


**3** Next, open the small door on the front of your Nintendo Wii® system. While the Wii is powered ON, press the red "Sync" button within.

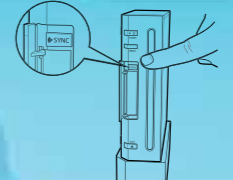


**4** Now, press the red "Sync" button in the TRON remote controller for the Wii's battery compartment. The four player-indicator LEDs on the TRON remote controller for the Wii® will flash while communication takes place.

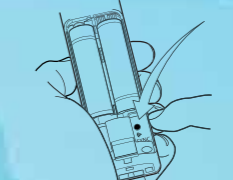


**5** A sync between the TRON remote controller for the Wii® and the Nintendo Wii® System will be confirmed when the player-indicator lights cease flashing and are replaced by a single glowing player-indicator light.

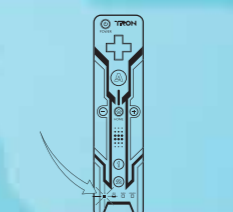

**6** Replace the battery door on the TRON remote controller for the Wii®.

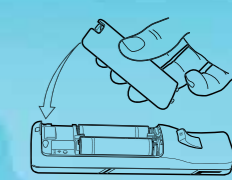

**7** Before play, always use the wrist strap for the TRON remote controller for the Wii® and ensure that it is tightened securely around your wrist.

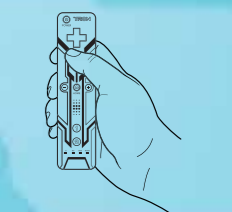

© 2010 Performance Designed Products LLC. All rights reserved. PDP is a trademark of Performance Designed Products LLC. Wii is a registered trademark of Nintendo of America, Inc. This product is not designed, manufactured, sponsored or endorsed by Nintendo.  
 © 2010 Disney.

2 year limited warranty. See [www.pdp.com](http://www.pdp.com) for details.

**pdp** PERFORMANCE DESIGNED PRODUCTS® 1840 East 27th Street Vernon, CA 90058 USA CBX II - 382 - 390 Midsummer Blvd., Milton Keynes, Buckinghamshire MK9 2RG UK

For technical questions please visit [www.pdp.com](http://www.pdp.com) or call: 1-800-331-3844 (USA ONLY). Please keep this information for future reference.

Disney  
**TRON**  
LEGACY  
L'ÉDITION OFFICIELLE POUR COLLECTIONNEURS DE LA MANETTE




Merci d'avoir acheté l'édition officielle pour collectionneurs de la manette à distance TRON pour Wii®. Vous êtes désormais prêt à dominer le cybermonde.

### CONTENU

 - 1 Manette à distance TRON pour Wii®
- 1 Dragonne pour manette à distance TRON
- 1 Manuel


### PRÉSENTATION DE LA MANETTE À DISTANCE TRON POUR WII®

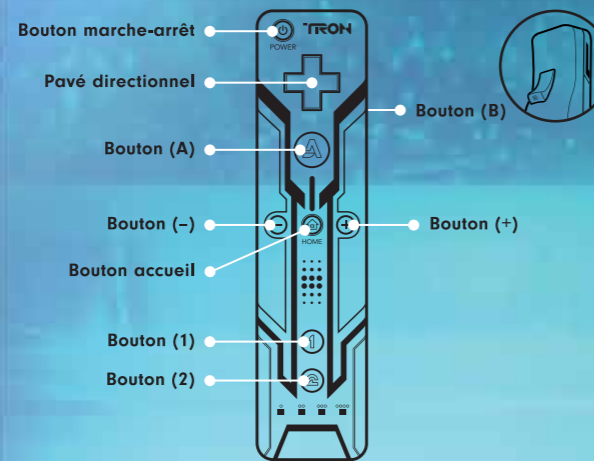

**ATTENTION** - Utilisez la dragonne - Les jeux vidéo Wii avec la manette à distance TRON pour Wii peuvent faire l'objet de mouvements rapides et puissants. Vous devez **toujours** utiliser la dragonne incluse pendant le jeu, pour éviter que la manette à distance TRON pour Wii ne vous échappe, ce qui pourrait l'endommager ainsi que les objets environnants ou être source de blessures pour les personnes et les animaux.

### INSTALLATION DES PILES

**1** Retirez le couvercle des piles au dos de la manette à distance TRON et insérez deux piles AA en utilisant les signes (+) et (-) à l'intérieur du compartiment des piles de la manette à distance TRON pour insérer les piles dans le bon sens.

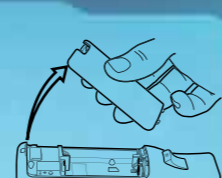

**2** Remettez le couvercle du compartiment des piles en place.





### UTILISATION DE LA MANETTE À DISTANCE TRON


**1** La manette à distance TRON pour Wii est conçue pour fonctionner avec le système Wii® de Nintendo. La manette TRON pour Wii® doit être synchronisée avec le système Wii® de Nintendo pour pouvoir fonctionner.




**2** Tout d'abord, ouvrez le couvercle des piles de la manette à distance TRON et insérez 2 piles AA dans le compartiment en les orientant par référence aux signes gravés dans le compartiment des piles (voir ci-dessus "Installation des piles.")

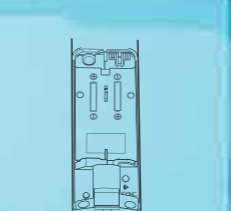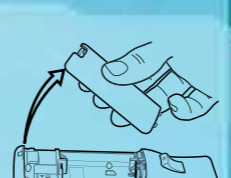


**3** Ensuite, ouvrez le petit couvercle sur le devant du système Wii® de Nintendo. Quand la Wii® est mise en marche (ON), appuyez sur le bouton rouge de synchronisation (Sync).

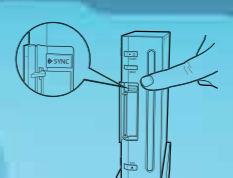


**4** Puis, appuyez sur le bouton rouge de synchronisation (Sync) dans le compartiment des piles de la manette à distance TRON pour Wii®. Les quatre témoins DEL des joueurs de la manette à distance TRON pour Wii® clignoteront pendant que la liaison s'effectue.

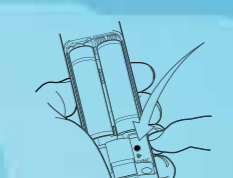

**5** La synchronisation entre la manette à distance TRON pour Wii® et le système Wii® de Nintendo sera confirmée quand les témoins des joueurs cesseront de clignoter et seront remplacés par la DEL d'un joueur allumée en continu.

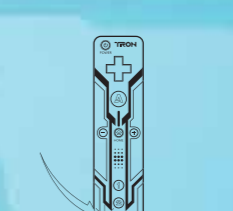


**6** Remettez le couvercle du compartiment des piles de la manette à distance TRON pour Wii®.

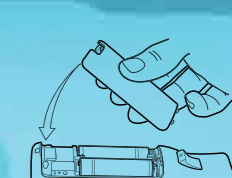

**7** Avant de jouer, utilisez toujours la dragonne pour la manette à distance TRON pour Wii® et vérifiez qu'elle est serrée de façon sécuritaire autour de votre poignet.



**8** Vous êtes prêt à jouer.

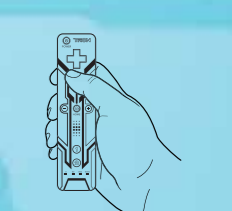

#### AVIS

FCC ID : X5B-PL7686  
 Cet appareil est conforme à l'article 15 du règlement de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :  
 1) Ce dispositif ne doit pas causer d'interférences préjudiciables, et  
 2) Il ne doit accepter aucune interférence reçue, y compris celles risquant d'engendrer un fonctionnement indésirable.

© 2010 Performance Designed Products LLC. All rights reserved. PDP is a trademark of Performance Designed Products LLC. Wii is a registered trademark of Nintendo of America, Inc. This product is not designed, manufactured, sponsored or endorsed by Nintendo.  
 © 2010 Disney.

Garantie limitée de 2 ans. Voir [www.pdp.com](http://www.pdp.com) pour plus de détails.

**pdp** PERFORMANCE DESIGNED PRODUCTS® 1840 East 27th Street Vernon, CA 90058 USA CBX II - 382 - 390 Midsummer Blvd., Milton Keynes, Buckinghamshire MK9 2RG UK

Pour toute question technique allez sur le site [www.pdp.com](http://www.pdp.com) ou appelez le : 1-800-331-3844 (ÉTATS-UNIS UNIQUEMENT). Veuillez conserver cette information pour toute référence ultérieure.